



313A

313A TRACKING OSCILLATOR

OPERATING AND SERVICE MANUAL

HEWLETT  PACKARD



CERTIFICATION

The Hewlett-Packard Company certifies that this instrument was thoroughly tested and inspected and found to meet its published specifications when it was shipped from the factory. The Hewlett-Packard Company further certifies that its calibration measurements are traceable to the U.S. National Bureau of Standards to the extent allowed by the Bureau's calibration facility.

WARRANTY AND ASSISTANCE

All Hewlett-Packard products are warranted against defects in materials and workmanship. This warranty applies for one year from the date of delivery, or, in the case of certain major components listed in the operating manual, for the specified period. We will repair or replace products which prove to be defective during the warranty period. No other warranty is expressed or implied. We are not liable for consequential damages.

For any assistance contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.



OPERATING AND SERVICE MANUAL

(HP PART NO. 00313-90001)

MODEL 313A
TRACKING OSCILLATOR

SERIALS PREFIXED: 709-

Copyright Hewlett-Packard Company 1967
P. O. Box 301, Loveland, Colorado, 80537 U. S. A.

TABLE OF CONTENTS

Section	Page	Section	Page
I GENERAL INFORMATION	1-1	V MAINTENANCE (Cont'd)	5-1
1-1. Introduction	1-1	5-6. Factory Selected Values	5-1
1-4. Accessory Equipment Supplied	1-1	5-8. Performance Checks	5-1
1-6. Instrument and Manual Identification	1-1	5-10. Dial Accuracy Check	5-1
Section	Page	5-11. Output Monitor Check	5-1
II INSTALLATION	2-1	5-12. Meter Expand and Tracking Check	5-1
2-1. Inspection	2-1	5-13. Output Frequency Response Check	5-4
2-3. Power Requirements	2-1	5-14. Attenuator Accuracy Check	5-5
2-5. Three-Conductor Power Cable	2-1	5-15. Non-Harmonic Distortion Check	5-7
2-8. Installation	2-1	5-16. Harmonic Distortion Check	5-8
2-10. Rack/Bench Installation	2-1	5-17. Adjustment and Calibration Procedure	5-8
2-12. Repackaging for Shipment	2-1	5-19. Cover Removal	5-11
Section	Page	5-22. Power Supply Voltage Adjustment	5-11
III OPERATING INSTRUCTIONS	3-1	5-23. Internal Adjustments	5-11
3-1. Introduction	3-1	5-24. Output Calibration	5-11
3-4. Controls and Indicators	3-1	5-25. Frequency Dial Calibration	5-12
3-6. Meter Mechanical Zero	3-1	5-26. Non-Harmonic Distortion Adjustment	5-12
3-8. Turn-On Procedure	3-1	5-27. Meter Expand and Tracking	5-13
3-9. Operation	3-1	5-28. Frequency Response Adjustment	5-13
3-12. Negative Recorder Input	3-2	5-29. Troubleshooting	5-14
Section	Page	5-32. Procedure	5-14
IV THEORY OF OPERATION	4-1	Section	Page
4-1. General Description	4-1	VI REPLACEABLE PARTS	6-1
4-6. Circuit Description	4-1	6-1. Introduction	6-1
4-8. Power Supply (A1)	4-1	6-4. Ordering Information	6-1
4-12. Local Oscillator (A12)	4-1	6-6. Non-Listed Parts	6-1
4-16. Crystal Oscillator (A4)	4-1	Section	Page
4-19. Broadband Amplifier (A11)	4-2	VII CIRCUIT DIAGRAMS	7-1
4-24. Delta Oscillator (A2)	4-2	7-1. Introduction	7-1
4-27. Buffer Amplifier (A10)	4-2	7-3. Block Diagram	7-1
4-30. Single Sideband Generator (A9)	4-2	7-5. Functional Diagram	7-1
4-35. AGC Amplifier (A5)	4-3	7-9. Schematic Diagrams	7-1
4-39. Mixer (A6)	4-3	Appendix	
4-42. Low Pass Filter (A7)	4-3	A CODE LIST OF MANUFACTURERS	
4-44. Power Amplifier (P/O A8)	4-3	B SALES AND SERVICE OFFICES	
4-48. Average Detector (P/O A8)	4-4	C MANUAL BACKDATING CHANGES	
4-50. Attenuators (A13, A14 and A15)	4-4		
4-53. Meter Expand Amplifier (P/O A3)	4-4		
4-57. AGC Control Amplifier (P/O A3)	4-4		
Section	Page		
V MAINTENANCE	5-1		
5-1. Introduction	5-1		
5-4. Meter Mechanical Zero	5-1		

LIST OF TABLES

Number	Page	Number	Page
1-1. Specifications	1-1	5-3. 1 dB Step Attenuator Check	5-6
1-2. Accessory Equipment Supplied	1-1	5-4. 0.1 dB Step Attenuator Check	5-6
5-1. Required Test Equipment and Accessories	5-2	5-5. Area Troubleshooting	5-15
5-2. 10 dB Step Attenuator Check	5-6	6-1. Replaceable Parts	6-6

LIST OF ILLUSTRATIONS

Number	Page	Number	Page
1-1. Model 313A Tracking Oscillator	1-0	7-4. Power Supply (A1) Schematic and Component Location Diagram . .	7-9/7-10
3-1. Location of Front and Rear Panel Controls, Indicators and Connectors .	3-2	7-5. Local Oscillator (A12) Buffer Amplifier (A11) Schematic and Component Location Diagrams . .	7-11/7-12
4-1. Single Sideband Generator A9 Simplified Schematic	4-3	7-6. Buffer Amplifier (A10), Single Sideband Generator (A9), Delta Oscillator (A2) Crystal Oscil- lator (A4) Schematic and Component Location Diagram . .	7-13/7-14
5-1. Meter Expand and Tracking Test Setup .	5-3	7-7. AGC Amplifier (A5), Mixer (A6) Low Pass Filter (A7) Schematic and Component Location Diagrams	7-15/7-16
5-2. Output Frequency Response Test Setup .	5-4	7-8. Power Amplifier (P/O A8), 10 dB Pad (P/O A8), 10 dB Step Attenuator (A13), 1 dB Step Attenuator (A14) Schematic and Component Location Diagrams	7-17/7-18
5-3. Attenuator Accuracy Test Setup	5-5	7-9. Average Detector (P/O A8), AGC Amplifier (P/O A3), Meter Ex- pand Amplifier (P/O A3), 0.1 dB Step Attenuator Schematic and Component Location Diagrams . .	7-19/7-20
5-4. Non-Harmonic Distortion Test Setup .	5-7		
5-5. Harmonic Distortion Test Setup	5-8		
5-6. Component Location, Top View	5-9		
5-7. Component Location, Bottom View . .	5-10		
5-8. Area Troubleshooting	5-15		
5-9. AGC Substitution Test Setup	5-15		
5-10. Troubleshooting Tree	5-16		
6-1. Attaching Hardware	6-2		
6-2. Chassis and Cover Component Identification	6-3		
6-3. Mechanical Parts Location, Bottom View	6-4		
6-4. Mechanical Parts Location, Top View.	6-5		
7-1. 313A Block Diagram	7-3/7-4		
7-2. 313A-312A Interconnecting Block Diagram	7-5/7-6		
7-3. 313A Functional Diagram	7-7/7-8		



Figure 1-1. Model 313A Tracking Oscillator

Table 1-1. Specifications

FREQUENCY RANGE:

As tracking oscillator: Same as 312A (10 kHz to 18 MHz) or H01-312A and H05-312A (10 kHz to 22 MHz).

As signal source: 10 kHz to 22 MHz in one band, continuous tuning.

FREQUENCY ACCURACY:

As tracking oscillator: $35 \text{ Hz} \pm 4 \text{ Hz}$ above 312A tuning.

As signal source: $\pm 1\%$ of maximum dial setting from 10 kHz to 2 MHz $\pm 3\%$ of maximum dial setting from 2 to 8 MHz; $\pm 5\%$ of maximum dial setting from 8 to 22 MHz.

FREQUENCY STABILITY:

As tracking oscillator: Same as 312A time base.

As signal source: Short term (5 min.) drift $< 1 \text{ kHz}$ in stable environment after warmup.

FREQUENCY RESPONSE: $\pm 0.1 \text{ dB}$ 10 kHz to 22 MHz.

AMPLITUDE STABILITY: $\pm 0.1 \text{ dB}$ for 90 days (0 to 55°C).

METER MODE:

312A Expand: Meter expands any 2 dB range of 312A meter indication from -7 to $+3 \text{ dB}$ using 312A recorder output. Meter range, -1 to $+1 \text{ dB}$; tracking error $+0.05 \text{ dB}$ over full 2 dB range.

MAXIMUM OUTPUT: 0 or $+10 \text{ dBm} \pm 0.1 \text{ dB}$, selectable at front panel.

OUTPUT ATTENUATOR: Three-section attenuator provides 0 to 99.9 dB attenuation in 0.1 dB steps.

ATTENUATOR ACCURACY:

0.9 dB section (0.1 dB steps): $\pm 0.02 \text{ dB}$.

9 dB section (1 dB steps): $\pm 0.1 \text{ dB}$.

90 dB section (10 dB steps): $\pm 0.1 \text{ dB}$ to 50 dB, $\pm 0.2 \text{ dB}$ to 90 dB.

RECORDER OUTPUT: 0.3 V for full scale. Output impedance 1 K ohm.

OUTPUT IMPEDANCE: 75Ω unbalanced (50Ω optional).

OUTPUT CONNECTOR: BNC female.


HARMONIC DISTORTION: More than 34 dB below fundamental.

NON-HARMONIC DISTORTION:

As tracking oscillator: More than 40 dB below fundamental.

As signal source: More than 50 dB below fundamental.

POWER: 115 or 230 V $\pm 10\%$, 50 to 1000 Hz, 30 W maximum.

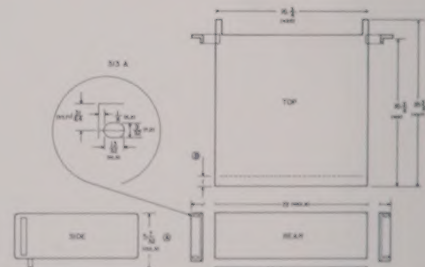DIMENSIONS:

NOTES:
 ① TOE HOOK HEIGHT (INCLUDING PULLER STOPS) FOR CASKET HEIGHT INCLUDING FEET AND 1/2 TO DIA. HOOK HEIGHT
 ② REAR MOUNT FEET
 DIMENSIONS IN INCHES AND MILLIMETERS

SECTION I

GENERAL INFORMATION

1-1. INTRODUCTION.

1-2. The Hewlett-Packard Model 313A Tracking Oscillator complements the Hewlett-Packard Model 312A Wave Analyzer in making system gain measurements, distortion checks, etc. The 313A has two modes of operation, a TRACK 312A mode and an INTERNAL mode. When used in the TRACK 312A mode, the 312A utilizes the 30 MHz Crystal Oscillator output and the Local Oscillator output of the 312A to provide output levels from -99.9 dB to +10 dBm in 0.1 dB steps and a frequency range between 10 kHz and 18 MHz. (10 kHz-22 MHz with H01-312A). When used in the INTERNAL mode, the 313A utilizes an internal Local Oscillator and 30 MHz Crystal Oscillator to generate output levels from -99.9 dB to +10 dBm in 0.1 dB steps and a frequency range between 10 kHz and 22 MHz. Table 1-1 lists the specifications for the 313A.

1-3. A special feature of the 313A is the Meter Expand function. When used in the Meter Expand function, the RECORDER OUTPUT of the 312A can be displayed on the 313A meter as 2 dB full scale. Any 2 dB between -7 dB and +3 dB on the 312A meter can be selected with 0.02 dB resolution on the 313A meter. The 313A also provides a RECORDER OUTPUT so that external instruments can be used to monitor the output.

1-4. ACCESSORY EQUIPMENT SUPPLIED.

1-5. The accessory equipment supplied with the 313A is listed in Table 1-2.

Table 1-2. Accessory Equipment Supplied

-hp- Part No.	Quantity	Description
11086A	3	Accessory Cables, 24"
8120-0078	1	Power Cord
5060-4940	1	15 Pin Extender Board
5060-0775	1	Rack Mounting Kit

1-6. INSTRUMENT AND MANUAL IDENTIFICATION.

1-7. Hewlett-Packard uses a two-section eight-digit serial number (000-00000). If the first three digits of the serial number on your instrument do not agree with those on the title page of this manual, change sheets supplied with the manual or backdating information in the back of this manual will define differences between your instrument and the Model 313A described in this manual. If the serial number is preceded by a letter, the instrument was manufactured outside the United States.

SECTION II

INSTALLATION

2-1. INSPECTION.

2-2. This instrument was carefully inspected both mechanically and electrically before shipment. It should be physically free of marks or scratches and in perfect electrical order upon receipt. To confirm this, the instrument should be inspected for physical damage in transit. Also, check for supplied accessories, and test the electrical performance of the instrument using the procedure outlined in Paragraph 5-8. If there is damage or deficiency, see the warranty on the inside front cover of this manual.

2-3. POWER REQUIREMENTS.

2-4. The Model 313A will operate from either 115 or 230 Vac, 50 - 1000 Hz. The instrument can be easily converted from 115 or 230 volt operation by changing the position of the slide switch located on the rear panel, so that the designation appearing on the switch matches the nominal voltage of the power source. A 0.3 ampere, slow-blow fuse is used for 115 volt and 0.15 ampere, slow-blow for 230 volt.

2-5. THREE-CONDUCTOR POWER CABLE.

2-6. To protect operating personnel, the National Electrical Manufacturers' Association (NEMA) recommends that the instrument panel and cabinet be grounded. This instrument is equipped with a three-conductor power cable which, when plugged into an appropriate receptacle, grounds the instrument. The offset pin on the power cable three-prong connector is the ground wire.

2-7. To preserve the protection feature when operating the instrument from a two-contact outlet, use a three-prong to two-prong adapter and connect the green pigtail on the adapter to ground.

2-8. INSTALLATION.

2-9. The -hp- Model 313A is fully transistorized; therefore no special cooling is required. However, the instrument should not be operated where the ambient temperature exceeds 55°C (131°F).

2-10. RACK/BENCH INSTALLATION.

2-11. The Model 313A is initially shipped as a bench-type instrument (unless ordered specifically as a rack type) with plastic feet and a tilt stand in place. Conversion to a rack-mounted instrument can be accomplished by using the rack mounting kit and instructions furnished with your instrument.

2-12. REPACKAGING FOR SHIPMENT.

2-13. The following is a general guide for repackaging for shipment. If you have any questions, contact your local -hp- Sales and Service Office. (See Appendix B for office locations.)

NOTE

If the instrument is to be shipped to Hewlett-Packard for service or repair, attach a tag to the instrument identifying the owner and indicating the service or repair to be accomplished; include the model number and full serial number of the instrument. In any correspondence, identify the instrument by model number, serial number and serial number prefix.

- a. Place instrument in original container if available. If original container is not available, a suitable one can be purchased from your nearest -hp- Sales and Service Office.

If original container is not used,

- b. Wrap instrument in heavy paper or plastic before placing in an inner container.
- c. Use plenty of packing material around all sides of instrument and protect panel faces with cardboard strips.
- d. Place instrument and inner container in a heavy carton or wooden box and seal with strong tape or metal bands.
- e. Mark shipping container with "Delicate Instrument," "Fragile" etc.

SECTION III

OPERATING INSTRUCTIONS

3-1. INTRODUCTION.

3-2. The Model 313A Tracking Oscillator has an INTERNAL mode of operation and a TRACK 312A mode of operation. In the INTERNAL mode of operation, the 313A Local Oscillator and Crystal Oscillator are used to generate output frequencies between 10 kHz and 22 MHz at levels between -99.9 dB and +10 dBm. In the TRACK 312A mode, the 313A Local Oscillator and Crystal Oscillator are disabled and these signals are replaced by inputs from the Model 312A. When the 312A signals are used, the 313A output level is still variable between -99.9 dB and +10 dBm but the frequency range is only from 10 kHz to 18 MHz. (10 kHz-22 MHz when used with H01-312A or H05-312A.

3-3. When the METER MODE switch is in the OUTPUT MONITOR position, the 313A front panel meter is used to indicate that the output of the 313A is calibrated, or it can be used in the 312A EXPAND position to display the 312A RECORDER OUTPUT on an expanded scale for increased resolution.

3-4. CONTROLS AND INDICATORS.

3-5. Figure 3-1 and Table 3-1 identifies and describes the function of all front and rear panel controls, connectors and indicators on the 313A.

3-6. METER MECHANICAL ZERO.

3-7. The meter should be mechanically zeroed before the 313A is used. To do this, insert some pointed object such as a toothpick or ball point pen into the recess on the adjustment wheel and adjust the meter until the needle rests directly over the -1.0 division marker.

3-8. TURN ON PROCEDURE.

- a. Before connecting the 313A to a power source, insure that the 115/230 Vac slide switch on the rear panel is in the appropriate position.
- b. Connect the 313A to the ac power source using the power cable supplied with the instrument.



WHEN THE MODEL 313A IS CONNECTED TO A POWER SOURCE, POWER IS AVAILABLE AT THE AUXILIARY POWER JACK ON THE REAR PANEL EVEN WHEN THE MODEL 313A IS TURNED OFF.

- c. Depress the LINE ON/OFF switch and note that the ON/OFF indicator lamp illuminates.

3-9. OPERATION.

3-10. To operate the 313A in the INTERNAL mode, proceed as follows:

- a. Place the OSCILLATOR MODE switch in the INTERNAL position. This energizes the internal Local Oscillator and Crystal Oscillator.
- b. Connect a 75 ohm load to the output jack.
- c. Place the METER MODE switch in the OUTPUT MONITOR position and note that the meter reads full scale on the CAL mark.

NOTE

A warmup time of 5 minutes should be allowed for the 313A circuits to stabilize. When the instrument is first turned on, the meter will read slightly above the CAL mark but will return to CAL after the required warmup time. If the meter does not read on the CAL mark ± 2 divisions after warmup, refer to Paragraph 5-17 for Adjustment and Calibration procedure.

- d. When the 313A is terminated in a 75 ohm load and the meter is reading directly on the CAL mark, the output level can be read directly from the attenuator dials if the MAX OUTPUT switch is in the 0 DBM position. When the MAX OUTPUT switch is in the +10 DBM position, +10 DBM must be added algebraically to the attenuator dial reading for a correct indication of output level.
- e. Tune the 313A to the desired frequency using the continuously variable frequency control (MHz).

3-11. To operate the 313A in the TRACK 312A mode, proceed as follows:

- a. Connect the LOCAL OSCILLATOR OUTPUT and 30 MHz OUTPUT on the rear panel of the 312A to the LOCAL OSCILLATOR INPUT and 30 MHz INPUT on the rear panel of the 313A.
- b. Connect the output of the 313A through a 75 Ω cable and a 75 Ω feedthru termination (at the 312A end of the cable) to the 312A input.
- c. Place the 313A OSCILLATOR MODE switch to TRACK 312A and set the attenuator to 00.0 dB. Set the MAX OUTPUT switch to 0 dBm and the METER MODE switch to OUTPUT MONITOR.

- d. Set the 312A REFERENCE LEVEL to 0 dBm and the AMPLITUDE RANGE to 0 dB. Set the BAL/UNBAL switch to UNBAL and the INPUT MODE to BRIDGED, 75. Set the RECEIVER MODE switch to AM.
- e. The 312A meter should now indicate directly over the CAL mark and the 312A meter should indicate 0 dBm.
- f. To expand the 312A meter indication, connect the 312A RECORDER OUTPUT to the 313A RECORDER INPUT and change the 313A METER MODE switch to 312A EXPAND.

Adjust the SCALE OFFSET for a zero center scale reference. The 313A can expand any 312A meter indication between -7 dBm and +3 dBm.

3-12. NEGATIVE RECORDER INPUT.

3-13. If the 313A Meter Expand Amplifier is to be used with an instrument having a negative recorder output voltage, a minor modification must be made. To perform this modification, disconnect the wires connected to J10 pin 14 and J10 pin 9. Connect the wire removed from pin 14 to pin 9 and connect the wire removed from pin 9 to pin 14.

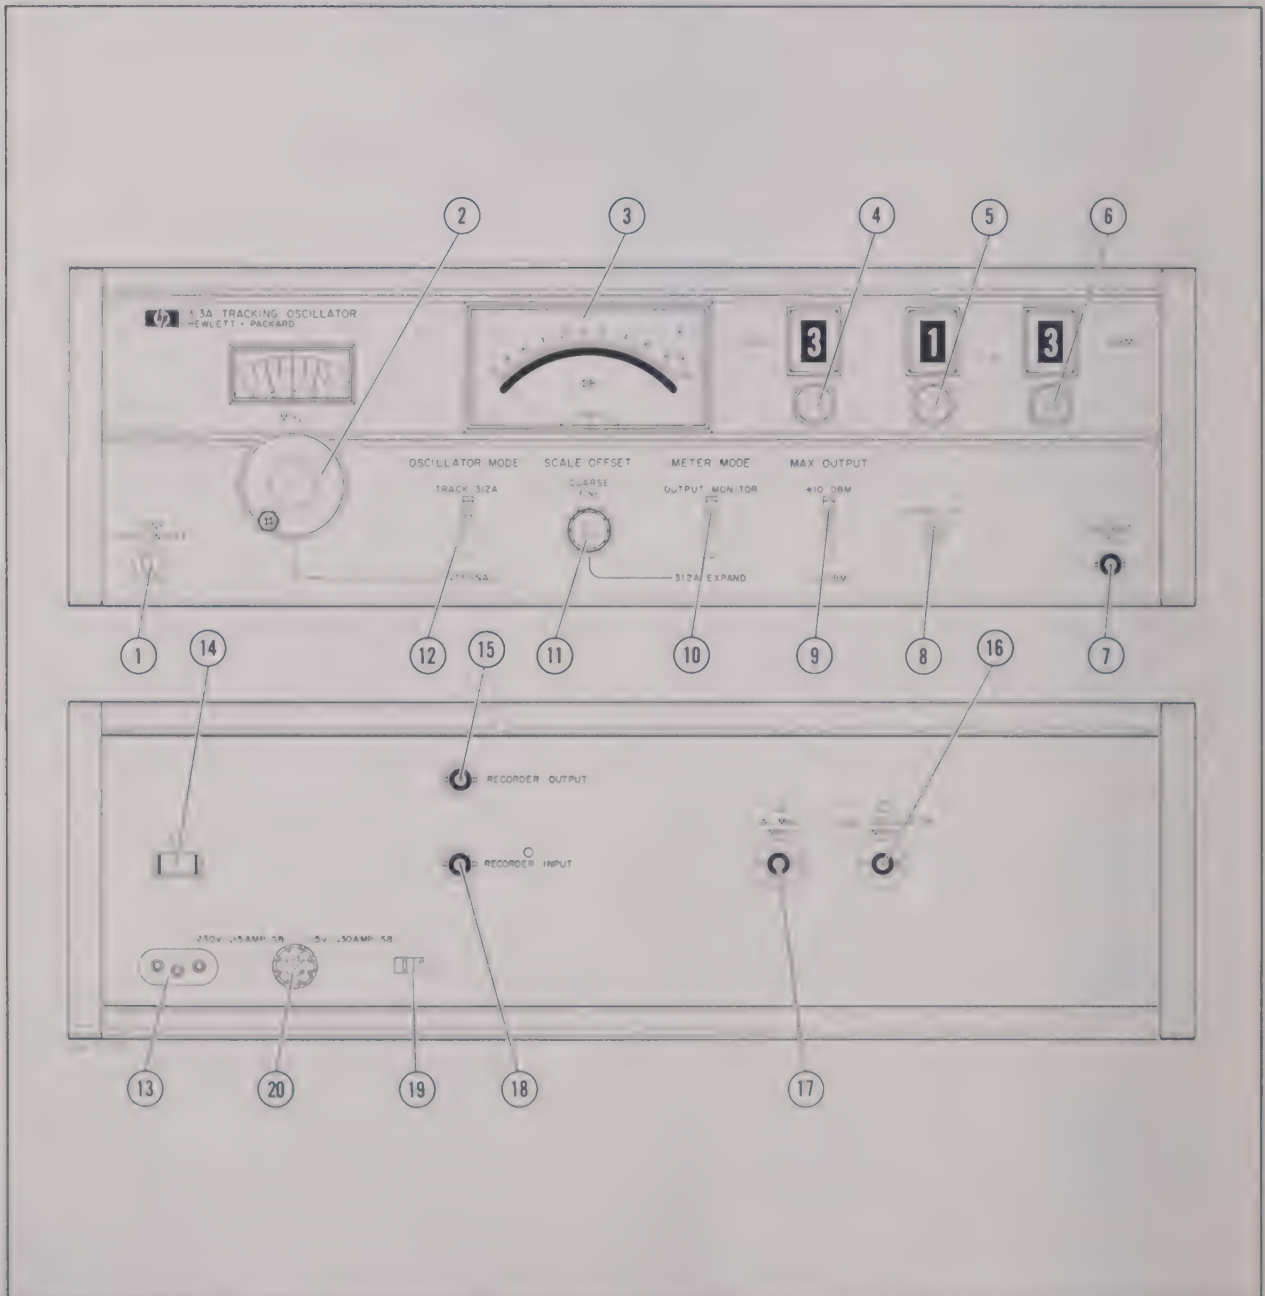


Figure 3-1. Location of Front and Rear Panel Controls, Indicators and Connectors

Table 3-1. Front and Rear Panel Controls, Indicators and Connectors

- ① Line ON/OFF Switch: When the instrument is connected to a power source and the switch is depressed, power is applied to the instrument and the lamp will illuminate indicating an ON condition.
- ② Frequency Selector: Selects output frequencies between 10 kHz and 22 MHz when operated in the INTERNAL mode.
- ③ Meter: Reads on the CAL mark in the OUTPUT MONITOR position of the METER MODE Switch, indicating that the 313A output level is calibrated or displays the 312A RECORDER OUTPUT on an expanded scale in the 312A EXPAND position of the METER MODE switch.
- ④ 10 DB Step Attenuator: Selects output attenuation from 0 to 90 dB in 10 dB steps.
- ⑤ 1 DB Step Attenuator: Selects output attenuation from 0 to 9 dB in 1 dB steps.
- ⑥ .1 DB Step Attenuator: Selects output attenuation from 0 to 0.9 dB in 0.1 dB steps.
- ⑦ Output Connector: Provides a 75 ohm unbalanced output (50 ohm unbalanced, Option 01).
- ⑧ OUTPUT CAL: Used to adjust the meter to indicate CAL.
- ⑨ MAX OUTPUT Switch: In the 0 DBM position, the output level can be read directly from the attenuator dials. In the +10 DBM position, the output level is increased by +10 DBM. This +10 DBM increase in output level must be algebraically added to the attenuator dial reading for a correct indication of output level.
- ⑩ METER MODE Switch: In the 312A EXPAND position, the RECORDER OUTPUT of the 312A is displayed on the 313A meter. In the OUTPUT MONITOR position, the 313A meter reads CAL indicating that the output of the 313A is calibrated. The output of the 313A can then be read directly in DBM from the attenuator dials provided the MAX OUTPUT switch is in the 0 DBM position.
- ⑪ SCALE OFFSET: Adjusts the meter for center scale reference when making an expanded meter reading. Both a Coarse and Fine adjustment are provided.
- ⑫ OSCILLATOR MODE Switch: In the TRACK 312A mode, the 313A Local Oscillator and Crystal Oscillator are disabled and the 312A outputs are selected to be used in the 313A. In the INTERNAL mode, the Model 313A Local Oscillator and Crystal Oscillator are activated.
- ⑬ Input Power Receptacle: Connects 115/230 volts to the instrument.
- ⑭ Output Power Receptacle. Provides 115/230 volts to auxiliary equipment when the 313A is connected to an ac source. This receptacle is active even when the 313A is turned off.
- ⑮ RECORDER OUTPUT Connector: Provides a dc output proportional to the ac output signal. This output is provided so that it can be monitored by external equipments. Source resistance of this output is 1000 ohms.
- ⑯ LOCAL OSCILLATOR INPUT Connector: Accepts the 312A LOCAL OSCILLATOR output when the 313A is operated in the TRACK 312A mode.
- ⑰ 30 MHz INPUT Connector: Accepts the CRYSTAL OSCILLATOR output of the Model 312A when the Model 313A is operated in the TRACK 312A mode.
- ⑱ RECORDER INPUT: Accepts the RECORDER OUTPUT of the 312A for expansion on the 313A meter.
- ⑲ 115/230 Volt Switch: Selects either 115V or 230V primary ac input power.
- ⑳ Fuse (F1): A 0.3 A slow-blow fuse F1 protects the instrument from overload when used on 115 volt primary power. When used on 230 volts ac, fuse F1 is a 0.15A slow-blow fuse.

SECTION IV

THEORY OF OPERATION

4-1. GENERAL DESCRIPTION.

4-2. The Hewlett-Packard Model 313A TRACKING OSCILLATOR provides output levels from -99.9 dB to +10 dBm and an output frequency between 10 kHz and 22 MHz. Three front panel step attenuators provide 0 to 99.9 dB in 0.1 dB steps and a +10 dB increase in output level is available by means of the MAX OUTPUT switch. The 313A has an INTERNAL mode and a TRACK 312A mode of operation.

4-3. In the INTERNAL mode, the 313A Local Oscillator is activated and has a frequency range from 30 MHz to 52 MHz. The output of the Local Oscillator (A12) is mixed with a 30 MHz signal from the Crystal Oscillator A4. The output of Mixer A6 is the difference frequency, with a range between 0 and 22 MHz. This output is applied to the Low Pass Filter A7 where all frequencies above 22 MHz are attenuated. The Low Pass Filter output is coupled to Power Amplifier A8 where the signal is amplified and applied to the Output Attenuators and a Metering Circuit which monitors the output level. Additional attenuation is provided in 0.1 dB steps up to 0.9 dB by another step attenuator which controls the AGC voltage. The AGC voltage is applied to AGC Amplifier A5 which controls the 313A output level.

4-4. In the TRACK 312A mode of operation, the sequence is the same except that the 313A Local Oscillator and the 30 MHz Crystal Oscillator are disabled and external inputs from the 312A are substituted for these signals. The bandpass characteristics of the 312A are such that it is necessary to produce a frequency offset in the 313A output in order to keep the signal out of the 312A notch (See Figure 7-2). This 35 Hz offset is produced in the Single Sideband Generator A9 by mixing the 312A Crystal Oscillator output with a 35 Hz signal produced in the 313A.

4-5. The 313A has a Meter Expand Function which accepts an external input from the 312A RECORDER OUTPUT and expands the 312A meter reading for a 2 dB full scale (± 1 dB center scale) deflection for increased resolution.

4-6. CIRCUIT DESCRIPTION.

4-7. Refer to Figures 7-4 through 7-9 for the following discussions.

4-8. POWER SUPPLY (A1).

4-9. The power supply circuits in the 313A contain two regulated supplies which produce +20 volts and -20 volt outputs. Both supplies are identical except that the negative supply uses a reference diode and the positive supply utilizes the negative supply for its reference.

4-10. The +20 volt supply uses a conventional series type regulator. Transistor A1Q2 is the sensing element whose base is tied to a voltage divider between +20 volts and -20 volts. Any change in the +20 volt output is sensed by A1Q2, amplified and applied to the emitter of A1Q1. Since transistor A1Q1 controls the base current of Q1, this change will cause the conduction of Q1 to change in such a direction as to keep the +20 volt output constant. Feedback capacitor A1C1 further aids regulation by coupling any changes in the +20 volt output back to the junction of A1R2 and A1R3 to produce higher loop gain. Since the +20 volt supply is referenced to the -20 volt supply, any change in the -20 volt supply will also change the +20 volt output. If for example, the -20 volt output should change to -21 volts, the positive supply would change to +21 volts. Adjusting A1R15 varies both supplies.

4-11. The -20 volt supply is identical in operation to the +20 volt supply except that A1CR6 is used to hold the emitter of A1Q4 at a constant voltage.

4-12. LOCAL OSCILLATOR (A12).

4-13. The Local Oscillator function is to produce stable frequencies between 30 MHz and 52 MHz. The oscillator frequency is controlled by a front panel knob which varies tuning capacitor C5.

4-14. The Oscillator is a field effect transistor (FET) A12Q1 whose drain load is a tuned circuit consisting of L1, C5, A12C1 and A12C2. The signal is taken from the drain of A12Q1 and coupled to the gate of A12Q2 which serves as a buffer amplifier and to match the oscillator output to the input of the Broadband Amplifier A11. Feedback is provided through A12C6, A12R4, and A12C5. Diodes A12CR1 and A12CR2 serve to limit the amplitude of the feedback signal to 0.6 V p-p.

4-15. In the TRACK 312A mode, the oscillator is disabled by removing the B-voltage.

4-16. CRYSTAL OSCILLATOR (A4).

4-17. Crystal Oscillator A4 provides a 30 MHz signal through the AGC amplifier to the Mixer A6. The frequency of oscillations is controlled by A4Y1 which is a third overtone quartz crystal. Feedback is provided from the collector of A4Q1 through the crystal to the base of A4Q1. Collector circuit A4L2 and A4C4 form a 30 MHz tuned circuit. The output signal is coupled through A4R4 to the AGC Amplifier A5.

4-18. When the 313A is operated in the TRACK 312A mode, Crystal Oscillator A4 is disabled by removing B-voltage.

4-19. BROADBAND AMPLIFIER (A11).

4-20. Broadband Amplifier A11 consists of three stages of amplification and receives its input from one of two sources depending upon the position of the front panel OSCILLATOR MODE switch.

4-21. When the OSCILLATOR MODE switch is in the INTERNAL position, A11K1 is deenergized and the Model 313A Local Oscillator is coupled to the base of A11Q1. During the time that A11K1 is deenergized, A11K2 is energized and the External Oscillator Input is grounded.

4-22. When the 313A is operated in the TRACK 312A mode, A11K2 is deenergized and A11K1 is energized. During this time the ground is removed from the external LOCAL OSCILLATOR INPUT and the external signal is fed through A11K1 to the base of A11Q1. The 313A Local Oscillator is disabled during this time.

4-23. Amplifier A11Q1 has a 50Ω input impedance. Here the signal is amplified and coupled by A11C6 to the base of A11Q2 which has as its load, inductor A11L1 which helps shape the overall frequency response to the Broadband Amplifier. The signal is then coupled by A11C8 to emitter follower A11Q3 which has a low output impedance to match the input of Mixer A6.

4-24. DELTA OSCILLATOR (A2).

4-25. Delta Oscillator A2 is a phase shift oscillator which produces a 35 Hz signal to be used by the Single Sideband Generator. The frequency of oscillation is determined by A2C1 - A2R3 and A2C3 - A2R8. The reactances of A2C1 and A2C3 will be equal to the resistance of A2R3 and A2R8 respectively at the frequency of oscillation. Feedback is provided between the output of A2Q5 and the input of A2Q1.

4-26. Lamp A2DS1 is included to provide amplitude stability. If the amplitude of the signal across A2R12 should increase, the resistance of A2DS1 increases and reduces the gain of A2Q5 to keep the output amplitude constant. Two outputs are provided to the Single Sideband Generator, one at 0° and one at 90° .

4-27. BUFFER AMPLIFIER (A10).

4-28. Buffer Amplifier A10 provides isolation between the external 30 MHz INPUT and the Single Sideband Generator A9. When the 313A is operated in the TRACK 312A mode, the Buffer Amplifier is energized by applying B-voltage through the OSCILLATOR MODE switch located on the front panel.

4-29. Amplifier A10Q1 has a 50Ω input impedance and receives its input from a BNC connector J3 located on the rear panel of the 313A. The collector circuit of A10Q1 is tuned to 30 MHz and couples the signal to A10Q2 which is also tuned to 30 MHz. The output of A10Q2 goes to the Single Sideband Generator to be used as a switching signal.

4-30. SINGLE SIDEBAND GENERATOR (A9).

4-31. The function of the Single Sideband Generator is to mix the 30 MHz Crystal Oscillator frequency output of the Model 312A with a 35 Hz signal in the 313A. This mixing in the Single Sideband Generator produces a resultant frequency at 29.999965 MHz which is mixed with the Local Oscillator output of the Model 312A in Mixer A6. This 35 Hz offset is necessary because of the bandpass characteristics of the Model 312A. When making a closed loop test of an instrument, the output of the 313A is coupled to the device under test. The output of the device under test is then fed to the input of the 312A where it is mixed with a Local Oscillator frequency 30 MHz above the input signal frequency. This 30 MHz difference frequency falls into a notch in the 312A bandpass. Therefore, it is necessary to produce a slight offset in the 313A output so that this signal can be passed by the 312A.

4-32. Operation of the Single Sideband Generator can be best understood by referring to Figure 4-1. The 30 MHz Crystal Oscillator Input signal current from Buffer Amplifier A10 is phase advanced 45 degrees by capacitor A9C1 and is retarded 45 degrees by inductor A9L1. The signals at the primaries of A9T1 and A9T2 are thus phase shifted 90 degrees with respect to each other. The two inputs from the 35 Hz Delta Oscillator are also 90 degrees apart in order to satisfy the trigonometric identities shown in Figure 4-1. Assume that the top of A9T1 secondary is in its positive half cycle and the bottom of A9T1 is in its negative half cycle. Diodes A9CR1 and A9CR2 are reverse biased and no signal current flows. Terminal 2 of A9T3 is therefore an open circuit. When the 30 MHz switching signal reverses in phase, diodes A9CR1 and A9CR2 are now forward biased and signal current flows through transformer A9T1, A9CR2, A9R7 and A9CR1. Terminal 2 of A9T3 is now effectively grounded and the signal is induced into the secondary of A9T3. The operation of the remaining half of the Single Sideband Generator is identical to the first except that the switching signal at A9T2 is 90 degrees phase shifted with respect to the signal at A9T1.

4-33. The Single Sideband Generator A9 accomplishes multiplication of the 35 Hz Delta Oscillator frequency (f_Δ) by the 30 MHz switching signal (f_{sw}) as defined by the trigonometric functions.

$$\text{Mixer \#1: } (\sin f_{sw} t) \times (\sin f_\Delta t) = 1/2 \left[\cos (f_{sw} + f_\Delta) t - \cos (f_{sw} - f_\Delta) t \right]$$

$$\text{Mixer \#2: } (\cos f_{sw} t) \times (\cos f_\Delta t) = 1/2 \left[\cos (f_{sw} + f_\Delta) t + \cos (f_{sw} - f_\Delta) t \right]$$

4-34. The outputs of Mixer #1 and Mixer #2 are added algebraically in A9R10 for an output of $\cos (f_{sw} + f_\Delta) t$. The mixers are balanced so that the switching frequency (f_{sw}) does not appear in the output. Resistors A9R1 and A9R2 keep any reflections back into the primaries of A9T1 and A9T2 constant and make them appear purely resistive. Capacitors A9C2 and A9C3 are used to trim out any reactances that might be reflected back into the primaries of A9T1 and A9T2 respectively.

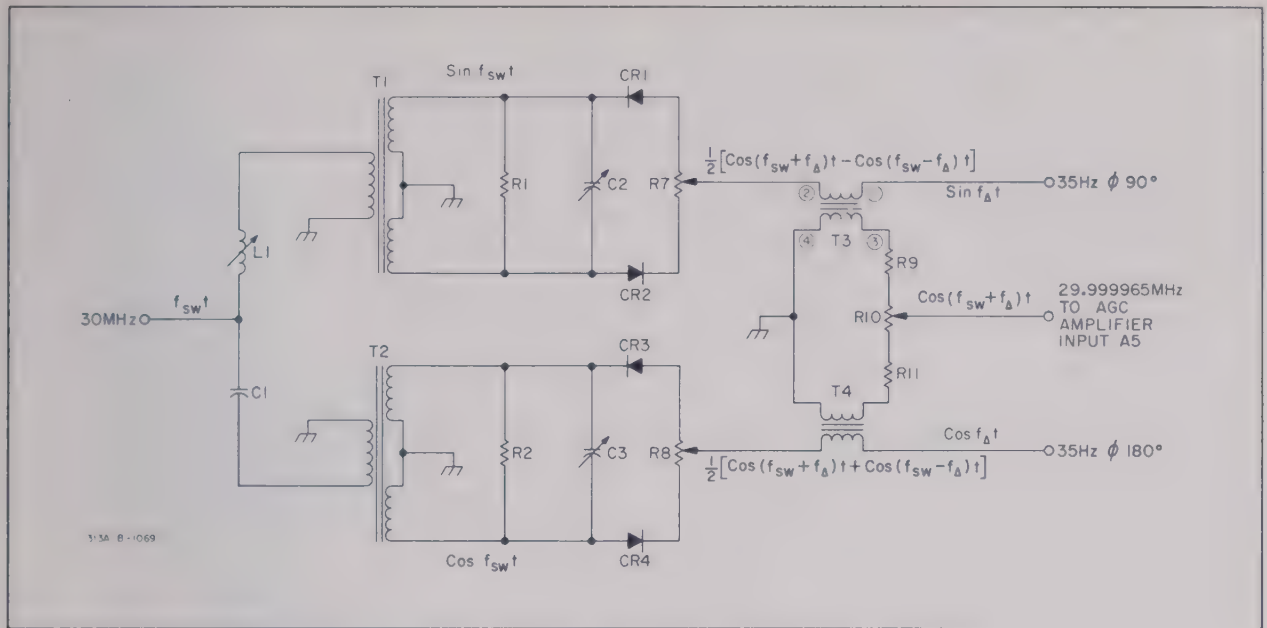


Figure 4-1. Single Sideband Generator A9 Simplified Schematic

4-35. AGC AMPLIFIER. (A5)

4-36. The AGC Amplifier receives its input from either the Crystal Oscillator A4 in the INTERNAL mode or from the Single Sideband Generator A9 in the TRACK 312A mode.

4-37. In the INTERNAL mode, the 30 MHz crystal controlled signal from A4 is coupled to the base of A5Q1 where it is amplified. The output of A5Q1 is then coupled to the AGC control circuit consisting of A5T1, A5C6, A5CR1, A5CR2 and A5T2. The AGC control circuit sets the signal amplitude depending upon the magnitude of the AGC control voltage. This control voltage is a bias for A5CR1 and A5CR2 which determines their conduction and thus the amount of attenuation of the signal through the diodes. Since the AGC circuit is a closed loop, any change in the 313A output amplitude will cause a corresponding change in the AGC control voltage by the AGC Control Amplifier A3. Thus the gain of AGC Amplifier A5 can be controlled by a dc voltage. This change in AGC voltage acts to keep the output level of the 313A constant.

4-38. In the TRACK 312A mode the input to the AGC Amplifier comes from the Single Sideband Generator A9 and the 30 MHz Crystal Oscillator A4 is disabled. This sideband signal is 29.999965 MHz which is the difference between the 35 Hz signal from the Delta Oscillator A2 and the 30 MHz Crystal Oscillator signal from the 312A.

4-39. MIXER (A6).

4-40. The Mixer A6 is a balanced modulator that receives one input from the Broadband Amplifier A11 and the other from the AGC Amplifier A5. The input from the Broadband Amplifier can vary from 30 MHz to 52 MHz depending upon the setting of the 313A front

panel frequency control. The input from the AGC Amplifier is 30 MHz which comes from Crystal Oscillator A4 when operated in the INTERNAL mode or from an external source when operated in the TRACK 312A mode.

4-41. The Mixer output contains both the sum and difference frequencies and since it is desirable to use the difference frequency, the output is coupled to Low Pass Filter A7 where all frequencies above 22 MHz are greatly attenuated.

4-42. LOW PASS FILTER (A7).

4-43. Low Pass Filter A7 is 13 pole Tchebycheff filter whose function is to pass all frequencies between dc and 22 MHz uniformly while attenuating all undesirable frequency components above 22 MHz. Sharp cutoff occurs at approximately 24 MHz in order to eliminate any unwanted harmonics and noise components. The output is coupled to Power Amplifier A8 for further amplification.

4-44. POWER AMPLIFIER (P/O A8).

4-45. The Power Amplifier is located on the Module A8 along with the 10 dB Attenuator pad and the Average Detector. The Power Amplifier consists of seven stages of amplification, A8Q1 through A8Q7 along with associated biasing transistors, A8Q8 through A8Q12. Emitter follower A8Q1 provides isolation between the Low Pass Filter output and the amplifier. Emitter follower A8Q7 provides isolation and impedance matching with the 10 dB pad and the input to the average detector.

4-46. Since it is desirable that the amplifier gain be as flat as possible over the 0-22 MHz range, negative feedback is provided in two different ways. The first

method provides negative feedback through resistors tied between the collectors of A8Q2 through A8Q6. Coils A8L1 and A8L2 are provided for high frequency shaping. The second method of feedback maintains constant amplifier gain by controlling the conduction level of transistors A8Q2 through A8Q6. Biasing transistors A8Q8 through A8Q12 will sense any change in the conduction level of A8Q2 through A8Q6 respectively and changes the dc bias on these transistors, thus restoring the collector voltage. The bases of all biasing transistors are tied together to a fixed voltage so that only changes in the signal amplifier collector voltage will determine conduction.

4-47. Emitter follower A8Q7 has two outputs, one goes to the Average Detector and the second output goes to a 10 dB attenuator pad which is controlled by a front panel switch marked MAX OUTPUT. When the switch is in the +10 DBM position, A8K1 is energized, shorting A8R45 and A8K2 is deenergized which removes ground from A8K46, thus providing a +10 DBM increase in the Model 313A output. This +10 DBM increase in output level must be algebraically added to the attenuator dial reading for a correct indication of output level. In the 0 DBM position of the switch, 10 dB of attenuation is inserted by energizing A8K2 and deenergizing A8K1.

4-48. AVERAGE DETECTOR (P/O A8).

4-49. The Average Detector receives its input from the Power Amplifier through A8R49 which is selected for an optimum loop gain. The output of emitter follower A8Q13 is then fed to A8Q14 which has a high output impedance so that maximum signal current will flow in diodes A8CR1 and A8CR2. Both capacitors A8C35 and A8C36 establish a positive potential at the diode junctions. An increase in signal amplitude to the detector will cause the charge on A8C36 to increase and the charge on A8C35 to decrease. This change is then coupled to the AGC loop which cancels any variations that might occur. Resistor A3R31 is used to adjust the output level. The output of the Average Detector goes to the AGC Differential Amplifier and to the Metering Circuit.

4-50. ATTENUATORS (A13, A14 and A15).

4-51. Attenuator A13 provides 0 to 90 dB attenuation by switching different combinations of the 60 dB, 30 dB, 20 dB and 10 dB attenuator pads. Attenuator A14 provides 0 to 9 dB attenuation by switching combinations of the 6 dB, 3 dB, 2 dB and 1 dB attenuator pads. These two attenuators are connected in series for a total range of 0 to 99 dB. A 25 Ω resistor is connected in series with the output of A14 to form a 75 Ω output.

4-52. Attenuator A15 works in conjunction with the AGC circuit to control the output of the 313A. This attenuator provides a shunt current path around A3Q1. This change in current through A3Q1 changes its collector voltage and thus the AGC voltage. The change in AGC voltage is coupled to AGC Amplifier A5 where its gain is controlled in accordance with the resistance values selected in the 0.1 dB Step Attenuator. The output of the 313A can be changed in 0.1 dB steps up to 0.9 dB by Attenuator A15.

4-53. METER EXPAND AMPLIFIER (P/O A3).

4-54. The purpose of the Meter Expand Amplifier is to use the RECORDER OUTPUT of the Model 312A and expand the reading on a 2 dB full scale meter movement so that better resolution can be obtained. The input to the Meter Expand Amplifier comes from a BNC type connector J5 on the rear panel and is coupled directly to A3Q9. Transistors A3Q9 and A3Q10 form a differential amplifier with high impedance A3Q11 acting as their constant current source. Transistors A3Q7 and A3Q8 amplify the signal and reference it to ground before being applied to the meter. Transistor A3Q12 is in parallel with meter M1 and is used for calibration. Conduction of A3Q12 is controlled by A3R31. Transistor A3Q13 is a temperature compensating device for A3Q11 and A3Q12. If the V_{be} of A3Q11 should change because of temperature variations, this change will be exactly compensated for by the change in A3Q13 due to this temperature change. The emitter of A3Q13 is held at a constant potential by zener diode A3CR1.

4-55. When the 313A is used in the Meter Expand function with a given input to transistor A3Q9, the Model 313A meter is adjusted by the SCALE OFFSET for a zero center scale reference reading. Since the Meter Expand Amplifier has a constant gain with a given setting of the SCALE OFFSET, any variations in the input will cause deflection of meter M1. A 1 dB change in the input will cause a full scale deflection of M1. When operated in the Meter Expand function, the output that normally drives M1 is routed through the Meter Expand switch to a dummy load consisting of R4 and R5.

4-56. Meter M1 is a 300 μ A taut band zero left movement which is calibrated for a 2 dB full scale deflection. When the 313A is operated in the OUTPUT MONITOR mode, the meter deflects to the CAL mark. The output is then calibrated and can be read directly from the attenuator dials provided the MAX OUTPUT switch is in the 0 DBM position.

4-57. AGC CONTROL AMPLIFIER (P/O A3).

4-58. The AGC Control Amplifier is part of module A3 and its function is to use the output of the Average Detector to establish an AGC voltage. This AGC voltage is used by the AGC Amplifier A5 in maintaining a uniform output level in the 313A.

4-59. The input to the AGC Control Amplifier is applied to the emitter of A3Q1 and A3Q2 with A3Q2 acting as a temperature compensating device for A3Q1. The AGC voltage developed in the AGC Amplifier is determined by the amount of current flowing through transistor A3Q1. The 0.1 dB Step Attenuator is connected across transistor A3Q1 and is used to shunt current around A3Q1. By shunting current around A3Q1, the AGC voltage changes and thus the output level of the 313A. The output of A3Q1 is coupled to a feedback amplifier consisting of transistor A3Q3 through A3Q6. Feedback path is from the junction of A3R10 and A3R12 to the base of differential amplifier transistor A3Q4. The AGC level can be set by adjusting A3R14.

SECTION V MAINTENANCE

5-1. INTRODUCTION.

5-2. This section contains information necessary in the service and maintenance of the -hp- Model 313A. Included are performance checks, adjustment and calibration procedures and troubleshooting procedures.

5-3. The test equipment needed to properly maintain and service the 313A is listed in Table 5-1. Included in Table 5-1 is the equipment to be used, required specifications and recommended type. If the recommended model is not available, other equipments may be substituted provided they meet the required specifications.

5-4. METER MECHANICAL ZERO.

5-5. Mechanical zeroing of the front panel meter should be performed before any performance checks or adjustments are performed. To do this, turn the equipment off for 30 seconds to allow time for all capacitors to discharge and proceed with the procedure described in Paragraph 3-6.

5-6. FACTORY SELECTED VALUES.

5-7. Factory selected values are denoted on the schematic diagrams by an asterisk. Reference is also made to the paragraph number in the manual where the method of selection can be found.

5-8. PERFORMANCE CHECKS.

5-9. The performance checks presented in this section are in-cabinet checks designed to compare the 313A with its published specifications. These checks can be used for incoming inspection, periodic maintenance checks and to verify performance after adjustment or repair.

5-10. DIAL ACCURACY CHECK.

- a. Connect the 313A output to the electronic counter using an RG-59B/U (75 Ω) cable and a 75 Ω feedthru termination and set the 313A controls as follows:

```
OSCILLATOR MODE . . . . INTERNAL
METER MODE . . . . . OUTPUT MONITOR
ATTENUATORS . . . . . 00.0
MAX OUTPUT . . . . . +10 DBM
```

- b. Adjust the electronic counter controls to read frequency.
- c. Check the frequency dial accuracy at 1 MHz and at 2 MHz. The electronic counter reading should match the dial setting ± 220 kHz.

- d. Check the frequency dial accuracy at all integral MHz markers from 2 MHz to 8 MHz. The electronic counter reading should match the dial setting ± 660 kHz.
- e. Check the frequency dial accuracy at all integral MHz markers from 8 MHz to 22 MHz. The electronic counter reading should match the dial setting ± 1.1 MHz.
- f. If steps a through e do not meet specifications, refer to Paragraph 5-17 for adjustment and calibration procedures.

5-11. OUTPUT MONITOR CHECK.

- a. Set the Model 313A controls as follows:

```
OSCILLATOR MODE . . . . INTERNAL
METER MODE . . . . . OUTPUT MONITOR
MAX OUTPUT . . . . . +10 DBM
FREQUENCY DIAL . . . . 1 MHz
ATTENUATORS . . . . . 00.0 DB
```

- b. Set the 400AC Voltmeter to the 1 V range and connect it to the output of the 313A using a 75 ohm cable and a 75 ohm feedthrough termination at the voltmeter end of the cable.
- c. The 313A meter should read directly over the CAL mark on the meter face and the 400F should indicate $0.866 \text{ V} \pm 0.008 \text{ V}$ (0.707 ± 0.007 Option 01).
- d. If the Output Monitor Check does not meet the specifications of step c, refer to Paragraph 5-17 for Adjustment and Calibration Procedure.

5-12. METER EXPAND AND TRACKING CHECK.

- a. Connect the 313A, Meter Expand Test Set and the 1 dB/step substitution attenuator as shown in Figure 5-1.
- b. Change the 313A METER MODE switch to 312A EXPAND.
- c. Connect the 3440A dc Digital Voltmeter to the test point on the Meter Expand Test Set and adjust the output of the test set to precisely 1.000 V.
- d. Turn the substitution attenuator full clockwise (0dB). Adjust the 313A SCALE OFFSET Coarse control full counterclockwise with the Fine Control centered. The 313A meter should read 0.0 or less.

Table 5-1. Required Test Equipment and Accessories

INSTRUMENT TYPE	REQUIRED CHARACTERISTICS	RECOMMENDED MODEL
Oscilloscope	Passband: DC to 30 MHz Sensitivity: 50 mV/cm Input Impedance: 1 M Ω	-hp- Model 175A with 1752B Vertical Plug-in and 1780A Horizontal Plug-in
Wave Analyzer	Local Oscillator Output: 50 mV into 50 ohms 30 MHz Output: 30 mV into 50 ohms Recorder Output: 1 V maximum into 1000 ohms	-hp- Model 312A
Wave Analyzer	Selectivity: ± 30 Hz at least 60 dB down Dynamic Range: 70 dB Input Reference Level: 1 volt	-hp- Model 302A
Electronic Counter	Frequency Range: 0 to 22 MHz Accuracy: ± 10 Hz	-hp- Model 5245L
Digital Voltmeter	Range: 1 V, 10 V and 100 V Accuracy: 0.1% Resolution: 4 digits Sensitivity: 1 mV full scale	-hp- Model 3440A
DC Multi-Function Plug-In	Accuracy: 0.1% Range: 1 V, 10 V and 100 V	-hp- Model 3444A
DC Null Voltmeter	Range: 10 mV Full Scale 30 μ V Center Scale Accuracy: $\pm 2\%$ Input Impedance: 100 k Ω	-hp- Model 419A
Bucking Supply 0-10 mV	See Figure 5-2 for schematic a. Resistor: fxd 6500 $\Omega \pm 1\%$ R1 b. Resistor: var 500 $\Omega \pm 10\%$ R2 c. Resistor: var 50 $\Omega \pm 5\%$ R3 d. Battery: 1.34 V	-hp- Part No. 0811-0392 -hp- Part No. 2100-0324 -hp- Part No. 2100-1481 Mallory RM-42R
Thermal Converter	Output: 3.5 mV dc output for 700 mV ac input Impedance: 75 Ω Accuracy: 0.25% 10 kHz to 22 MHz	-hp- Model H01-11050A
Thermal Converter	Output: 5 mV dc output for 700 mV ac input (Option 01 only) Impedance: 50 Ω Accuracy: 0.25% from 10 kHz to 22 MHz	-hp- Model 11050A
AC Voltmeter	Sensitivity: 100 μ V Full Scale Accuracy: 0.5% at 866 mV at 1 MHz	-hp- Model 400F with known accuracy
AC Voltmeter	Sensitivity: 10 mV Full Scale Accuracy: 1% Passband: 500 kHz to 70 MHz	-hp- Model 3406A
Amplifier	Passband: 10 kHz to 22 MHz Gain: 40 dB	-hp- Model 461A
Distortion Filter	Notch Frequency: 1 MHz	See Figure 5-5
Distortion Filter	Notch Frequency: 9.5 MHz	See Figure 5-5
Distortion Filter	Notch Frequency: 20.5 MHz	See Figure 5-5
Meter Expand Test Set	See Figure 5-1 for schematic a. Resistor: fxd 464 $\Omega \pm 1\%$ R1 b. Resistor: var 75 $\Omega \pm 10\%$ R2 c. Resistor: fxd 56.2 $\Omega \pm 1\%$ R3 d. Resistor: fxd 49.9 $\Omega \pm 1\%$ R4 e. Resistor: fxd 1 k $\Omega \pm 1\%$ R5	-hp- Part No. 0698-0090 -hp- Part No. 2100-0076 -hp- Part No. 0757-1001 -hp- Part No. 0757-0072 -hp- Part No. 0757-0021

Table 5-1. Required Test Equipment and Accessories (Cont'd)

INSTRUMENT TYPE	REQUIRED CHARACTERISTICS	RECOMMENDED MODEL
10 dB/Step Substitution Attenuator	Range: 0 to 120 dB in 10 dB steps	-hp- Model 355D with known accuracy
1 dB/Step Substitution Attenuator	Range: 0 to 12 dB in 1 dB steps	-hp- Model 355C with known accuracy
50Ω Feedthru	Accuracy: 1% (Option 01 only)	-hp- Model 11048B
75Ω Feedthru Termination	Accuracy: 1%	-hp- Model 11094A
75Ω to 50Ω Feedthru Termination	Accuracy: 0.25% Input Impedance: 75Ω Output Impedance: 50Ω	See Figure 5-3
Probe	Attenuation: 10:1 Passband: DC to 30 MHz Accuracy: 2%	-hp- Model 10001A
Cable	Impedance: 50Ω Length: 24" (3 supplied with 313A)	-hp- Model 11086A
Cable, BNC to Alligator Clip	Length: 44"	-hp- Model 11037A
Cable, BNC to BNC	Impedance: 50Ω Length: 48" (Option 01 only)	10503A

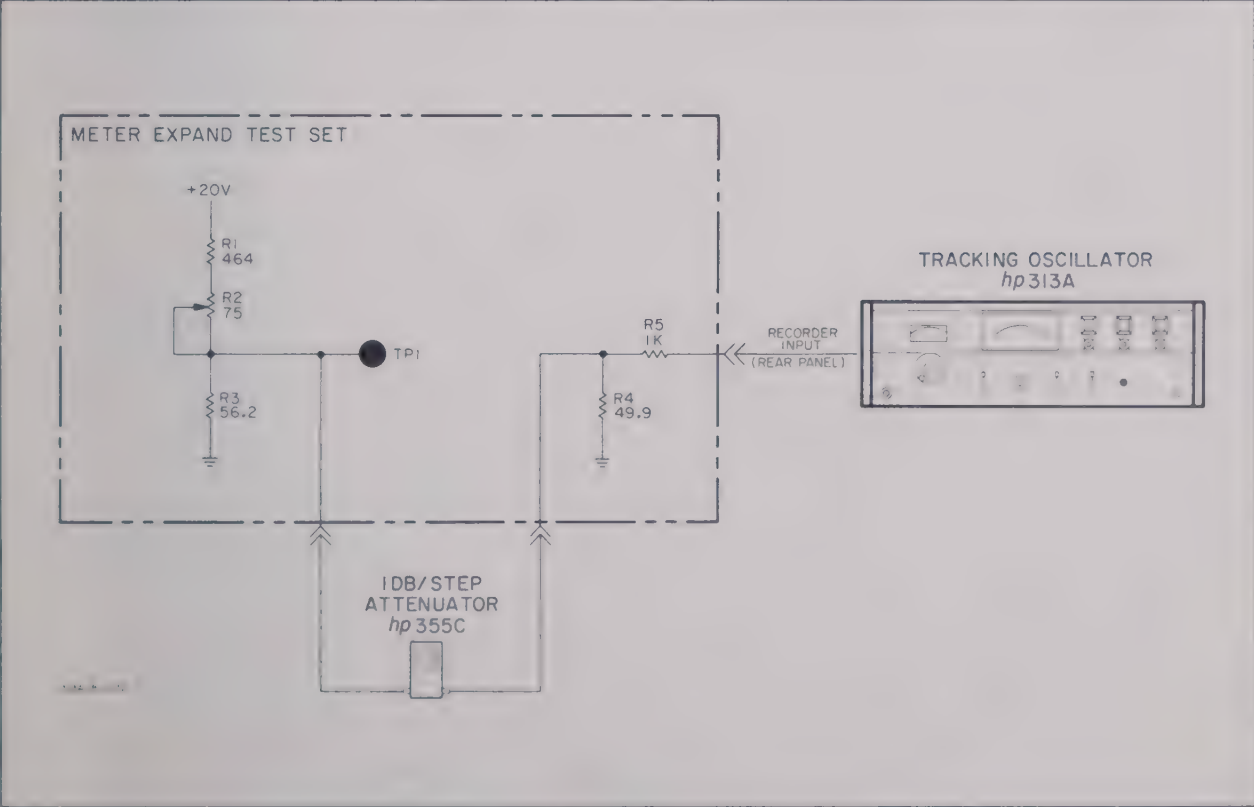


Figure 5-1. Meter Expand and Tracking Test Setup

- e. Adjust the 313A SCALE OFFSET control so that the 313A meter reads +1.0. Turn the substitution attenuator 2 steps counterclockwise (2 dB). The 313A meter should read -1.0 ± 0.05 dB.
- f. Using the procedure outlined in step e, continue checking the 313A meter tracking through the entire range of the SCALE OFFSET control. In each step, the 313A meter should read -1.0 ± 0.05 dB.
- g. With the substitution attenuator set to 10 dB, turn the 313A SCALE OFFSET Coarse control full clockwise with the Fine control centered. The 313A meter should read 0.0 or greater.
- h. If the Meter Expand and Tracking performance checks do not meet published specifications, refer to Paragraph 5-17 for Adjustment and Calibration procedures.
- c. Set the 312A FREQUENCY RANGE to 0 and adjust the variable frequency control for 1000.00 kHz.
- d. With the Bucking Supply OFF, set the 419A to the 10 mV range and zero the meter. Push the VM button on the 419A.
- e. Turn ON the Bucking Supply and adjust the controls for a null on the 419A meter.
- f. Turn the 419A to the $300 \mu\text{V}$ range and if necessary readjust the controls on the Bucking Supply for a null on the 419A meter.
- g. Turn the 313A 0.1 dB attenuator one step counterclockwise and note the reading on the 419A meter. This represents 0.1 dB deviation for the following checks. Return the 313A 0.1 dB attenuator to 0.

5-13. OUTPUT FREQUENCY RESPONSE CHECK.

NOTE

If a 312A Wave Analyzer is available, perform steps a through l.
If a 312A is not available, perform steps i through l.

- a. Connect the 313A, 312A, Thermal Converter, Bucking Supply and 419A DC Null Voltmeter as shown in Figure 5-2.
- b. Set the 313A controls as follows:

OSCILLATOR MODE . . . TRACK 312A
METER MODE OUTPUT MONITOR
MAX OUTPUT +10 DBM
ATTENUATORS 00.0

- h. Using the FREQUENCY RANGE and variable frequency control, slowly tune the 312A through the frequency range between 10 kHz and 18 MHz observing any deviations on the 419A meter. The 419A meter should not deviate more than the value noted in step g.
- i. Change the 313A OSCILLATOR MODE switch to INTERNAL and set the 313A frequency dial to 1 MHz. If necessary readjust the Bucking Supply for a null on the 419A meter.
- j. Turn the 313A 0.1 dB attenuator one step counterclockwise and note the reading on the 419A meter. This reading represents 0.1 dB deviation. Return the attenuator to 0.

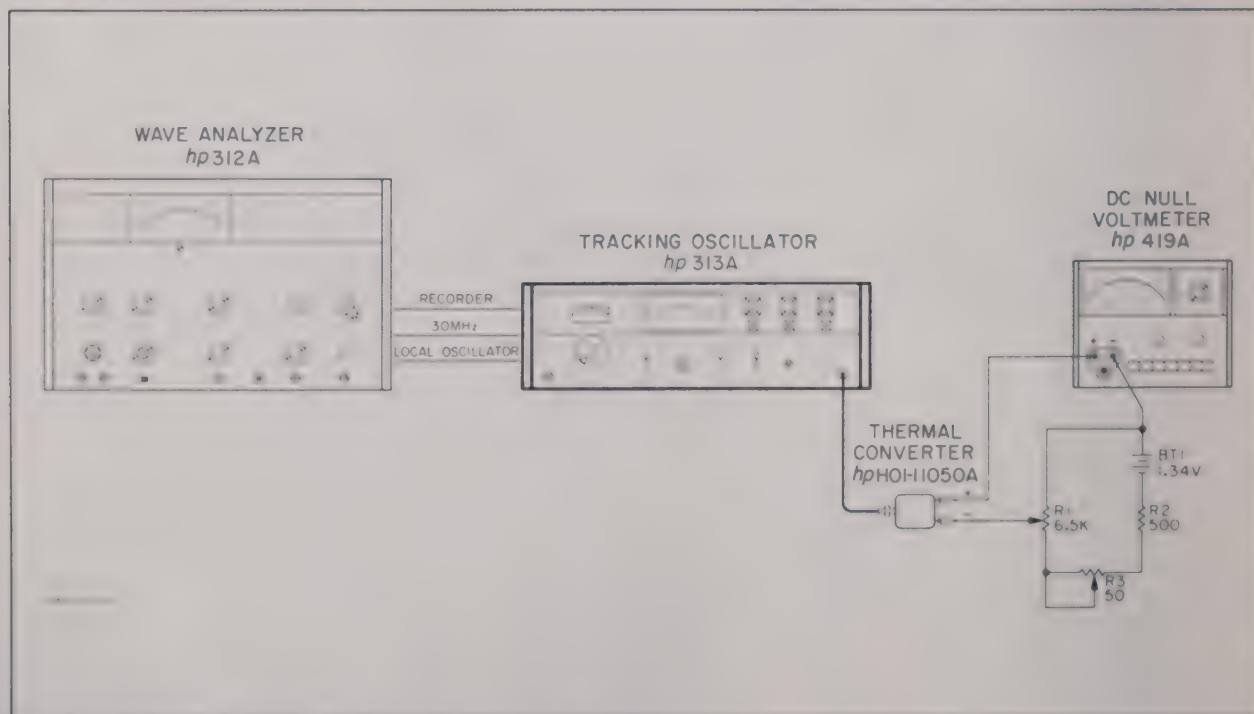


Figure 5-2. Output Frequency Response Test Setup

- k. Slowly tune the 313A through the frequency range of 10 kHz to 22 MHz noting any deviations on the 419A meter. Any deviations noted should not exceed the value recorded in step j.
- l. Change the 313A MAX OUTPUT switch to 0 DBM and the 419A RANGE switch to 30 μ V. Repeat steps i through k.
- m. If the Output Frequency Response check does not meet the specifications of steps h and k, refer to Paragraph 5-17 for Adjustment and Calibration procedures.

NOTE

The above procedure assumes that the Thermal Converter is perfectly flat over the frequency range used. Any deviations in the Thermal Converter calibration chart should be subtracted from the reading obtained in the 313A frequency response curve.

5-14. ATTENUATOR ACCURACY CHECK.

- a. Connect the 313A, 312A, 461A, and substitution attenuators as shown in Figure 5-3.
- b. Set the 313A controls as follows:

OSCILLATOR MODE TRACK 312A
METER MODE 312A EXPAND
ATTENUATORS 00.0
MAX OUTPUT +10 DBM

- c. Set the 10 dB/step substitution attenuator to 90 and the 1 dB/step substitution attenuator to 0.
- d. Set the 312A controls as follows:

FREQUENCY 1000.00 kHz
REFERENCE LEVEL. -40 DBM
AMPLITUDE RANGE. 0
RECEIVER MODE AM
BANDWIDTH 3000 Hz

- e. Set the 461A Amplifier GAIN switch to 40 dB and adjust the 313A SCALE OFFSET so that the 313A meter reads 0.0.
- f. Perform the attenuator checks listed in Table 5-2 with the 313A attenuators and the substitution attenuators set as indicated.

NOTE

In the following attenuator checks, it is assumed that the substitution attenuators are perfectly flat over the frequency range used. If there are any variations in the response of the substitution attenuators in the frequency range of 10 kHz to 22 MHz, these deviations must be considered when checking the 313A attenuators.

- g. Remove the 461A amplifier from the test setup and connect the output of the substitution attenuators directly to the 312A input. Change the 10 dB/step substitution attenuator to zero.

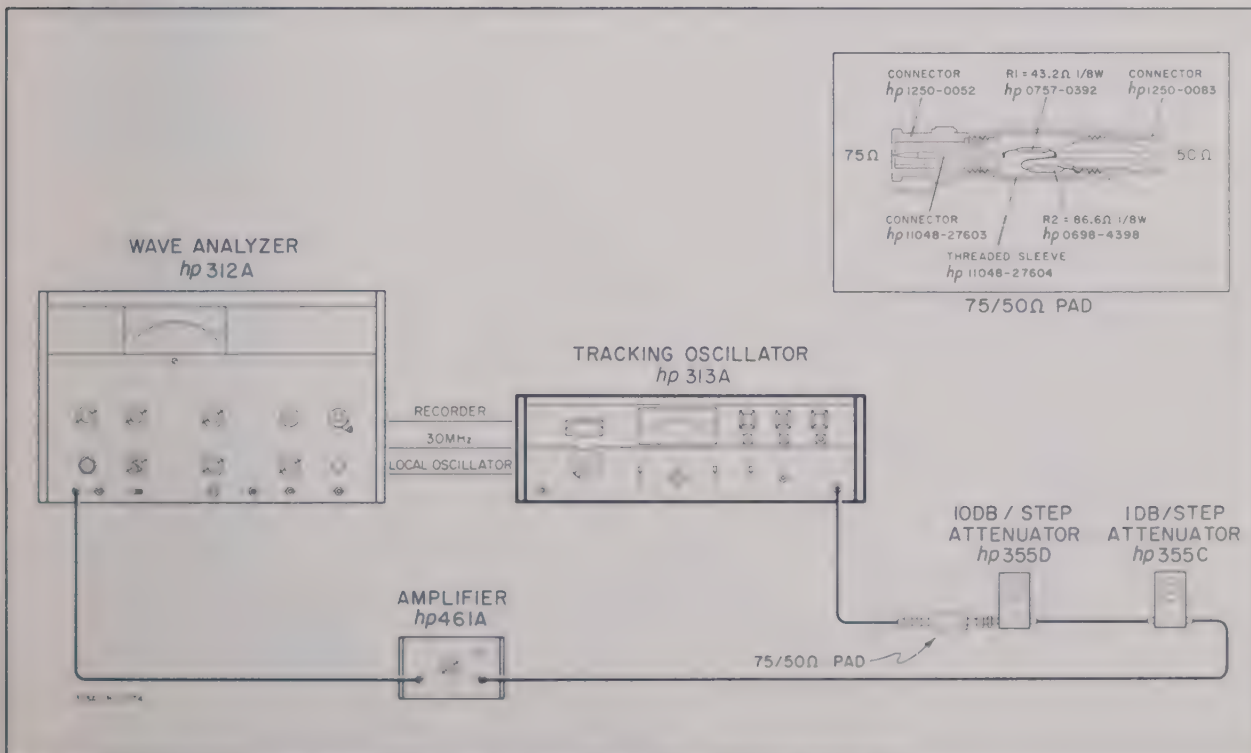


Figure 5-3. Attenuator Accuracy Test Setup

Table 5-2. 10 dB Step Attenuator Check

313A ATTENUATORS	SUBSTITUTION ATTENUATOR		313A METER INDICATION
	10 dB/Step	1 dB / Step	
00.0	90	0	0.0
10.0	80	0	0.0 $\pm$ 0.1 dB
20.0	70	0	0.0 $\pm$ 0.1 dB
30.0	60	0	0.0 $\pm$ 0.1 dB
40.0	50	0	0.0 $\pm$ 0.1 dB
50.0	40	0	0.0 $\pm$ 0.1 dB
60.0	30	0	0.0 $\pm$ 0.2 dB
70.0	20	0	0.0 $\pm$ 0.2 dB
80.0	10	0	0.0 $\pm$ 0.2 dB
90.0	0	0	0.0 $\pm$ 0.2 dB

h. Change the 312A REFERENCE LEVEL to 0 DBM. Return the 313A attenuators to 00.0 and the 1 dB/step substitution attenuator to 10 dB. Adjust the 313A SCALE OFFSET for 0.0 on the 313A meter and perform the attenuator checks listed in Table 5-3.

i. Set the 313 attenuators to 00.0, the 10 dB/step substitution attenuator to 0dB and the 1 dB/step substitution attenuator to 10. Use the 313A SCALE OFFSET controls to set the 313A meter to 0.0 and perform the checks listed in Table 5-4.

Table 5-3. 1 dB Step Attenuator Check

313A ATTENUATORS	SUBSTITUTION ATTENUATOR		313A METER INDICATION
	10 dB/Step	1 dB/Step	
00.0	0	10	0.0
01.0	0	9	0.0 $\pm$ 0.1 dB
02.0	0	8	0.0 $\pm$ 0.1 dB
03.0	0	7	0.0 $\pm$ 0.1 dB
04.0	0	6	0.0 $\pm$ 0.1 dB
05.0	0	5	0.0 $\pm$ 0.1 dB
06.0	0	4	0.0 $\pm$ 0.1 dB
07.0	0	3	0.0 $\pm$ 0.1 dB
08.0	0	2	0.0 $\pm$ 0.1 dB
09.0	0	1	0.0 $\pm$ 0.1 dB

Table 5-4. 0.1 dB Step Attenuator Check

313A ATTENUATORS	SUBSTITUTION ATTENUATOR		313A METER INDICATION
	10 dB/Step	1 dB/Step	
00.0	0	10	0.0
00.1	0	10	-0.1 $\pm$.02 dB
00.2	0	10	-0.2 $\pm$.02 dB
00.3	0	10	-0.3 $\pm$.02 dB
00.4	0	10	-0.4 $\pm$.02 dB
00.5	0	10	-0.5 $\pm$.02 dB
00.6	0	10	-0.6 $\pm$.02 dB
00.7	0	10	-0.7 $\pm$.02 dB
00.8	0	10	-0.8 $\pm$.02 dB
00.9	0	10	-0.9 $\pm$.02 dB

- j. Repeat steps a through i with the 312A frequency set to 10 kHz and again with the frequency set to 18 MHz. (If H01-312A is available, check at 22 MHz).

5-15. NON-HARMONIC DISTORTION CHECK.

- a. Interconnect the Model 313A and Model 312A as follows:

Connect the 313A

RECORDER INPUT
LOCAL OSCILLATOR INPUT
30 MHz INPUT

To the 312A

RECORDER OUTPUT
LOCAL OSCILLATOR OUTPUT
30 MHz OUTPUT

- b. Set the 313A and 312A controls as follows:

313A Controls

OSCILLATOR MODE TRACK 312A
METER MODE OUTPUT MONITOR
MAX OUTPUT + 10 DBM
ATTENUATORS 00.0

312A Controls

REFERENCE LEVEL . . . +10
AMPLITUDE RANGE . . . 0
FREQUENCY RANGE . . . 0
FREQUENCY 20 kHz
INPUT MODE TERMINATED,
UNBALANCED
IMPEDANCE 75
RECEIVER MODE AM

- c. Connect the output of the 313A to the input of the Model 302A Wave Analyzer using a 75 ohm cable terminated in 75 ohms at the Wave Analyzer end of the cable.

- d. Set the 302A controls as follows:

MAX INPUT LEVEL 1 VOLT
RANGE 0 DB
SCALE VALUE ABSOLUTE
MODE SELECTOR NORM

- e. Tune the 302A FREQUENCY control for a maximum reading on the 302A at approximately 20 kHz. This is the fundamental frequency output of the 313A. The 302A meter should read 0.866 V (0.707 Option 01) at the maximum. Note the 302A frequency dial reading.
- f. Tune the 302A up 35 Hz. Turn the 302A RANGE switch down as required for an indication on the 302A meter.
- g. Tune the 302A very carefully for a maximum reading on the meter. The signal 35 Hz above the fundamental frequency must be more than 40 dB below the fundamental frequency in step e.
- h. Tune the 302A up another 35 Hz to 70 Hz above the fundamental frequency. Tune carefully for a peak on the 302A meter. The signal 70 Hz above the fundamental frequency must be more than 40 dB below the fundamental frequency.
- i. Using the above described procedure, check the signals 105, 140, 175 and 245 Hz above the fundamental frequency. These signals must be more than 40 dB below the fundamental frequency.

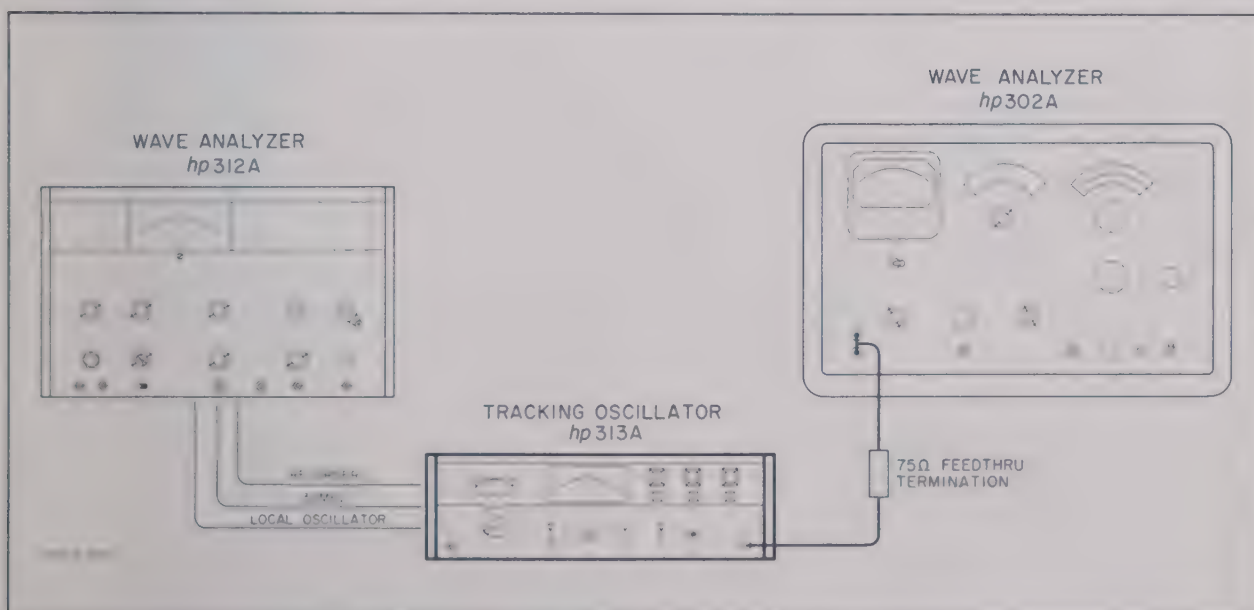


Figure 5-4. Non-Harmonic Distortion Test Setup

- j. Check the signals at 35 Hz and 70 Hz below the fundamental frequency. These signals must be more than 40 dB below the fundamental frequency.
- k. Check the signals at 105 Hz, 140 Hz, 175 Hz and 245 Hz below the fundamental frequency. These signals must be more than 40 dB below the fundamental frequency.
- l. Using a 75 Ω feedthru, connect the 313A output to the input of the 5245L electronic counter. Set the 312A frequency to read 1000.00 kHz. The counter should read 1000.03 or 1000.04.
- m. If the Non-Harmonic Distortion Check does not meet the specifications of steps e through l, refer to Paragraph 5-17 for Adjustment and Calibration procedures.
- e. Change the 3406A RANGE switch as required and very carefully tune the 313A frequency dial for a maximum dip on the 3406A meter. This dip must be down at least 34 dBm from the value noted in step c.
- f. Substitute the 9.5 MHz Distortion Filter for the 1 MHz Distortion Filter in Figure 5-5.
- g. Tune the 313A frequency to 5 MHz and note the reference reading on the 3406A in dBm.
- h. Tune the 313A frequency dial very carefully for a maximum dip at 9.5 MHz and note the reading on the 3406A. This reading must be down at least 34 dBm from the reading obtained in step g.
- i. Replace the 9.5 MHz Distortion Filter in Figure 5-5 with the 20.5 MHz Distortion Filter.
- j. Tune the 313A frequency dial to 8 MHz and note the reference reading on the 3406A.
- k. Tune the 313A frequency dial to 20.5 MHz and very carefully adjust the frequency for a maximum dip on the 3406A. The 3406A reading must be down at least 34 dBm from the reading obtained in step j.

5-16. HARMONIC DISTORTION CHECK.

- a. Connect the 313A, 3406A, 1 MHz Distortion Filter and 75 ohm feedthru termination as shown in Figure 5-5.
- b. Set the 313A controls as follows:

OSCILLATOR MODE INTERNAL
 ATTENUATORS. 00.0
 MAX OUTPUT +10 DBM
 Frequency Dial 5 MHz

- c. Set the 3406A to the +10 DBM range and note the reading.
- d. Slowly tune the 313A frequency down to 1 MHz noting the dip in the 3406A meter reading.

5-17. ADJUSTMENT AND CALIBRATION PROCEDURE.

5-18. The following is a complete adjustment and calibration procedure for the 313A which should be performed only after it has been determined by the Performance Checks that the 313A is not within specifications. Refer to Figures 5-6 and 5-7 for location of internal adjustments.


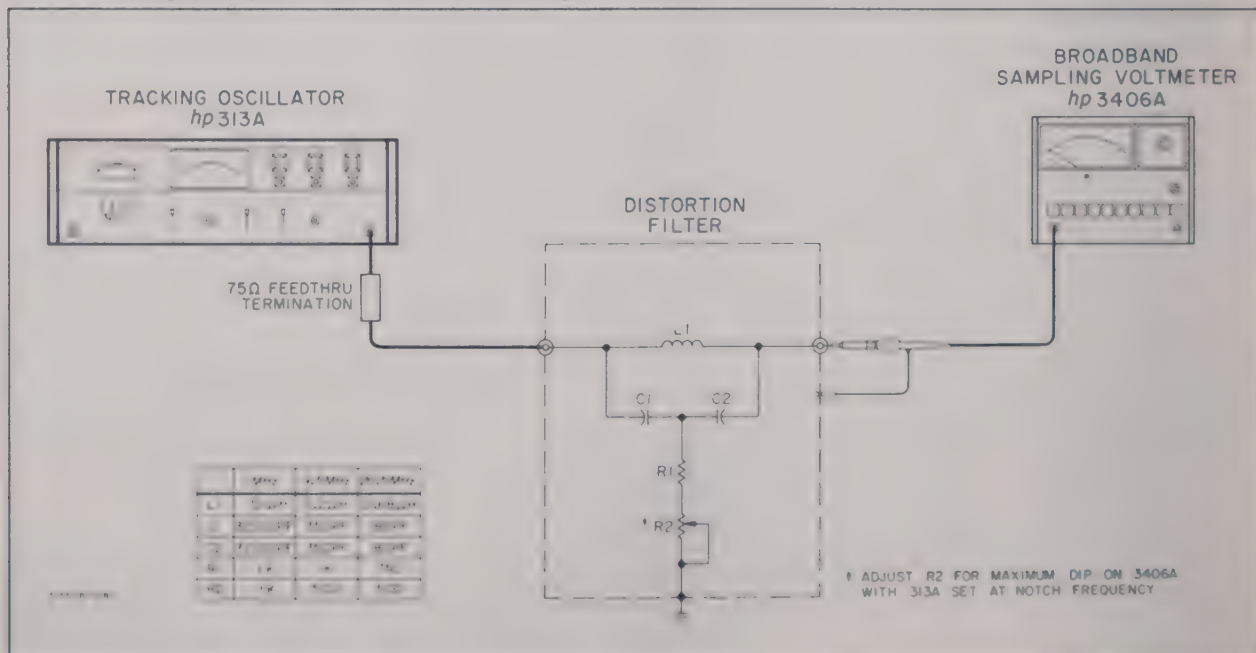


Figure 5-5. Harmonic Distortion Test Setup

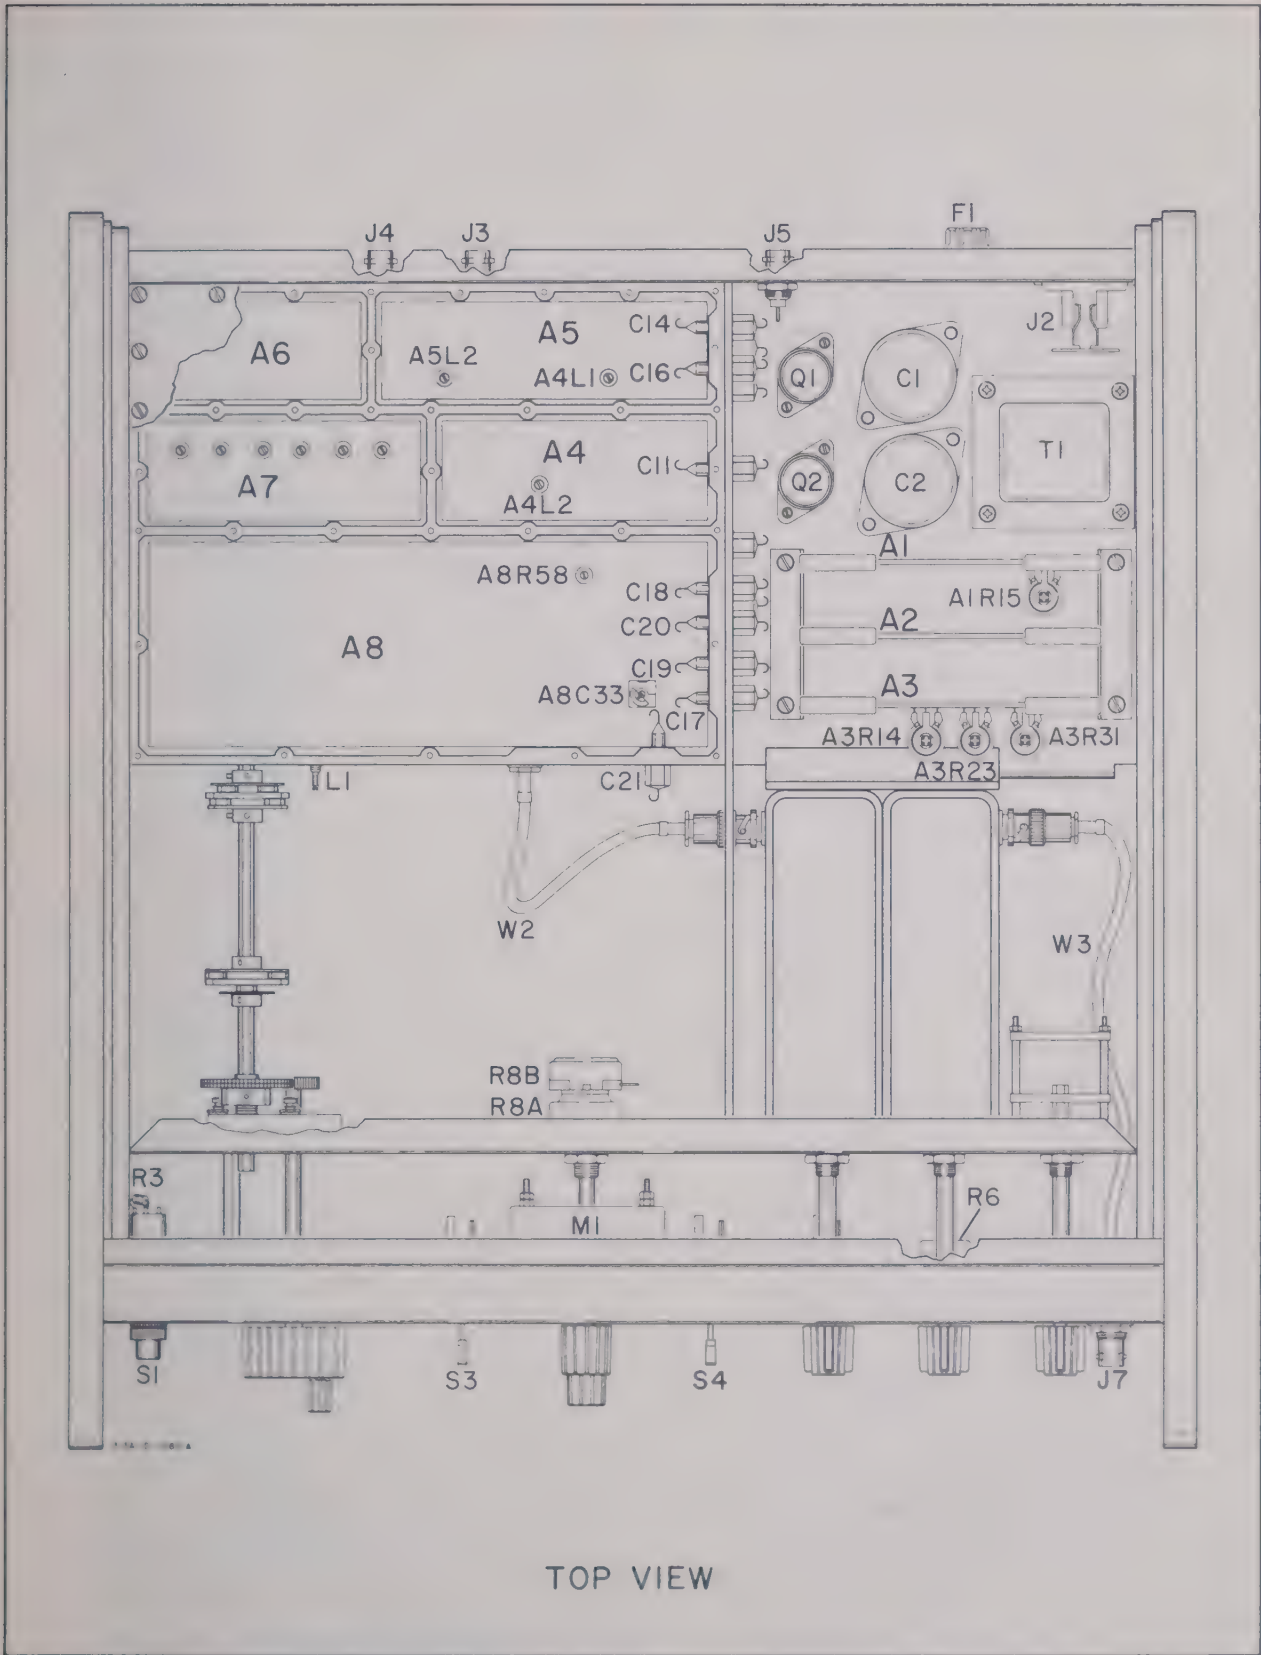

TOP VIEW

Figure 5-6. Component Location, Top View

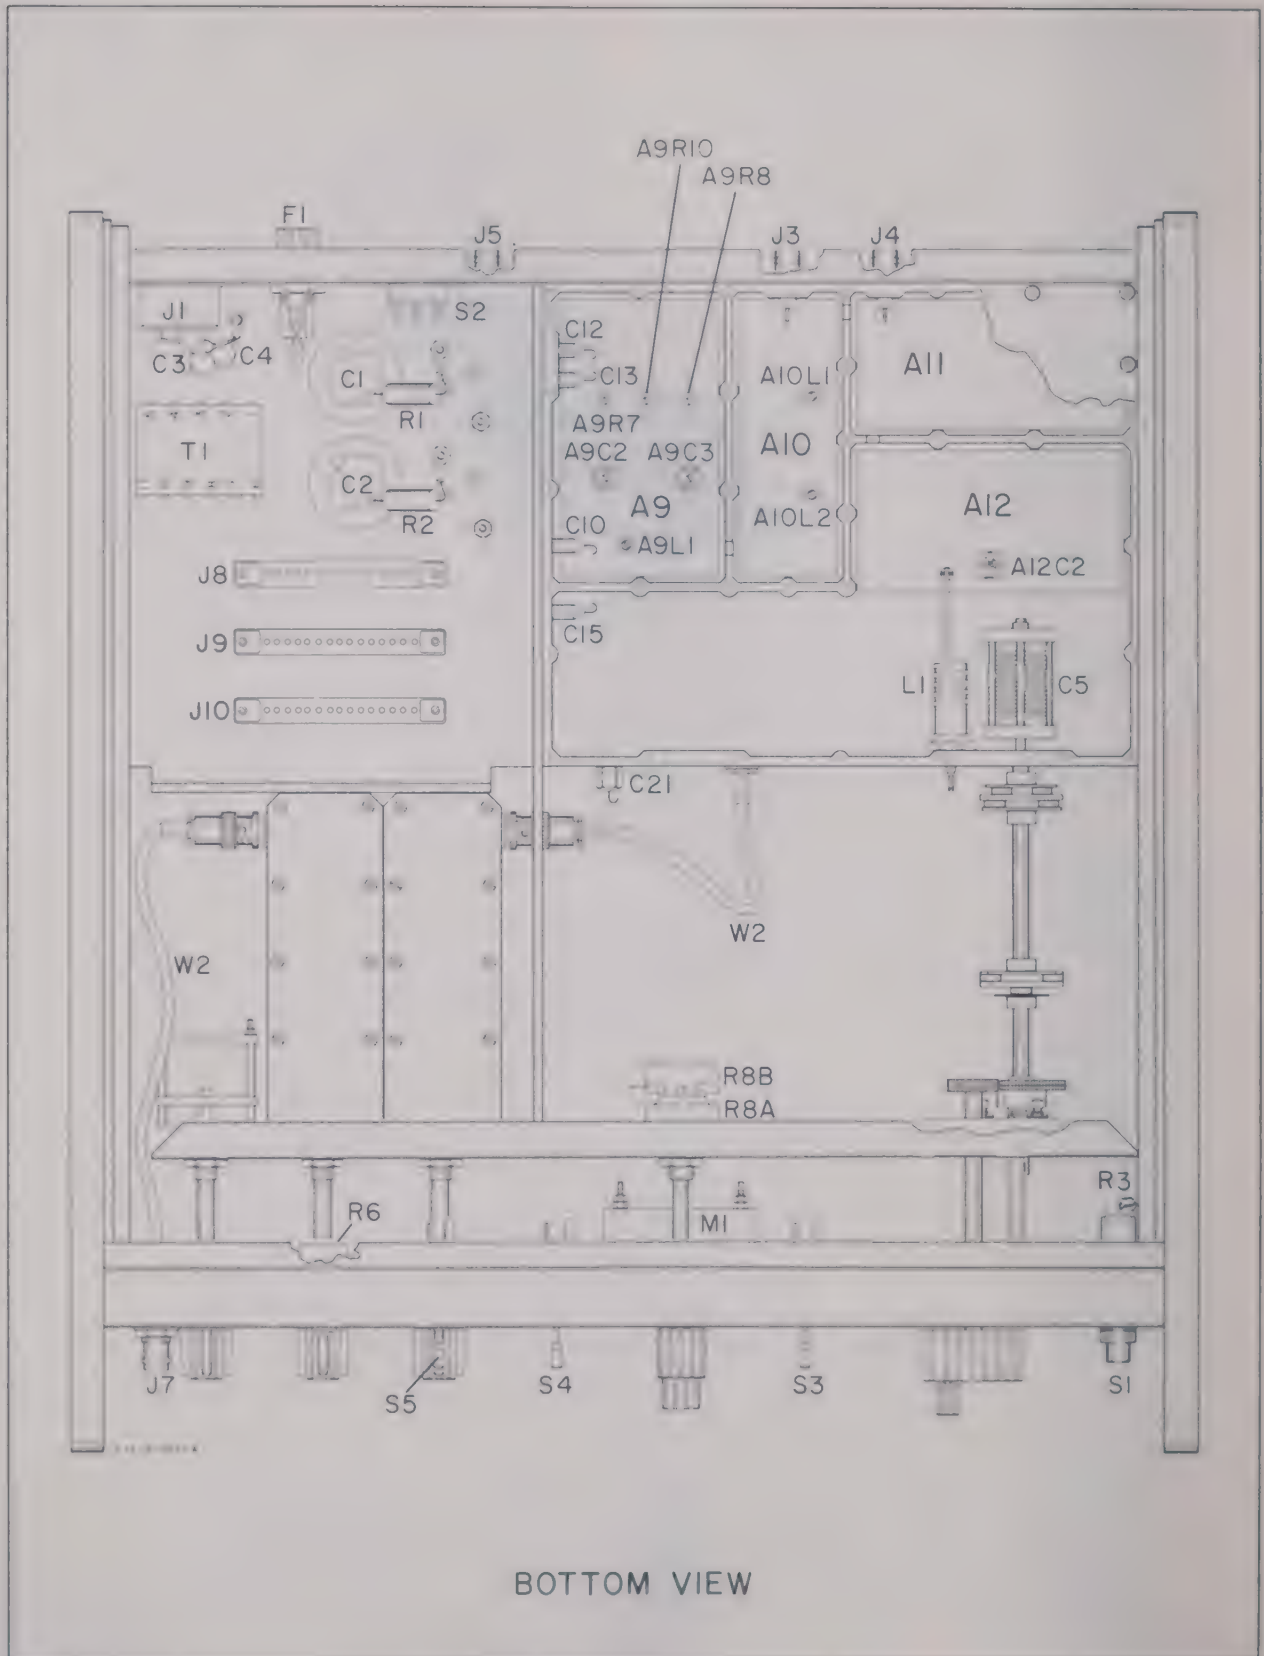


Figure 5-7. Component Location, Bottom View

5-19. COVER REMOVAL.

5-20. To remove the top or bottom cover, remove the retaining screws from the sides of the cover, slide the cover about 1/2 inch to the rear and lift it off. To replace the cover, reverse this procedure.

5-21. To remove the side covers, remove the retaining screws in the cover and lift it off.

5-22. POWER SUPPLY VOLTAGE ADJUSTMENT.

- a. Set the Model 3440A/3444A Voltmeter to the 100 V DC range and connect between pin 3 of J8 and ground.
- b. Turn on the Model 313A and adjust A1R15 for exactly -20 volts.
- c. Connect the 3440A/3444A between J8 pin 1 and ground. The positive supply must be +20 volts and ± 0.2 volts.
- d. If the positive supply is not within the limits specified in step c, the value of A1R7 can be changed to bring the voltage into the proper range. Change the value of A1R7 approximately $30\Omega/0.1$ volt of change needed. If the voltage is too high, increase the value of A1R7 and if the voltage is too low, decrease the value of A1R7.

5-23. INTERNAL ADJUSTMENTS.

- a. Connect the 313A output to the 175A/1752B oscilloscope through a 75Ω cable and a 75Ω feedthru termination.
- b. Set the 313A controls as follows:
 OSCILLATOR MODE . . . INTERNAL
 FREQUENCY 1 MHz
 METER MODE OUTPUT MONITOR
 MAX OUTPUT +10 DB
 ATTENUATORS 00.0
- c. Adjust the oscilloscope controls for 10 stable cycles in 10 cm of horizontal deflection.
- d. Set the Model 3440A/3444A Digital Voltmeter to the 10 V range and connect between C16 on the RF casting and ground.
- e. Turn on the Model 313A and adjust A4L2, A5L1 and A5L2 for maximum signal on the oscilloscope screen. The signal should be at least 2 volts peak-to-peak in amplitude.
- f. Readjust A5L1 and A5L2 for minimum reading on the digital voltmeter. This reading should be between +0.5 and +1.0 volts.
- g. Adjust the SWEEP TIME on the oscilloscope as necessary to check the waveform envelope. There should be no amplitude variations in the envelope.
- h. Connect a 10:1 oscilloscope probe between pin 4 of J9 and ground. The waveform should

be a sine wave $0.7 \pm .1$ volt peak-to-peak in amplitude.

- i. Connect the 10:1 oscilloscope probe to pin 13 of J9. The waveform should be 0.7 ± 0.1 V peak-to-peak in amplitude.
- j. Connect the input of 5245L counter between pin 4 of J9 and set counter to frequency. The frequency indicated on 5245L must be 35 ± 3 Hz.

5-24. OUTPUT CALIBRATION.

- a. Remove the grounding strap from the input terminals of the 3440A/3444A so that a floating measurement can be made.
- b. Set the 3440A/3444A range switch to 10 V and connect across A3TP1 and A3TP2.
- c. Adjust A3R31 (meter cal) for a reading of $1.197 \pm .002$ V on the 3440A/3444A.
- d. If A3R31 has insufficient range for the adjustment, the value of A3R26 may be changed to bring the control into the correct range. If the voltmeter reads low, lower the value of A3R26 by 1000Ω . If the voltmeter reads high, raise the value of A3R26 by 1000Ω .
- e. Connect the 3440A/3444A between A3TP3 and ground.
- f. Adjust A3R14 (AGC reference level) to obtain $5.80 \pm .01$ V on the 3440A/3444A.
- g. Set the 400F Voltmeter to the 1 V range and connect to the 313A output using RG-59B/U cable and a 75Ω feedthru termination at the voltmeter end of the cable. (Use a 50Ω termination and RG-58C/U cable for Option 01 instruments.)
- h. Adjust the 313A OUTPUT CAL control R6 so that the meter reads directly over the CAL mark on the 313A meter face.
- i. If the meter is less than full scale at full clockwise rotation of the OUTPUT CAL control, reduce the value of A3R1 by 250Ω and repeat step h. If the meter is greater than full scale at full counterclockwise rotation of the OUTPUT CAL control, raise the value of A3R1 by 250Ω and repeat step h.
- j. Adjust A8R58 (detector gain) so that the 400F reads exactly 0.866 volts. (For Option 01 instruments, adjust A8R58 for 0.707 volts.)
- k. If the 400F reads below the calibration point with A8R58 at maximum counterclockwise rotation, increase the value of A8R49 by the percentage that the output voltage is low with A8R58 centered. If the 400F reads above the calibration point with A8R58 at maximum clockwise rotation, decrease the value of A8R49 by the percentage that the output voltage is high with A8R58 centered.

5-25. FREQUENCY DIAL CALIBRATION.

- a. Connect the Model 5245L electronic counter to the output of the 313A using an RG-59B/U cable and a 75 Ω feedthru termination at the counter end of the cable.
- b. Set the electronic counter to read frequency.
- c. Turn the 313A frequency knob clockwise until the stop is felt.
- d. Loosen the set screws securing the dial hub to the ball drive mechanism and rotate the frequency dial until the alignment dot to the left of zero is directly under the mark in the dial window. Retighten the screws.
- e. Loosen the set screws in the straight coupler connecting the gear mechanism to the long tuning shaft.
- f. Remove the cover from the bottom of the RF casting and turn the tuning capacitor plates until they are fully meshed (maximum capacitance). Retighten the set screws using care not to disturb the previous adjustment.
- g. Turn the frequency dial until 0 appears directly under the window index marker.
- h. Adjust L1 (located on front of RF casting) to obtain a reading of less than 10 kHz on the electronic counter.
- i. Set the frequency dial to 22 MHz and adjust A12C2 to obtain a reading of 22 MHz $\pm$ 10 kHz on the counter.
- j. Repeat steps h and i until the error at both ends of the dial is less than 10 kHz.
- k. If the frequency reads too high in step i and turning A12C2 to maximum capacitance does not bring the frequency down to 22 MHz, remove the RF casting bottom cover and increase the value of A12C1 by 5 pF. If the frequency in step i reads too low and turning A12C2 to minimum capacitance fails to bring the frequency up to 22 MHz, decrease the value of A12C1 by 5 pF. Replace the bottom cover and perform steps h and i again.
- l. Use the electronic counter to check the 313A frequency dial accuracy between 10 kHz and 22 MHz. The dial and counter must agree within the limits specified in Paragraph 5-10.

5-26. NON-HARMONIC DISTORTION ADJUSTMENT.

- a. Interconnect the 313A and 312A as follows:

Connect the 313A

RECORDER INPUT
LOCAL OSCILLATOR INPUT
30 MHz INPUT

To the 312A

RECORDER OUTPUT
LOCAL OSCILLATOR OUTPUT
30 MHz OUTPUT

- b. Set the 313A and 312A controls as follows:

313A

OSCILLATOR MODE . . . TRACK 312A
METER MODE OUTPUT MONITOR
MAX OUTPUT +10 DBM
ATTENUATORS 00.0
Frequency Dial 1 MHz

312A

REFERENCE LEVEL. . . +10
AMPLITUDE RANGE. . . 0
FREQUENCY RANGE. . . 0
FREQUENCY 20 kHz
RECEIVER MODE AM

- c. Connect the 10:1 oscilloscope probe between A10TP1 and ground and adjust the oscilloscope controls for a stable presentation of the signal.
- d. Adjust A10L1 and A10L2 for maximum deflection on the oscilloscope. The minimum level should be 4 volts peak-to-peak.
- e. Connect the output of the 313A to the input terminals of the 302A Wave Analyzer using an RF-59B/U cable terminated in 75 Ω at the 302A end of the cable. (Use 50 Ω cable and 50 Ω termination for all Option 01 instruments.)
- f. Set the 302A controls as follows:

MAX INPUT LEVEL 1 VOLT
RANGE 0 DB
SCALE VALUE ABSOLUTE
MODE SELECTOR NORMAL
- g. Tune the 302A Frequency control to approximately 20 kHz to find the fundamental output frequency of the 313A. The 302A meter should indicate 0.866 (+ 10 dBm) (0.707 Option 01) maximum. Note the reading on the 302A Frequency dial.
- h. Tune the 302A up in frequency by 35 Hz.
- i. Turn the 302A RANGE switch down as required for a display on the 302A meter.
- j. Tune the 302A very carefully for a maximum reading making certain that the signal monitored is 35 Hz above the frequency noted in step g.
- k. Adjust A9R7 and A9R8 (carrier balance) alternately for a minimum reading on the 302A meter, turning down the range switch as necessary for additional sensitivity.

- l. Tune the 302A up another 35 Hz (70 Hz above the fundamental) for maximum reading on the 302A meter.
- m. Adjust A9R10, A9C2, A9C3 and A9L1 (side-band balance) alternately for a minimum reading on the 302A meter.
- n. Repeat steps g through m several times until the signals 35 Hz and 70 Hz above the fundamental frequency are both more than 40 dB below the fundamental frequency.
- o. Using the procedure outlined in steps g through j, check the signals at 35 Hz and 70 Hz below the fundamental frequency. These signals must be at least 40 dB below the fundamental frequency.
- p. Tune the 302A 105 Hz above the fundamental frequency and measure the amplitude of the signal. The amplitude must be more than 40 dB below the fundamental frequency. If after adjustments have been made, the non-harmonic distortion check is out of tolerance, the value of A2R11 may be changed. In most cases A2R11 will have to be increased in value in order to increase the amplitude of the 35 Hz signal.
- q. Tune the 302A 140 Hz above the fundamental frequency and measure the amplitude of the signal. The amplitude must be more than 40 dB below the fundamental frequency.
- r. Check the signals at 105 Hz and 140 Hz below the fundamental frequency. These signals must also be more than 40 dB below the fundamental frequency.
- s. If the Non-Harmonic Distortion Adjustment cannot be performed to meet specifications, it may be necessary to change the value of A2R11. To select the correct value of A2R11, connect an oscilloscope to either A2 pin 4 or A2 pin 13 and change the value of A2R11 until the observed waveform on the oscilloscope is between 0.5 and 0.9 volts peak-to-peak. To increase the amplitude of this signal, increase the value of A2R11. If the value of A2R11 is changed, repeat steps a through r.
- t. Set the digital voltmeter range switch to 10 V and connect between C16 on the RF casting and ground. The meter should indicate less than +1.0 V.
- u. Connect the output of the 313A to the input of the 5245L electronic counter using a 75 Ω cable and 75 Ω termination (50 Ω cable and termination for Option 01 instruments). Set the 312A frequency to read 1000.00 kHz. The counter should indicate 10000.04 or 10000.03. If the counter reads 9999.97 or 9999.96, interchange the leads on C12 and C13 on the RF casting and repeat e through s.

5-27. METER EXPAND AND TRACKING.

- a. Connect the 313A, the Meter Expand Test Set and the 1 DB/step substitution attenuator as shown in Figure 5-1.
- b. Connect the digital voltmeter to the test point on the Meter Expand Test Set and adjust the voltage control on the test set for a reading of 1.000 volts on the digital voltmeter. Turn the substitution attenuator to 4 dB.
- c. Adjust the 313A SCALE OFFSET controls so that the 313A meter reads +1.0 DB.
- d. Turn the substitution attenuator to 6 dB. If the 313A meter reads below -1.0 dB, adjust A3R23 (expand tracking) until the meter reads as much above -1.0 as it previously read below -1.0 dB. If the 313A meter reads above -1.0 dB, adjust A3R23 until the meter reads as much below -1.0 dB as it previously read above -1.0.
- e. Turn the substitution attenuator to 4 dB and readjust the 313A SCALE OFFSET controls for a meter reading of +1.0 dB.
- f. Repeat steps b through e several times until no error exists at either end of the scale.
- g. Turn the substitution attenuator to 0 dB. Turn the 313A SCALE OFFSET Coarse control full CCW with the Fine control centered. The 313A meter should read 0.0 or less.
- h. Adjust the 313A SCALE OFFSET controls so that the 313A meter reads +1.0 dB. Turn the substitution attenuator control to 2 dB. The 313A meter should read -1.0 dB $\pm$ 0.02 dB.
- i. Readjust the 313A SCALE OFFSET controls so that the 313A meter reads +1.0 dB and repeat steps h, through 10 dB of attenuation.
- j. Turn the 313A SCALE OFFSET Coarse Control full CW with the Fine control centered. The 313A meter must read 0.0 or greater.

5-28. FREQUENCY RESPONSE ADJUSTMENT.

- a. Connect the 313A, 312A, 419A Voltmeter, H01-11050A Thermal Converter and Bucking Supply as shown in Figure 5-2.
- b. Set the 313A controls as follows:

```

OSCILLATOR MODE . . . . TRACK 312A
METER MODE . . . . . OUTPUT MONITOR
MAX OUTPUT . . . . . +10 DBM
ATTENUATORS . . . . . 00.0
  
```

- c. Set the 312A frequency to 10 kHz with the variable frequency control and the FREQUENCY RANGE switch set to 0.
- d. Set the 419A to the 10 mV range and the Bucking Supply to OFF. Push the VM button on the 419A. The 419A should read between 6 and 8 millivolts.
- e. Turn ON the Bucking Supply and adjust the controls for a null on the 419A.
- f. Turn the 419A RANGE switch to the 300 μ V range and if necessary, readjust the Bucking Supply controls for a null on the 419A.
- g. Turn the 313A 0.1 dB attenuator one step CCW and note the 419A reading. This represents 0.1 dB deviation for the following check. Return the attenuator to zero.
- h. Tune the 312A slowly between 10 kHz and 18 MHz (for H01-312A, tune between 10 kHz and 22 MHz) noting any deviations in the 419A meter. Any deviations should not exceed the value noted in step g.
- i. Switch the 313A OSCILLATOR MODE switch to INTERNAL and slowly tune the 313A from 1 kHz to 22 MHz noting any deviations on the 419A meter. Any deviations should not exceed the value recorded in step g.
- j. With the 313A frequency set to 22 MHz, adjust A8C33 (frequency response) for zero on the 419A meter and repeat steps a through i.
- k. If necessary, A8C33 may be readjusted to meet the limits of steps f and i. If A8C33 has insufficient range to meet the limits of steps f and i A8C26 may be changed. If the limits cannot be met due to A8C33 reaching its minimum capacitance setting, increase the value of A8C26 approximately 3 picofarads and again perform step f through i. If the limits cannot be reached due to A8C33 reaching minimum capacitance setting, decrease the value of A8C26 by 3 picofarads and again perform steps f through i.
- l. Change the 313A attenuators to 11.1 and the output frequency to 1 MHz.
- m. Change both the 419A and bucking supply to the 1 mV range and adjust the bucking supply for a null on the 419A meter.
- n. Tune the 313A slowly from 1 MHz to 22 MHz noting any deviations on the 419A meter. Any deviations should not exceed the value noted in step g.
- o. If the 419A indication at the high end exceeds the value noted in step g increase A8C37 by 5 pF and repeat steps l through n. If the 419A indicates high decrease A8C37 by 5 pF and again perform steps l through n.
- p. Set the 313A output frequency to 1 MHz. Change the 313A 10 dB step attenuator to zero and at the same time change the MAX OUTPUT switch to 0 DBM. If necessary, readjust the bucking supply for a zero indication on the 419A meter.
- q. Tune the 313A from 1 MHz to 22 MHz, noting any deviations on the 419A meter. The 419A should not deviate more than the value noted in step g.
- r. If the 419A exceeds the value noted in step g (1% deviation) increase A8C38 to lower the 419A indication in the middle of the band and increase the value of A8R59 to bring up the response on the high end of the band.

5-29. TROUBLESHOOTING.

5-30. The following procedures are designed to aid the user in locating malfunctions in the Model 313A in a minimum of time. Included is a troubleshooting tree which, if followed in numerical sequence, should reduce the time required to isolate the malfunction to a particular block (See Figure 5-12).

5-31. If should first be determined by the Performance Checks (Paragraph 5-8) or the Adjustment and Calibration procedures (Paragraph 5-17) that a malfunction does exist. Once this has been determined, visually inspect the instrument for loose wires, burned or shorted components and possibly any foreign matter such as nuts, screws and washers that might have become trapped inside the instrument. If no defect can be found visually, continue with the following procedures.

5-32. PROCEDURE.

5-33. Since the 313A has two modes of operation, the malfunction can readily be isolated to one of three areas. Table 5-5 and Figure 5-10 will help to isolate the malfunction to a particular area.

NOTE

The above procedure assumes that the Thermal Converter is perfectly flat over the frequency range used. If the calibration chart accompanying the Thermal Converter shows any deviations greater than 0.25% over the frequency range of 10 kHz to 22 MHz, this deviation must be subtracted from the deviations noted in the 313A output response curve.

Table 5-5. Area Troubleshooting

MODE	OUTPUT NORMAL AT J7 (0.866 V rms into 75Ω)	TROUBLE AREA
INTERNAL TRACK 312A	YES NO	#1
INTERNAL TRACK 312A	NO YES	#2
INTERNAL TRACK 312A	NO NO	#3
AREA #1 (TRACK 312) Delta Oscillator A2 Single Sideband Generator A9 Buffer Amplifier A10 AREA #2 (INTERNAL) Local Oscillator A12 Crystal Oscillator A4 AREA #3 Power Supply A1 AGC Amplifier A5 Mixer A6 Low Pass Filter A7 Power Amplifier P/O A8 Average Detector P/O A8 AGC Control Amplifier P/O A3 10 dB Attenuator Pad P/O A8 Attenuators A13 and A14 Broadband Amplifier A11		

Figure 5-8. Area Troubleshooting

5-34. The Troubleshooting Tree (Figure 5-10) when used in conjunction with the functional block diagram (Figure 7-3) and schematic diagrams (Figure 7-4 through 7-9) will greatly simplify troubleshooting the Model 313A. To use the troubleshooting tree, begin at ① and continue in numerical sequence according to the results (true or false) of the checks indicated on the troubleshooting tree. If any test fails refer to the schematic diagrams and utilize the voltage levels to aid in determining the cause of failure.

5-35. Check the AGC voltage at C16 on the RF casting. If the AGC voltage is abnormal (+0.5 to +1 volt is normal) disconnect the lead from C16 and substitute an external AGC voltage while troubleshooting the closed loop (See Figure 5-9). Adjust the potentiometer R1 for approximately 0.7 volts.

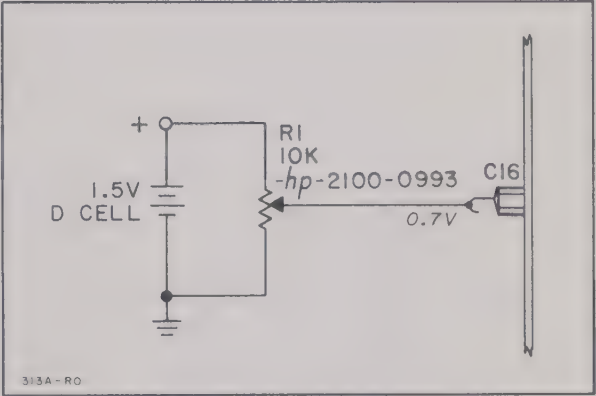


Figure 5-9. AGC Substitution Test Setup

PERFORMANCE CHECK TEST CARD

Hewlett-Packard Model: 313A
Tracking Oscillator
Serial No. _____

Tests Performed by: _____
Date _____

DESCRIPTION	CHECK
1. DIAL ACCURACY CHECK a. 1 MHz b. 2 MHz	_____ 1 MHz $\pm$ 220 kHz _____ 2 MHz $\pm$ 220 kHz
2. OUTPUT MONITOR CHECK	_____ 0.866 V $\pm$ 0.008 V
3. METER EXPAND AND TRACKING a. +1 dB b. -1 dB	_____ +1 dB $\pm$ 0.05 dB _____ -1 dB $\pm$ 0.05 dB
4. OUTPUT FREQUENCY RESPONSE CHECK a. Track 312A Mode, +10 dBm b. Internal Mode, +10 dBm c. Internal Mode, 0 dBm	_____ > $\pm$ 0.1 dB deviation _____ > $\pm$ 0.1 dB deviation _____ > $\pm$ 0.1 dB deviation
5. ATTENUATOR ACCURACY CHECK a. 10 dB Attenuator (1) 00.0 dB (2) 10.0 dB (3) 20.0 dB (4) 30.0 dB (5) 40.0 dB (6) 50.0 dB (7) 60.0 dB (8) 70.0 dB (9) 80.0 dB (10) 90.0 dB b. 1 dB Attenuator (1) 00.0 dB (2) 01.0 dB (3) 02.0 dB (4) 03.0 dB (5) 04.0 dB (6) 05.0 dB (7) 06.0 dB (8) 07.0 dB (9) 08.0 dB (10) 09.0 dB c. 0.1 dB Attenuator (1) 00.0 dB (2) 00.1 dB (3) 00.2 dB (4) 00.3 dB (5) 00.4 dB (6) 00.5 dB (7) 00.6 dB (8) 00.7 dB (9) 00.8 dB (10) 00.9 dB	_____ 0.0 (Reference) _____ 0.0 $\pm$ 0.1 dB _____ 0.0 $\pm$ 0.1 dB _____ 0.0 $\pm$ 0.1 dB _____ 0.0 $\pm$ 0.1 dB _____ 0.0 $\pm$ 0.1 dB _____ 0.0 $\pm$ 0.1 dB _____ 0.0 $\pm$ 0.2 dB _____ 0.0 $\pm$ 0.2 dB _____ 0.0 $\pm$ 0.2 dB _____ 0.0 $\pm$ 0.2 dB _____ 0.0 (Reference) _____ 0.0 $\pm$ 0.1 dB _____ 0.0 $\pm$ 0.1 dB _____ 0.0 $\pm$ 0.1 dB _____ 0.0 $\pm$ 0.1 dB _____ 0.0 $\pm$ 0.1 dB _____ 0.0 $\pm$ 0.1 dB _____ 0.0 $\pm$ 0.1 dB _____ 0.0 $\pm$ 0.1 dB _____ 0.0 (Reference) _____ 0.1 $\pm$ 0.02 dB _____ 0.2 $\pm$ 0.02 dB _____ 0.3 $\pm$ 0.02 dB _____ 0.4 $\pm$ 0.02 dB _____ 0.5 $\pm$ 0.02 dB _____ 0.6 $\pm$ 0.02 dB _____ 0.7 $\pm$ 0.02 dB _____ 0.8 $\pm$ 0.02 dB _____ 0.9 $\pm$ 0.02 dB


DESCRIPTION	CHECK
6. NON-HARMONIC DISTORTION CHECK a. Distortion (1) 20 kHz (2) 20 kHz + 35 Hz (3) 20 kHz + 70 Hz (4) 20 kHz + 105 Hz (5) 20 kHz + 140 Hz (6) 20 kHz + 175 Hz (7) 20 kHz + 245 Hz (8) 20 kHz - 35 Hz (9) 20 kHz - 70 Hz (10) 20 kHz - 105 Hz (11) 20 kHz - 140 Hz (12) 20 kHz - 175 Hz (13) 20 kHz - 245 Hz b. 312A Tuning 1000.00 kHz	(Reference) _____ Down > 40 dB _____ Down > 40 dB _____ Down > 40 dB _____ Down > 40 dB _____ Down > 40 dB _____ Down > 40 dB _____ Down > 40 dB _____ Down > 40 dB _____ Down > 40 dB _____ Down > 40 dB _____ Down > 40 dB _____ Down > 40 dB _____ Down > 40 dB _____ 1000.03 or 1000.04 _____ Counter Indication
7. HARMONIC DISTORTION CHECK a. Tuning 1 MHz b. Tuning 9.5 MHz c. Tuning 20.5 MHz	_____ Down > 34 dB _____ Down > 34 dB _____ Down > 34 dB

NOTE

The voltage levels indicated on this troubleshooting tree are nominal values and may vary slightly from one instrument to another. Therefore the indicated values should be used for troubleshooting purposes only and not for adjustments. Use a 10:1 oscilloscope probe to prevent loading. An oscilloscope with a pass band of at least 30 MHz should be used.

Set the 313A controls as follows unless otherwise indicated in the troubleshooting tree.

OSCILLATOR MODE	INTERNAL
METER MODE	OUTPUT MONITOR
MAX OUTPUT	+ 10 dBm
ATTENUATORS	00.0
FREQUENCY DIAL	1 MHz

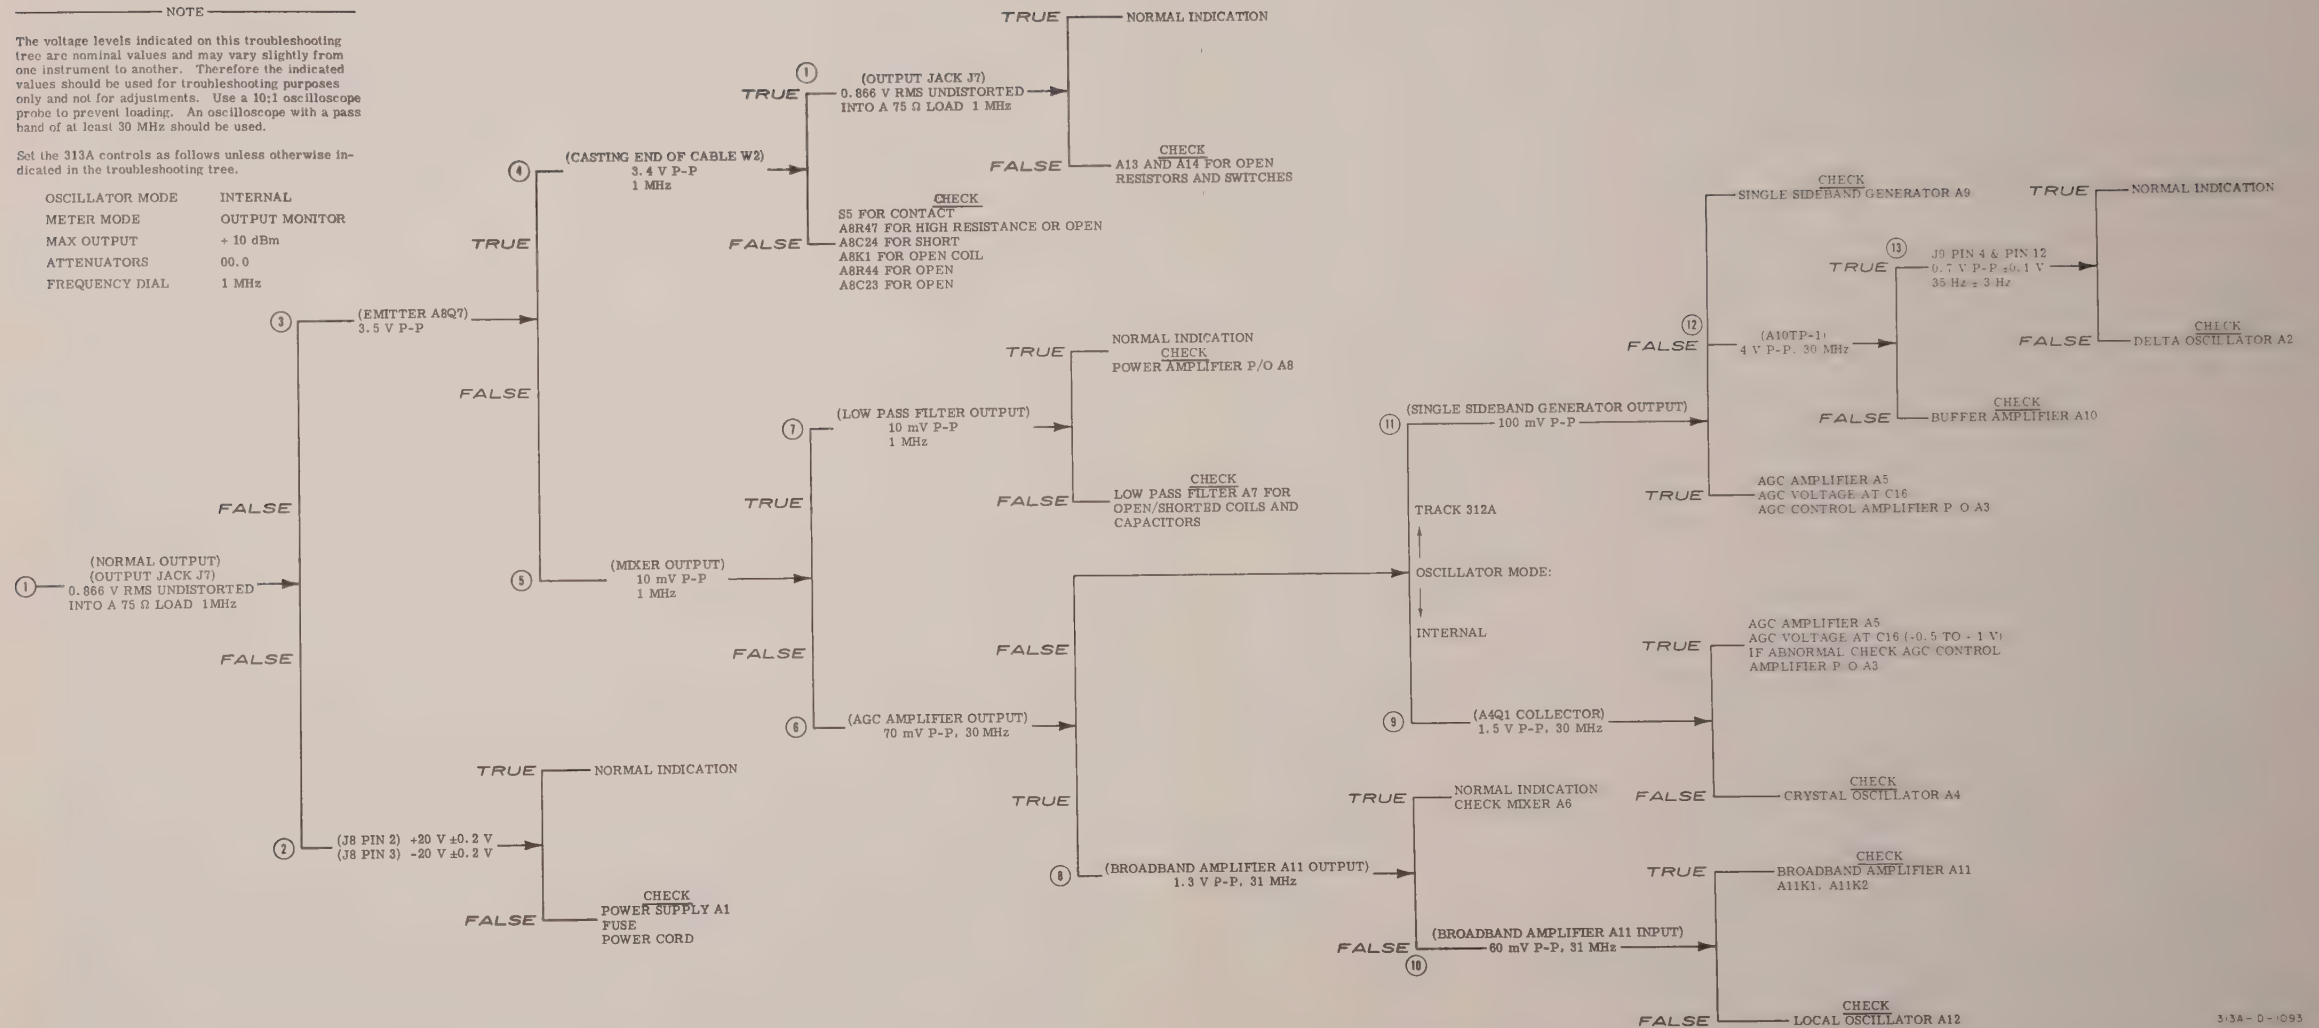

313A-0-1093

Figure 5-10. Troubleshooting Tree

SECTION VI

REPLACEABLE PARTS

6-1. INTRODUCTION.

6-2. This section contains information for ordering replacement parts. Table 6-1 lists parts in alphabetic order of their reference designators and indicates the description, -hp- part number of each part, together with any applicable notes, and provides the following:

- a. Total quantity used in the instrument (TQ column). The total quantity of a part is given the first time the part number appears.
- b. Description of the part. (See list of abbreviations below.)
- c. Typical manufacturer of the part in a five-digit code. (See Appendix A for list of manufacturers.)
- d. Manufacturer's part number.

6-3. Miscellaneous parts are listed at the end of Table 6-1.

6-4. ORDERING INFORMATION.

6-5. To obtain replacement parts, address order or inquiry to your local Hewlett-Packard Field Office. (See Appendix B for list of office locations.) Identify parts by their Hewlett-Packard part numbers.

6-6. NON-LISTED PARTS.

6-7. To obtain a part that is not listed, include:

- a. Instrument model number.
- b. Instrument serial number.
- c. Description of the part.
- d. Function and location of the part.


DESIGNATORS

A	= assembly	F	= fuse	MP	= mechanical part	TC	= thermocouple
B	= motor	FL	= filter	P	= plug	V	= vacuum tube, neon bulb, photocell, etc.
BT	= battery	HR	= heater	Q	= transistor	W	= cable
C	= capacitor	IC	= integrated circuit	QCR	= transistor-diode	X	= socket
CR	= diode	J	= jack	R	= resistor	XDS	= lampholder
DL	= delay line	K	= relay	RT	= thermistor	XF	= fuseholder
DS	= lamp	L	= inductor	S	= switch	Z	= network
E	= misc electronic part	M	= meter	T	= transformer		

ABBREVIATIONS


Ag	= silver	ID	= inside diameter	ns	= nanosecond (s) = 10^{-9} seconds	sl	= slide
Al	= aluminum	imp	= impregnated	nsr	= not separately replaceable	SPDT	= single-pole double-throw
A	= ampere (s)	incd	= incandescent			SPST	= single-pole single-throw
Au	= gold	ins	= insulation (ed)	Ω	= ohm (s)	Ta	= tantalum
C	= capacitor	k Ω	= kilohm (s) = 10^3 ohms	obd	= order by description	TC	= temperature coefficient
cer	= ceramic	kHz	= kilohertz = 10^3 hertz	OD	= outside diameter	TiO ₂	= titanium dioxide
coef	= coefficient	L	= inductor	p	= peak	tog	= toggle
com	= common	lin	= linear taper	pc	= printed circuit	tol	= tolerance
comp	= composition	log	= logarithmic taper	pF	= picofarad (s) = 10^{-12} farads	trim	= trimmer
conn	= connection	m	= milli = 10^{-3}	piv	= peak inverse voltage	TSTR	= transistor
dep	= deposited	mA	= milliampere (s) = 10^{-3} amperes	p/o	= part of	V	= volt (s)
DPDT	= double-pole double-throw	MHz	= megahertz = 10^6 hertz	pos	= position (s)	vacw	= alternating current working voltage
DPST	= double-pole single-throw	M Ω	= megohm (s) = 10^6 ohms	pot	= potentiometer	var	= variable
elect	= electrolytic	met flm	= metal film	p-p	= peak-to-peak	vdew	= direct current working voltage
encap	= encapsulated	mfr	= manufacturer	ppm	= parts per million	W	= watt (s)
F	= farad (s)	mtg	= mounting	prec	= precision (temperature coefficient, long term stability, and/or tolerance)	w/	= with
FET	= field effect transistor	mV	= millivolt (s) = 10^{-3} volts	R	= resistor	wiv	= working inverse voltage
fxd	= fixed	μ	= micro = 10^{-6}	Rh	= rhodium	w/o	= without
GaAs	= gallium arsenide	μ V	= microvolt (s) = 10^{-6} volts	rms	= root-mean-square	ww	= wirewound
GHz	= gigahertz = 10^9 hertz	my	= Mylar ^(R)	rot	= rotary	*	= optimum value selected at factory, average value shown (part may be omitted)
gd	= guard (ed)	nA	= nanoampere (s) = 10^{-9} amperes	Se	= selenium	**	= no standard type number assigned (selected or special type)
Ge	= germanium	NC	= normally closed	sect	= section (s)		
grd	= ground (ed)	Ne	= neon	Si	= silicon		
H	= henry (ies)	NO	= normally open				
Hg	= mercury	NPO	= negative positive zero (zero temperature coefficient)				
Hz	= hertz (cycle (s) per second)						

^(R) Dupont de Nemours

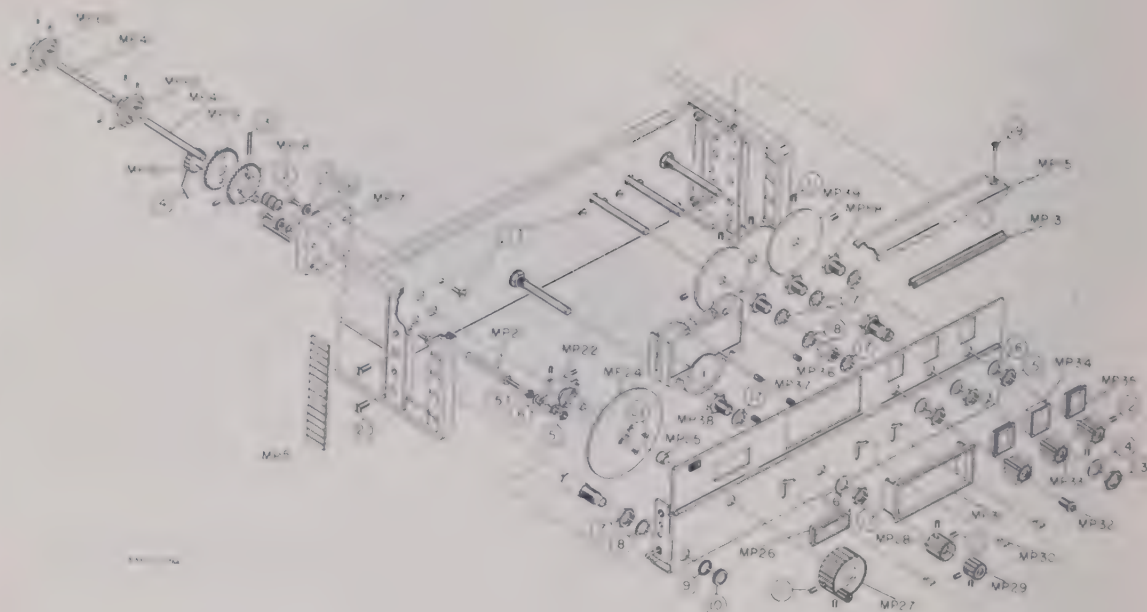


DESCRIPTION	-hp- PART NO.
1. Screw	2390-0007
2. Screw	2380-0001
3. Screw; set	3030-0023
4. Spring; thrust	1460-0114
5. Nut	2260-0001
6. Washer; lock	2190-0001
7. Nut	0590-0038
8. Washer; lock	2190-0068
9. Nut Part of 3101-0100 Switch Assembly	
10. Nut Part of 3101-0100 Switch Assembly	
11. Screw; Set #8-32 x 3/16 Allen	3030-0001
12. Screw; Set #6-32 x 1/8 Allen	3030-0022
13. Nut	2950-0054
14. Washer; flat	3050-0064
15. Nut; 3/8 x 32	2950-0001
16. Washer; flat	3050-0067
17. Washer; 3/8"	2190-0016
18. Washer; 1/4" lock	2190-0027
19. Screw; #6-32	2370-0016
20. Screw; #8-32	2530-0011
21. Screw	0520-0018

Figure 6-1. Attaching Hardware

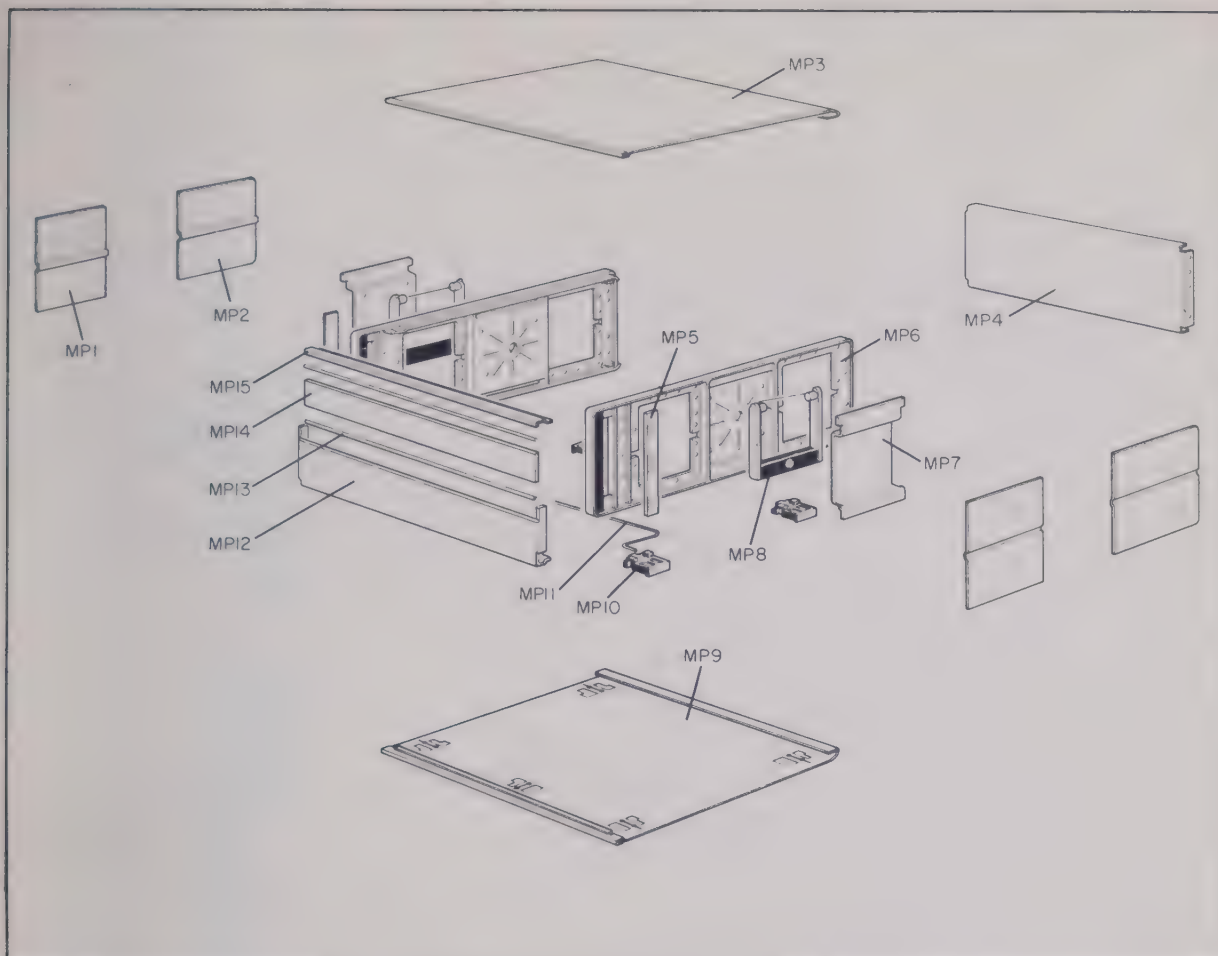

DESIGNATOR	DESCRIPTION	-hp- PART NO.
MP-1	Cover: side front	5000-0737
MP-2	Cover: side rear	5000-0736
MP-3	Cover: top	5060-0740
MP-4	Panel: rear	00313-00202
MP-5	Plate: fluted aluminum	5000-0051
MP-6	Frame	00313-24401
MP-7	Retainer: 4H handle	5060-0766
MP-8	Handle	5060-0763
MP-9	Cover: bottom	5060-0752
MP-10	Foot	5060-0767
MP-11	Stand: tilt	1490-0030
MP-12	Panel: front	00313-00201
MP-13	Strip: trim	5000-5835
MP-14	Panel: plate	00313-04301
MP-15	Strip: top front panel	5000-5836

Figure 6-2. Chassis and Cover Component Identification

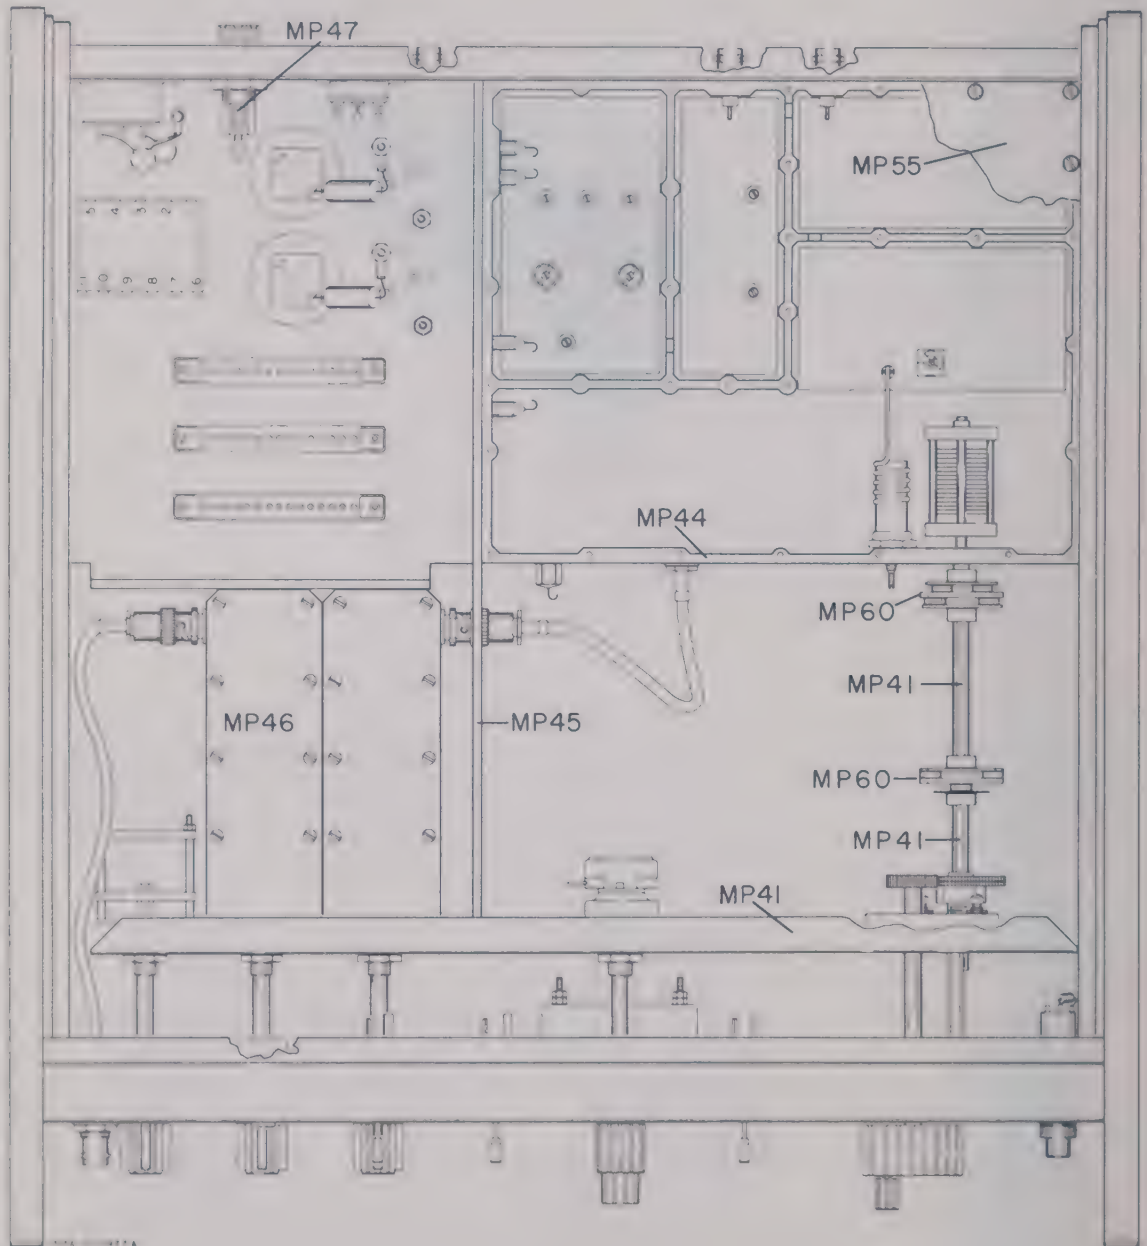

BOTTOM VIEW

Figure 6-3. Mechanical Parts Location

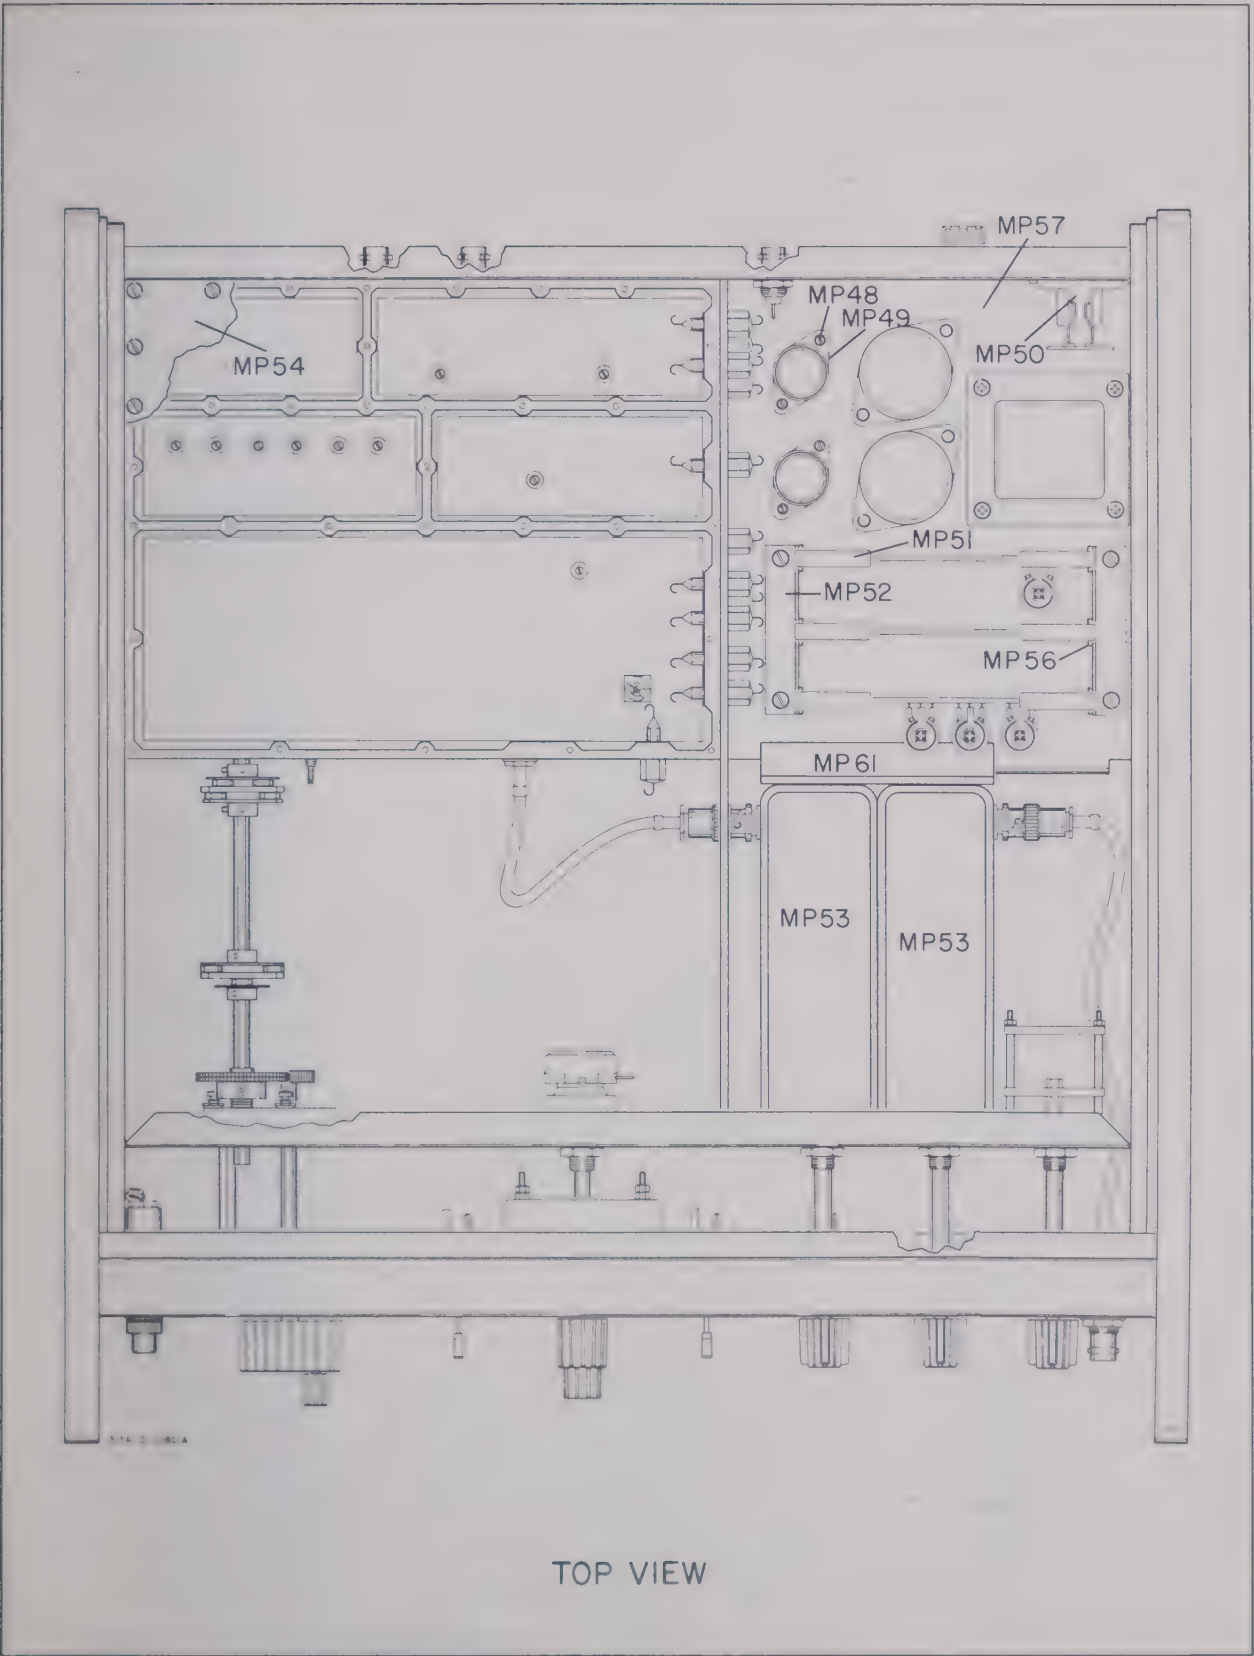


Figure 6-4. Mechanical Parts Location

Table 6-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	-hp- PART NO.	TQ	DESCRIPTION	MFR	MFR PART NO
A1			POWER SUPPLY ASSEMBLY.		
	00313-66501	1	PC Board Assembly	-hp-	
	1480-0116	2	Rollpin: steel plain	84396	59-032-156-1000
	5040-1464	2	Extractor	-hp-	
C1	0180-0149	4	C: fxd Al elect 65 μ F +100% -10% 60 vdcw	56289	Type 30D D36978-DSM
C2	0150-0093	41	C: fxd cer 0.01 μ F +80% -20% 100 vdcw	91418	TA obd
C3	0180-0149		C: fxd Al elect 65 μ F +100% -10% 60 vdcw	56289	Type 30D D36978-DSM
C4	0180-0045	2	C: fxd Al elect 20 μ F +75% -10% 25 vdcw	56289	30D206G025CB2-DSM
C5	0180-0149		C: fxd Al elect 65 μ F +100% -10% 60 vdcw	56289	Type 30D D36987-DSM
C6	0150-0093		C: fxd cer 0.01 μ F +80% -20% 100 vdcw	91418	TA obd
C7	0180-0045		C: fxd Al elect 20 μ F +75% -10% 25 vdcw	56289	30D206G025CB2-DSM
C8	0180-0149		C: fxd Al elect 65 μ F +100% -10% 60 vdcw	56289	Type 30D D36978-DSM
CR1 thru CR4	1901-0026	4	Diode: Si 200 piv	24446	obd
CR5	1901-0025	1	Diode: Si 100 piv 12 pF 100 mA	04651	D3072
CR6	1902-0048	1	Diode: breakdown zener 6.81 V $\pm$ 5% 400 mW	04713	SZ10939-134
Q1 thru Q4	1854-0215	8	TSTR: Si NPN 2N3904	04713	obd
R1	0686-5115	2	R: fxd comp 510 Ω $\pm$ 5% 1/2 W	01121	EB 5115
R2, R3	0683-5125	4	R: fxd comp 5100 Ω $\pm$ 5% 1/4 W	01121	CB 5125
R4	0683-5625	2	R: fxd comp 5600 Ω $\pm$ 5% 1/4 W	01121	CB 5625
R5	0698-3515	1	R: fxd met flm 5900 Ω $\pm$ 1% 1/8 W	19701	MF5C T-O obd
R6	0698-3497	1	R: fxd met flm 6040 Ω $\pm$ 1% 1/8 W	19701	MF5C T-O obd
R7*	0698-3442	1	R: fxd met flm 237 Ω $\pm$ 1% 1/8 W	75042	CEA T-O obd
R8, R9	0683-5125		R: fxd comp 5100 Ω $\pm$ 5% 1/4 W	01121	CB 5125
R10	0686-5115		R: fxd comp 510 Ω $\pm$ 5% 1/2 W	01121	EB 5115
R11	0683-5625		R: fxd comp 5600 Ω $\pm$ 5% 1/4 W	01121	CB 5625
R12	0683-3925	1	R: fxd comp 3900 Ω $\pm$ 5% 1/4 W	01121	CB 3925
R13	0757-0437	1	R: fxd met flm 4750 Ω $\pm$ 1% 1/8 W	19701	MF5C T-O obd
R14	0698-3226	1	R: fxd met flm 6490 Ω $\pm$ 1% 1/8 W	19701	MF5C T-O obd
R15	2100-0962	2	R: var comp lin 3000 Ω $\pm$ 30% 1/4 W	09569	MTC-1
A2			DELTA OSCILLATOR ASSEMBLY.		
	00313-66502	1	PC Board Assembly	-hp-	
	1480-0116	2	Rollpin: steel plain	84396	59-032-156-1000
	5040-1464	2	Extractor	-hp-	
C1	0180-0101	2	C: fxd Ta elect 1.8 μ F $\pm$ 10% 20 vdcw	56289	150D225X9020A2-DYS
C2	0180-1800	2	C: fxd Al elect 100 μ F +100% -10% 6 vdcw	56289	30D603 DSM
C3	0180-0101		C: fxd Ta elect 1.8 μ F $\pm$ 10% 20 vdcw	56289	150D225X9020A2-DYS
C4	0180-1800		C: fxd Al elect 100 μ F +100% -10% 6 vdcw	56289	30D603 DSM
C5	0150-0093		C: fxd cer 0.01 μ F +80% -20% 100 vdcw	91418	TA obd
C6	0180-0294	1	C: fxd Ta elect 390 μ F $\pm$ 20% 10 vdcw	56289	109D397X0010T2
DS1	2140-0248	1	Lamp: incandescent	24446	7344 obd
Q1	1853-0036	5	TSTR: Si PNP 2N3906	04713	2N3906-18
Q2	1854-0215	2	TSTR: Si PNP 2N3904	07263	obd

Table 6-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	-hp- PART NO.	TQ	DESCRIPTION	MFR.	MFR. PART NO
A2 (Cont'd)					
Q3	1853-0036		TSTR: Si PNP 2N3906	04713	2N3906-18
Q4	1854-0215		TSTR: Si PNP 2N3904	07263	obd
Q5	1853-0036		TSTR: Si PNP 2N3906	04713	2N3906-18
R1, R2	0683-2425	5	R: fxd comp 2400 Ω $\pm 5\%$ 1/4 W	01121	CB 2425
R3	0698-3492	2	R: fxd met flm 2670 Ω $\pm 1\%$ 1/8 W	75042	CEA T-O obd
R4	0683-1025	16	R: fxd comp 1000 Ω $\pm 5\%$ 1/4 W	01121	CB 1025
R5	0683-5115	9	R: fxd comp 510 Ω $\pm 5\%$ 1/4 W	01121	CB 5115
R6, R7	0683-2425	5	R: fxd comp 2400 Ω $\pm 5\%$ 1/4 W	01121	CB 2425
R8	0698-3492		R: fxd met flm 2670 Ω $\pm 1\%$ 1/8 W	91637	obd
R9	0683-1025		R: fxd comp 1000 Ω $\pm 5\%$ 1/4 W	01121	CB 1025
R10	0683-5115		R: fxd comp 510 Ω $\pm 5\%$ 1/4 W	01121	CB 5115
R11*	0683-5615	2	R: fxd comp 560 Ω $\pm 5\%$ 1/4 W	01121	CB 5615
R12	0686-1825	1	R: fxd comp 1800 Ω $\pm 5\%$ 1/2 W	01121	EB 1825
R13, R14	0683-1035	7	R: fxd comp 10 k Ω $\pm 5\%$ 1/4 W	01121	CB 1035
A3					
METER EXPAND AMPLIFIER AND AGC CONTROL AMPLIFIER ASSEMBLY.					
C1, C2	00313-66503 0150-0093	1	PC Board Assembly C: fxd cer 0.01 μ F $\pm 80\%$ -20% 100 vdcw	-hp- 56289	Type 30D D36978-DSM
C3	0180-0354	5	C: fxd Ta elect 40 μ F $\pm 5\%$ 10 vdcw	56289	150D406X5010B2-DYS
	5040-1464	2	Extractor	-hp-	
	1480-0116	2	Rollpin: steel plain	84396	59-032-156-1000
C4	0140-0190	1	C: fxd mica 39 pF $\pm 5\%$	04062	RDM15E390J3C
C5	0160-0302	1	C: fxd my 0.018 μ F $\pm 10\%$ 200 vdcw	56289	192P18392-PTS
C6	0180-0376	1	C: fxd Ta elect 0.47 μ F $\pm 10\%$ 35 vdcw	56289	150D474X9035A2-DYS
CR1	1902-0018	1	Diode: breakdown zener 11.7 V $\pm 5\%$	04713	obd
Q1 thru Q4	1854-0033	10	TSTR: Si NPN 2N3391	24446	2N3391
Q5	1853-0036	2	TSTR: Si PNP 2N3906	04713	2N3906-18
Q6	1854-0033		TSTR: Si NPN 2N3391	24446	2N3391
Q7	1854-0215		TSTR: Si NPN 2N3904	04713	2N3904
Q8	1853-0036		TSTR: Si PNP 2N3906	04713	2N3906-18
Q9 thru Q13	1854-0033		TSTR: Si NPN 2N3391	24446	2N3391
R1*	0698-4020		R: fxd met flm 9.53 k Ω $\pm 1\%$ 1/8 W	19701	MF5C T-O obd
R2	0757-0482		R: fxd met flm 511 k Ω $\pm 1\%$ 1/8 W	75042	CEA T-O obd
R3	0698-3557	1	R: fxd met flm 806 Ω $\pm 1\%$ 1/8 W	75042	CEA T-O obd
R4	0757-0200	1	R: fxd met flm 5620 Ω $\pm 1\%$ 1/8 W	19701	MF5C T-O obd
R5	0757-0465	2	R: fxd met flm 100 k Ω $\pm 1\%$ 1/8 W	19701	MF5C T-O obd
R6	0757-0280	6	R: fxd met flm 1000 Ω $\pm 1\%$ 1/8 W	75042	CEA T-O obd
R7	0757-0465		R: fxd met flm 100 k Ω $\pm 1\%$ 1/8 W	19701	MF5C T-O obd
R8	0683-6825	2	R: fxd comp 6800 Ω $\pm 5\%$ 1/4 W	01121	CB 6825
R9	0757-0280		R: fxd met flm 1000 Ω $\pm 1\%$ 1/8 W	75042	CEA T-O obd
R10	0698-3260	1	R: fxd met flm 464 k Ω $\pm 1\%$ 1/8 W	19701	MF5C T-O obd
R11	0698-3162	1	R: fxd met flm 46.4 k Ω $\pm 1\%$ 1/8 W	19701	MF5C T-O obd
R12	0757-0288	2	R: fxd met flm 9090 Ω $\pm 1\%$ 1/8 W	75042	CEA T-O obd
R13	0698-4429	1	R: fxd met flm 1870 Ω $\pm 1\%$ 1/8 W	75042	CEA T-O obd
R14	2100-0909	2	R: var comp lin 100 Ω $\pm 30\%$ 1/4 W	37942	MTC-1 obd
R15	0757-0420	3	R: fxd met flm 750 Ω $\pm 1\%$ 1/8 W	75042	CEA T-O obd
R16	0757-0440	2	R: fxd met flm 7500 Ω $\pm 1\%$ 1/8 W	19701	MF5C T-O obd
R17	0757-0441	1	R: fxd met flm 8250 Ω $\pm 1\%$ 1/8 W	19701	MF5C T-O obd
R18	0757-0440		R: fxd met flm 7500 Ω $\pm 1\%$ 1/8 W	19701	MF5C T-O obd
R19	0757-0482		R: fxd met flm 511 k Ω $\pm 1\%$ 1/8 W	75042	CEA T-O obd
R20	0757-0276	1	R: fxd met flm 61.9 Ω $\pm 1\%$ 1/8 W	75042	CEA T-O obd

Table 6-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	-hp- PART NO.	TQ	DESCRIPTION	MFR	MFR. PART NO
A3 (Cont'd)					
R21, R22	0757-0427	2	R: fxd met flm 1.5 k Ω $\pm 1\%$ 1/8 W	75042	CEA T-O obd
R23	2100-0909		R: var comp lin 100 Ω $\pm 30\%$ 1/4 W	37942	MTC-1 obd
R24	0698-4421	1	R: fxd met flm 249 Ω $\pm 1\%$ 1/8 W	75042	CEA T-O obd
R25	0698-3155	1	R: fxd met flm 4640 Ω $\pm 1\%$ 1/8 W	75042	CEA T-O obd
R26*	0757-0288		R: fxd met flm 9090 Ω $\pm 1\%$ 1/8 W	75042	CEA T-O obd
R27	0698-4055	1	R: fxd met flm 1000 Ω $\pm 1/4\%$ 1/8 W	19701	MF5C T-O obd
R28	0757-0199	1	R: fxd met flm 21.5k Ω $\pm 1\%$ 1/8 W	19701	MF5C T-O obd
R29	0757-0439	1	R: fxd met flm 6810 Ω $\pm 1\%$ 1/8 W	19701	MF5C T-O obd
R30	0757-0280		R: fxd met flm 1000 Ω $\pm 1\%$ 1/8 W	75042	CEA T-O obd
R31	2100-0908		R: var comp lin 2000 Ω $\pm 30\%$ 1/4 W	37942	MTC-1 obd
R32, R33	0757-0465		R: fxd met flm 100 k Ω $\pm 1\%$ 1/8 W	19701	MF5C T-O obd
A4					
	00313-66504	1	PC Board Assembly	-hp-	
C1	0160-0763	1	C: fxd mica 5 pF $\pm 10\%$	04062	RDM150C050K5S
C2, C3	0150-0093	2	C: fxd 0.01 μ F $+80\%$ -20% 100 vdcw	91418	TA obd
C4	0140-0196	3	C: fxd mica 150 pF $\pm 5\%$	04062	RDM15F151J3C
C5	0140-0178	2	C: fxd mica 560 pF $\pm 2\%$	04062	RDM15F751J3S
L1	9140-0047	1	Choke: R. F. 20 μ H $\pm 10\%$	99848	H51074020
L2	9100-1366	1	Coil: Inductor var 5-1/2 turns	-hp-	
Q1	1854-0057	1	TSTR: 2N3855	24446	obd
R1, R2	0683-2035	8	R: fxd comp 20 k Ω $\pm 5\%$ 1/4 W	01121	CB 2035
R3	0683-1035		R: fxd comp 10 k Ω $\pm 5\%$ 1/4 W	01121	CB 1035
R4	0683-1525	1	R: fxd comp 1500 Ω $\pm 5\%$ 1/4 W	01121	CB 1525
Y1	0410-0137	1	Crystal Quartz: 30 MHz $\pm 0.001\%$ Third Overtone	91418	HP0030
A5					
	00313-66505	1	PC Board Assembly	-hp-	
C1	0160-0938	2	C: fxd mica 1000 pF $\pm 5\%$	00853	RDM15E102J1C
C2, C3	0150-0093		C: fxd cer 0.01 μ F $+80\%$ -20% 100 vdcw	91418	TA obd
C4	0140-0196		C: fxd mica 150 pF $\pm 5\%$	04062	RDM15F151J3C
C5	0160-2035		C: fxd mica 750 pF $\pm 5\%$ 300 V	14655	RDM15F391J3C
C6	0150-0029	1	C: fxd TiO ₂ 1 pF $\pm 10\%$ 500 vdcw	78488	Type GA obd
C7	0160-0938		C: fxd mica 1000 pF $\pm 5\%$	00853	RDM15E102J1C
C8, C9	0150-0093		C: fxd cer 0.01 μ F $+80\%$ -20% 100 vdcw	91418	TA obd
C10	0140-0196		C: fxd mica 150 pF $\pm 5\%$	04062	RDM15F151J3C
C11	0160-2035	2	C: fxd mica 750 pF $\pm 5\%$ 300 V	04062	RDM15F751J3S
CR1, CR2	1901-0027	2	Diode: Si 1N4392 1 pF 10 wiv 0.5 ns	73293	obd
L1, L2	9100-1366		Coil: Inductor var 5-1/2 turns	-hp-	
Q1, Q2	1854-0219	12	TSTR: Si NPN 2N3663	24446	obd
R1, R2	0683-2035	4	R: fxd comp 20 k Ω $\pm 5\%$ 1/4 W	01121	CB 2035
R3	0683-3325	2	R: fxd comp 3300 Ω $\pm 5\%$ 1/4 W	01121	CB 3325
R4	0757-0283	1	R: fxd met flm 2000 Ω $\pm 1\%$ 1/8 W	75042	CEA T-O obd
R5	0757-0277		R: fxd met flm 49.9 Ω $\pm 1\%$ 1/8 W	75042	CEA T-O obd
R6, R7	0683-2035	4	R: fxd comp 20 k Ω $\pm 5\%$ 1/4 W	01121	CB 2035
R8	0683-3325	2	R: fxd comp 3300 Ω $\pm 5\%$ 1/4 W	01121	CB 3325
T1, T2	9100-1361	2	Transformer: Trifilar core	-hp-	

Table 6-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	-hp- PART NO.	TQ	DESCRIPTION	MFR.	MFR. PART NO.
A6			OUTPUT MIXER ASSEMBLY.		
	00313-66506	1	PC Board Assembly	-hp-	
CR1 thru CR4	1910-0022	6	Diode: Ge 5 wiv 3.5 ns	93332	obd
R1	0698-4397	1	R: fxd met flm $84.5\Omega \pm 1\%$ 1/8 W	75042	CEA T-O obd
R2	0698-4415	1	R: fxd met flm $165\Omega \pm 1\%$ 1/8 W	75042	CEA T-O obd
R3 thru R6	0698-3444	4	R: fxd met flm $316\Omega \pm 1\%$ 1/8 W	75042	CEA T-O obd
T1, T2	9100-1361		Transformer: Trifilar core	-hp-	
A7			LOW PASS FILTER ASSEMBLY.		
	00313-66507	1	PC Board Assembly	-hp-	
C1	0160-2646	2	C: fxd mica 168.9 pF $\pm 1\%$	04062	RDM15F(168.9)F3C
C2	0160-2647	2	C: fxd mica 302.4 pF $\pm 1\%$	04062	RDM15F(302.4)F3C
C3	0160-2644	2	C: fxd mica 315.2 pF $\pm 1\%$	04062	RDM15F(315.2)F3C
C4	0160-2645	1	C: fxd mica 317.3 pF $\pm 1\%$	04062	RDM15F(317.3)F3C
C5	0160-2644		C: fxd mica 315.2 pF $\pm 1\%$	04062	RDM15F(315.2)F3C
C6	0160-2647		C: fxd mica 302.4 pF $\pm 1\%$	04062	RDM15F(302.4)F3C
C7	0160-2646		C: fxd mica 168.9 pF $\pm 1\%$	04062	RDM15F(168.9)F3C
L1	9100-1363	2	Coil: Inductor preset 0.5096 μ H	-hp-	
L2	9100-1364	2	Coil: Inductor preset 0.5740 μ H	-hp-	
L3, L4	9100-1365	2	Coil: Inductor preset 0.5841 μ H	-hp-	
L5	9100-1364		Coil: Inductor preset 0.5740 μ H	-hp-	
L6	9100-1363		Coil: Inductor preset 0.5096 μ H	-hp-	
A8			POWER AMPLIFIER AND DETECTOR ASSEMBLY.		
	00313-66508	1	PC Board Assembly	-hp-	
C1	0180-0155	11	C: fxd Ta elect 2.2 μ F $\pm 20\%$ 20 vdcw	56289	150D225X0020A2-DYS
C2	0140-0199	1	C: fxd mica 240 pF $\pm 5\%$	04062	RDM15F241J3C
C3 thru C7	0180-0155		C: fxd Ta elect 2.2 μ F $\pm 20\%$ 20 vdcw	56289	150D225X0020A2-DYS
C8	0180-0116	7	C: fxd Ta elect 6.8 μ F $\pm 10\%$ 35 vdcw	56289	150D685X9035B2-DYS
C9	0150-0093	5	C: fxd 0.01 μ F $+80\%$ -20% 100 vdcw	91418	TA obd
C10	0160-0170	24	C: fxd cer 0.22 μ F $+80\%$ -20% 25 vdcw	56289	5C9B obd
C11	0180-0155		C: fxd Ta elect 2.2 μ F $\pm 20\%$ 20 vdcw	56289	150D225X0020A2-DYS
C12 thru C16	0160-0170		C: fxd cer 0.22 μ F $+80\%$ -20% 25 vdcw	56289	5C9B obd
C17	0180-0116		C: fxd Ta elect 6.8 μ F $\pm 10\%$ 35 vdcw	56289	150D685X9035B2-DYS
C18, C19	0150-0093		C: fxd 0.01 μ F $+80\%$ -20% 100 vdcw	91418	TA obd
C20	0180-0116		C: fxd Ta elect 6.8 μ F $\pm 10\%$ 35 vdcw	56289	150D685X9035B2-DYS
C21	0160-0170		C: fxd cer 0.22 μ F $+80\%$ -20% 25 vdcw	56289	5C9B obd
C22	0160-0127		C: fxd cer 1.0 μ F $\pm 20\%$ 25 vdcw	56289	5C13C obd
C23	0180-0116		C: fxd Ta elect 6.8 μ F $\pm 10\%$ 35 vdcw	56289	150D685X9035B2-DYS
C24, C25	0150-0093		C: fxd 0.01 μ F $+80\%$ -20% 100 vdcw	91418	TA obd
C26*	0140-0201	2	C: fxd mica 12 pF $\pm 5\%$	72136	RDM15C120J5C
C27	0150-0115	2	C: fxd cer 27 pF $\pm 10\%$ 500 vdcw	72982	301-000-U2JO-270K
C28, C29	0180-0116		C: fxd Ta elect 6.8 μ F $\pm 10\%$ 35 vdcw	56289	150D685X9035B2-DYS

Table 6-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	-hp- PART NO.		TQ	DESCRIPTION	MFR	MFR. PART NO
A8 (Cont'd)						
C30	0160-0170			C: fxd cer 0.22 μ F $\pm 80\%$ -20% 25 vdcw	56289	5C9B obd
C31	0180-0116			C: fxd Ta elect 6.8 μ F $\pm 10\%$ 35 vdcw	56289	150D685X9035B2-DYS
C32	0180-0155			C: fxd Ta elect 2.2 μ F $\pm 20\%$ 20 vdcw	56289	150D225X0020A2-DYS
C33	0121-0128		3	C: var air trimmer 1.4-7.3 pF on schematic	74970	189-505-5
C34	0180-0155			C: fxd Ta elect 2.2 μ F $\pm 20\%$ 20 vdcw	56289	150D225X0020A2-DYS
C35, C36	0180-0354			C: fxd Ta elect 40 μ F $\pm 5\%$ 10 vdcw	56289	150D406X5010B2-DYS
C37*, C38*	0140-0202			C: fxd mica 15 pF $\pm 5\%$	04062	RDM15C150J5C
C39	0150-0093		6	C: fxd 0.01 μ F $\pm 80\%$ -20% 100 vdcw	91418	TA obd
CR1, CR2	1910-0036		4	Diode: Ge 10 mA/1V 8 piv 1 ns	73293	HPS1672
K1, K2	0490-0399		2	Relay Reed assembly: 12 Vdc 1200 Ω	-hp-	
L1, L2	9140-0098		2	Coil: Inductor var 10-1/2 turns 2.2 μ H	-hp-	
L3	9140-0047			Choke: RF 20 μ H $\pm 10\%$ 2.5 MHz	99848	H51074020
Q1 thru Q3	1854-0219			TSTR: Si NPN 2N3663	24446	obd
Q4	1854-0254		4	TSTR: Si NPN 2N2218	04713	SS2184-2
Q5 thru Q7	1854-0233		4	TSTR: Si NPN 2N3866	07235	obd
Q8 thru Q12	1850-0062		10	TSTR: Ge 2N404	07235	34146 obd
Q13, Q14	1854-0092		4	TSTR: Si NPN 2N3563	04713	MPS 3563
R1	0757-0388		2	R: fxd met flm 30.1 Ω $\pm 1\%$ 1/8 W	19701	MF5C T-O obd
R2	0698-3439		2	R: fxd met flm 178 Ω $\pm 1\%$ 1/8 W	19701	MF5C T-O obd
R3	0757-0392		2	R: fxd met flm 43.2 Ω $\pm 1\%$ 1/8 W	19701	MF5C T-O obd
R4	0683-1035		2	R: fxd comp 10 k Ω $\pm 5\%$ 1/4 W	01121	CB 1035
R5	0683-2025		2	R: fxd comp 2000 Ω $\pm 5\%$ 1/4 W	01121	CB 2025
R6	0683-3015		5	R: fxd comp 300 Ω $\pm 5\%$ 1/4 W	01121	CB 3015
R7	0683-3315		1	R: fxd comp 330 Ω $\pm 5\%$ 1/4 W	01121	CB 3315
R8	0683-0685			R: fxd comp 6.8 Ω $\pm 5\%$ 1/4 W	01121	CB 68G5
R9	0683-3015			R: fxd comp 300 Ω $\pm 5\%$ 1/4 W	01121	CB 3015
R10	0683-5115		6	R: fxd comp 510 Ω $\pm 5\%$ 1/4 W	01121	CB 5115
R11	0683-0685		3	R: fxd comp 6.8 Ω $\pm 5\%$ 1/4 W	01121	CB 68G5
R12	0683-3015			R: fxd comp 300 Ω $\pm 5\%$ 1/4 W	01121	CB 3015
R13	0683-0685			R: fxd comp 6.8 Ω $\pm 5\%$ 1/4 W	01121	CB 68G5
R14	0683-3015			R: fxd comp 300 Ω $\pm 5\%$ 1/4 W	01121	CB 3015
R15	0683-0825		2	R: fxd comp 8.2 Ω $\pm 5\%$ 1/4 W	01121	CB 82G5
R16	0683-3015			R: fxd comp 300 Ω $\pm 5\%$ 1/4 W	01121	CB 3015
R17	0683-0825			R: fxd comp 8.2 Ω $\pm 5\%$ 1/4 W	01121	CB 82G5
R18	0698-3634		2	R: fxd met oxide 470 Ω $\pm 5\%$ 2 W	07115	C42S obd
R19	0683-1035			R: fxd comp 10 k Ω $\pm 5\%$ 1/4 W	01121	CB 1035
R20	0683-1015		2	R: fxd comp 100 Ω $\pm 5\%$ 1/4 W	01121	CB 1015
R21	0683-1025		12	R: fxd comp 1000 Ω $\pm 5\%$ 1/4 W	01121	CB 1025
R22	0683-5115			R: fxd comp 510 Ω $\pm 5\%$ 1/4 W	01121	CB 5115
R23	0683-2725		2	R: fxd comp 2700 Ω $\pm 5\%$ 1/4 W	01121	CB 2725
R24, R25	0683-1025			R: fxd comp 1000 Ω $\pm 5\%$ 1/4 W	01121	CB 1025
R26	0683-5115			R: fxd comp 510 Ω $\pm 5\%$ 1/4 W	01121	CB 5115
R27	0683-2725			R: fxd comp 2700 Ω $\pm 5\%$ 1/4 W	01121	CB 2725
R28, R29	0683-1025			R: fxd comp 1000 Ω $\pm 5\%$ 1/4 W	01121	CB 1025
R30	0683-5115			R: fxd comp 510 Ω $\pm 5\%$ 1/4 W	01121	CB 5115
R31	0686-9115		2	R: fxd comp 910 Ω $\pm 5\%$ 1/2 W	01121	EB 9115
R32, R33	0683-1025			R: fxd comp 1000 Ω $\pm 5\%$ 1/4 W	01121	CB 1025
R34	0683-5115			R: fxd comp 510 Ω $\pm 5\%$ 1/4 W	01121	CB 5115

Table 6-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	-hp- PART NO	TQ	DESCRIPTION	MFR	MFR PART NO
A8 (Cont'd)					
R35	0686-3315	4	R: fxd comp 330Ω ±5% 1/2 W	01121	EB 3315
R36, R37	0683-1025		R: fxd comp 1000Ω ±5% 1/4 W	01121	CB 1025
R38	0683-5115		R: fxd comp 510Ω ±5% 1/4 W	01121	CB 5115
R39	0686-3315		R: fxd comp 330Ω ±5% 1/2 W	01121	EB 3315
R40	0683-1025		R: fxd comp 1000Ω ±5% 1/4 W	01121	CB 1025
R41	0683-5105	2	R: fxd comp 51Ω ±5% 1/4 W	01121	CB 5105
R42	0683-6825		R: fxd comp 6800Ω ±5% 1/4 W	01121	CB 6825
R43	0683-3025	1	R: fxd comp 3000Ω ±5% 1/4 W	01121	CB 3025
R44	0698-5418	2	R: fxd met flm 50Ω ±1% 1/8 W	91637	MFF 1/8 T-O
R45	0698-6055	1	R: fxd met flm 108.11Ω ±1% 1/8 W	91637	MFF 1/8 T-2
R46	0698-6054	1	R: fxd met flm 73.124Ω ±1% 1/8 W	91637	MFF 1/8 T-2
R47, R48	0757-0413	4	R: fxd met flm 392Ω ±1% 1/8 W	75042	CEA T-O obd
R49*	0757-0411	1	R: fxd met flm 332Ω ±1% 1/8 W	19701	MF5C T-O obd
R50	0757-0417	2	R: fxd met flm 562Ω ±1% 1/8 W	75042	CEA T-O obd
R51	0757-0419	2	R: fxd met flm 681Ω ±1% 1/8 W	75042	CEA T-O obd
R52, R53	0757-0418	4	R: fxd met flm 619Ω ±1% 1/8 W	75042	CEA T-O obd
R54	0757-0416	4	R: fxd met flm 511Ω ±1% 1/8 W	75042	CEA T-O obd
R55	0757-0420	1	R: fxd met flm 750Ω ±1% 1/8 W	19701	MF5C T-O obd
R56	0757-0416		R: fxd prec met flm 511Ω ±1% 1/8 W	75042	CEA T-O obd
R57	0698-0084	2	R: fxd met flm 2150Ω ±1% 1/8 W	75042	CEA T-O obd
R58	2100-2216	2	R: var lin 5000Ω ±30% 1/2 W	73138	62PR obd
R59*	0757-0280		R: fxd met flm 1000Ω ±1% 1/8 W	75042	CEA T-O obd
A9					
SINGLE SIDEBAND GENERATOR ASSEMBLY.					
	00313-66509	1	PC Board Assembly	-hp-	
C1	0140-0197	1	C: fxd mica 180 pF ±5%	04062	RDM15F181J3C
C2, C3	0121-0037	2	C: var cer 5-25 pF on schematic	72982	538-002B2PO-93R
CR1 thru CR4	1901-0347	4	Diode: Si 20 mA at +1 1.5 pF	73293	5082-5350
L1	9100-1366		Coil: Inductor var 5-1/2 turns	-hp-	
R1, R2	0757-0407	2	R: fxd met flm 200Ω ±1% 1/8 W	75042	CEA T-O obd
R3 thru R6	0698-0022	4	R: fxd met flm 499Ω ±1% 1/8 W	75042	CEA T-2 obd
R7, R8	2100-2061	2	R: var flm 200Ω ±30% 1/2 W	73138	62PR200
R9	0757-0410	2	R: fxd met flm 301Ω ±1% 1/8 W	75042	CEA T-O obd
R10	2100-1984	1	R: var flm 100Ω ±30% 1/2 W	73138	62PR100
R11	0757-0410		R: fxd met flm 301Ω ±1% 1/8 W	75042	CEA T-O obd
R12, R13	0757-0280		R: fxd met flm 1000Ω ±1%	75042	CEA T-O obd
T1, T2	9100-1361	2	Transformer: Trifilar core	-hp-	
T3, T4	9100-1362	2	Transformer: Bifilar	-hp-	
A10					
BUFFER AMPLIFIER ASSEMBLY.					
	00313-66510	1	PC Board Assembly	-hp-	
C1	0160-2035		C: fxd mica 750 pF ±5% 300 V	04062	RDM15F751J3S
C2	0150-0093	4	C: fxd cer 0.01 μF +80% -20% 100 vdcw	91418	TA obd
C3	0140-0217	2	C: fxd mica 140 pF ±2%	00853	RDM15F141G3C
C4	0140-0178	1	C: fxd mica 560 pF ±2%	04062	RDM15F561G3C
C5 thru C7	0150-0093		C: fxd cer 0.01 μF +80% -20% 100 vdcw	91418	TA obd
C8	0140-0217		C: fxd mica 140 pF ±2%	04062	RDM15F141G3C
C9	0140-0200		C: fxd mica 390 pF ±5%	04062	RDM15F391J3C

Table 6-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	-hp- PART NO	IQ	DESCRIPTION	MFR	MFR PART NO
L1, L2	9100-1366	2	Coil: Inductor var 5-1/2 turns	-hp-	
Q1	1854-0219		TSTR: Si NPN 2N3663	24446	obd
Q2	1854-0053		TSTR: Si NPN 2N2218	04713	obd
R1	0757-0277	1	R: fxd met flm 49.9 Ω $\pm 1\%$ 1/8 W	19701	MF5C T-O obd
R2, R3	0683-2035	4	R: fxd comp 20 k Ω $\pm 5\%$ 1/4 W	01121	CB 2035
R4	0683-3325	1	R: fxd comp 3300 Ω $\pm 5\%$ 1/4 W	01121	CB 3325
R5, R6	0683-2035		R: fxd comp 20 k Ω $\pm 5\%$ 1/4 W	01121	CB 2035
R7	0683-6215	1	R: fxd comp 620 Ω $\pm 5\%$ 1/4 W	01121	CB 6215
A11			BROADBAND AMPLIFIER ASSEMBLY.		
	00313-66511	1	PC Board Assembly	-hp-	
C1 thru C5	0150-0093		C: fxd cer 0.01 μ F $+80\%$ -20% 100 vdcw	91418	TA obd
C6	0140-0176	2	C: fxd mica 100 pF $\pm 2\%$	04062	RDM15F101G3C
C7	0150-0093		C: fxd cer 0.01 μ F $+80\%$ -20% 100 vdcw	91418	TA obd
C8	0140-0176		C: fxd mica 100 pF $\pm 2\%$	04062	RDM15F101G3C
C9, C10	0150-0093		C: fxd cer 0.01 μ F $+80\%$ -20% 100 vdcw	91418	TA obd
K1, K2	0490-0399		Relay: Reed assembly 1200 Ω	-hp-	
L1	9140-0106	1	Coil: fxd 0.47 μ H $\pm 20\%$ 1340 mA	76493	9310-06
Q1 thru Q3	1854-0219		TSTR: Si NPN 2N3663	24446	obd
R1, R2	0757-0413		R: fxd met flm 392 Ω $\pm 1\%$ 1/8 W	75042	CEA T-O obd
R3	0757-0277		R: fxd met flm 49.9 Ω $\pm 1\%$ 1/8 W	19701	MF5C T-O obd
R4	0683-1035		R: fxd comp 10 k Ω $\pm 5\%$ 1/4 W	01121	CB 1035
R5	0683-2035		R: fxd comp 20 k Ω $\pm 5\%$ 1/4 W	01121	CB 2035
R6	0683-2025		R: fxd comp 2000 Ω $\pm 5\%$ 1/4 W	01121	CB 2025
R7	0683-5115		R: fxd comp 510 Ω $\pm 5\%$ 1/4 W	01121	CB 5115
R8	0683-1035		R: fxd comp 10 k Ω $\pm 5\%$ 1/4 W	01121	CB 1035
R9	0683-2035		R: fxd comp 20 k Ω $\pm 5\%$ 1/4 W	01121	CB 2035
R10	0683-1325		R: fxd comp 1300 Ω $\pm 5\%$ 1/4 W	01121	CB 1325
R11	0683-1015		R: fxd comp 100 Ω $\pm 5\%$ 1/4 W	01121	CB 1015
R12	0683-1335	1	R: fxd comp 13 k Ω $\pm 5\%$ 1/4 W	01121	CB 1335
R13	0683-2425		R: fxd comp 2400 Ω $\pm 5\%$ 1/4 W	01121	CB 2425
R14	0683-5615		R: fxd comp 560 Ω $\pm 5\%$ 1/4 W	01121	CB 5615
R15	0683-5105		R: fxd comp 51 Ω $\pm 5\%$ 1/4 W	01121	CB 5105
A12			LOCAL OSCILLATOR ASSEMBLY.		
	00313-66512	1	PC Board Assembly	-hp-	
	0340-0059	1	Terminal: standoff	00866	1332 obd
C1*	0140-0201		C: fxd mica 12 pF $\pm 5\%$	72136	RDM15C120J5C
C2	0121-0128	1	C: var air 1.4 - 7.3 pF	74950	189-505-5
C3 thru C8	0150-0093		C: fxd cer 0.01 μ F $+80\%$ -20% 100 vdcw	91418	TA obd
CR1, CR2	1910-0022		Diode: Ge 5 wiv 3.5 ns	93332	obd
Q1, Q2	1855-0046	2	TSTR: Si FET TIS 34	01295	T1S34
R1	0757-0461	1	R: fxd met flm 68.1 k Ω $\pm 1\%$ 1/8 W	19701	MF5C T-O obd
R2	0757-0468	1	R: fxd met flm 130 k Ω $\pm 1\%$ 1/4 W	19701	MF5C T-O obd
R3	0757-0273	2	R: fxd met flm 3010 Ω $\pm 1\%$ 1/8 W	19701	MF5C T-O obd
R4	0757-0410	1	R: fxd met flm 301 Ω $\pm 1\%$ 1/8 W	75042	CEA T-O obd
R5	0757-0474	1	R: fxd met flm 243 k Ω $\pm 1\%$ 1/8 W	19701	MF5C T-O obd
R6	0757-0481	1	R: fxd met flm 475 k Ω $\pm 1\%$ 1/8 W	19701	MF5C T-O obd
R7	0757-0273		R: fxd met flm 3010 Ω $\pm 1\%$ 1/8 W	19701	MF5C T-O obd
R8	0757-0280		R: fxd met flm 1000 Ω $\pm 1\%$ 1/8 W	75042	CEA T-O obd

Table 6-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	-hp- PART NO	TQ	DESCRIPTION	MFR	MFR PART NO
A13			10dB STEP ATTENUATOR ASSEMBLY.		
	00313-63401	1	Attenuator Assembly	-hp-	
J1	1250-0083		Connector: RF series BNC bulkhead mount jack	95712	30624-1 obd
R1, R2	0727-0091		R: fxd carbon flm $790\Omega \pm 1/2\%$ 1/4 W	19701	MF6C obd
R3	0727-0028	4	R: fxd carbon flm $53.3\Omega \pm 1/2\%$ 1/4 W	19701	MF6C obd
R4	0727-0016	1	R: fxd carbon flm $26.3\Omega \pm 1/2\%$ 1/2 W	19701	MF6C obd
R5	0727-0028		R: fxd carbon flm $53.3\Omega \pm 1/2\%$ 1/4 W	19701	MF6C obd
R6	0727-0037	1	R: fxd carbon flm $71.16\Omega \pm 1/2\%$ 1/4 W	19701	MF6C obd
R7, R8	0727-0042	2	R: fxd carbon flm $96.25\Omega \pm 1/2\%$ 1/4 W	19701	MF6C obd
R9	0727-0062	1	R: fxd carbon flm $247.5\Omega \pm 1/2\%$ 1/4 W	19701	MF6C obd
R10, R11	0727-0034	2	R: fxd carbon flm $61.11\Omega \pm 1/2\%$ 1/4 W	19701	MF6C obd
R12	0727-0091		R: fxd carbon flm $790\Omega \pm 1/2\%$ 1/4 W	19701	MF6C obd
R13, R14	0727-0028		R: fxd carbon flm $53.3\Omega \pm 1/2\%$ 1/4 W	19701	MF6C obd
S1 thru S8	3101-0933	16	Switch: sensitive subminiature	000LG	23SM13
	355C-107D	1	Actuator switch: long	-hp-	
	355C-107E	3	Actuator switch: short	-hp-	
	355C-108A	1	Cam "A" attenuator	-hp-	
	355C-108B	1	Cam "B" attenuator	-hp-	
	355C-108C	1	Cam "C" attenuator	-hp-	
	355C-108D	1	Cam "D" attenuator	-hp-	
	355C-108E	1	Cam "E" attenuator	-hp-	
	739A-41A	1	Cover: accessory top	-hp-	
	739A-101	1	Pin: detent	-hp-	
	739A-102	1	Roller: assembly	-hp-	
	00313-23702	1	Shaft: straight	-hp-	
	739A-91	1	Spring: assembly	-hp-	
	00313-22001	1	Body	-hp-	
	0360-0124	1	Terminal: pin for printed circuit board	97300	obd
	00313-21701	1	Bushing	-hp-	
A14			1dB STEP ATTENUATOR ASSEMBLY.		
	00313-63402	1	Attenuator Assembly	-hp-	
J1	1250-0083	2	Connector: RF series BNC jack	95712	30624-1
R1, R2	0727-0010	3	R: fxd carbon flm $17.61\Omega \pm 1/2\%$ 1/4 W	19701	MF6C obd
R3	0727-0064	4	R: fxd carbon flm $292.4\Omega \pm 1/2\%$ 1/4 W	19701	MF6C obd
R4	0727-0379		R: fxd carbon flm $146.2\Omega \pm 1/2\%$ 1/4 W	19701	MF6C obd
R5	0727-0064		R: fxd carbon flm $292.4\Omega \pm 1/2\%$ 1/4 W	19701	MF6C obd
R6	0727-0005	1	R: fxd carbon flm $5.77\Omega \pm 1/2\%$ 1/4 W	19701	MF6C obd
R7, R8	0727-0094	2	R: fxd carbon flm $870\Omega \pm 1/2\%$ 1/4 W	19701	MF6C obd
R9	0727-0008	1	R: fxd carbon flm $11.61\Omega \pm 1/2\%$ 1/4 W	19701	MF6C obd
R10, R11	0727-0074		R: fxd carbon flm $463\Omega \pm 1/2\%$ 1/4 W	19701	MF6C obd
R12	0727-0010		R: fxd carbon flm $17.61\Omega \pm 1/2\%$ 1/4 W	19701	MF6C obd
R13, R14	0727-0064		R: fxd carbon flm $292.4\Omega \pm 1/2\%$ 1/4 W	19701	MF6C obd
R15	0757-1025	1	R: fxd met flm $25\Omega \pm 1\%$ 1/4 W	19701	MF6C T-O obd
S1 thru S8	3101-0933	8	Switch: sensitive subminiature SPDT	000LG	23SM13 obd
	355C-107D	1	Actuator: switch long	-hp-	
	355C-107E	3	Actuator: switch short	-hp-	
	00313-22002	1	Body: attenuator	-hp-	
	00313-21701	1	Bushing: front	-hp-	
	00313-61604	1	Cable assembly: output Opt. 01	-hp-	

Table 6-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	-hp- PART NO	TQ	DESCRIPTION	MFR	MFR PART NO
A14 (Cont'd)					
	355C-108A	1	Cam "A" attenuator	-hp-	
	355C-108B	1	Cam "B" attenuator	-hp-	
	355C-108C	1	Cam "C" attenuator	-hp-	
	355C-108D	1	Cam "D" attenuator	-hp-	
	355C-108E	1	Cam "E" attenuator	-hp-	
	739A-41A		Cover: access, top	-hp-	
	739A-101	1	Pin: detent	-hp-	
	739A-102	1	Roller: assembly	-hp-	
	00313-23702	1	Shaft: straight	-hp-	
	739A-91	1	Spring assembly	-hp-	
	1200-0063	1	Receptacle: crimp type pin	00779	42428-3
	1250-0083	1	Connector RF: series BNC jack	95712	30624-1
A15					
			0.1dB STEP ATTENUATOR ASSEMBLY.		
	00313-61901	1	Attenuator Assembly	-hp-	
R1, R2	0698-4966	2	R: fxd met flm 340 k Ω $\pm$ 1% 1/2 W	75042	CEC T-O obd
R3, R4	0757-0307	2	R: fxd met flm 322 k Ω $\pm$ 1% 1/2 W	75042	CEC T-O obd
R5, R6	0698-4965	2	R: fxd met flm 324 k Ω $\pm$ 1% 1/2 W	75042	CEC T-O obd
R7, R8	0698-3425	2	R: fxd met flm 316 k Ω $\pm$ 1% 1/2 W	75042	CEC T-O obd
R9	0757-0312	1	R: fxd met flm 309 k Ω $\pm$ 1% 1/2 W	19701	MF7C T-O obd
S1	3100-1746	1	Switch: rotary	71590	1332 obd
A16					
			POWER AMPLIFIER AND DETECTOR ASSEMBLY. (OPTION 01)		
	00313-66513	1	PC Board Assembly This board is identical to the A8 board except for:		
R49	0757-0282	1	R: fxd met flm 221 Ω $\pm$ 1% 1/8 W	75042	CEA T-O obd
A17					
			1dB STEP ATTENUATOR ASSEMBLY. (OPTION 01)		
	00313-63403	1	Attenuator Assembly (Option 01)	-hp-	
			This attenuator is identical to the A14 attenuator except as follows:		
			A14R15 replaced by a shorting strip		
			A14J1 deleted (output cable W3 attaches directly to A17 Attenuator Assembly)		
MECHANICAL PARTS.					
A1	00313-66501	1	Board: power supply	-hp-	
A2	00313-66502	1	Board: oscillator	-hp-	
A3	00313-66503	1	Board: amplifier	-hp-	
A4	00313-66504	1	Board: XTAL oscillator	-hp-	
A5	00313-66505	1	Board: AGC amplifier	-hp-	
A6	00313-66506	1	Board: output mixer	-hp-	
A7	00313-66507	1	Board: L. P. filter	-hp-	
A8	00313-66508	1	Board: RF amplifier and detector (standard only)	-hp-	
A9	00313-66509	1	Board: SSB generator	-hp-	

Table 6-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	-hp- PART NO.	TQ	DESCRIPTION	MFR	MFR PART NO
MECHANICAL PARTS (Cont'd)					
A10	00313-66510	1	Board: 30 MHz buffer	-hp-	
A11	00313-66511	1	Board: bandpass amplifier	-hp-	
A12	00313-66512	1	Board: local oscillator	-hp-	
A13	00313-63401	1	Attenuator assembly: 10 dB step	-hp-	
A14	00313-63402	1	Attenuator assembly: 1 dB step	-hp-	
A15	00313-61901	1	Switch: attenuator assembly	-hp-	
A16	00313-66513	1	Board: RF amplifier and detector (Opt. 01 only)	-hp-	
(A8 Opt. 01)			This board is identical to 00313-66508 board except for value of A16R49 A16R49 is 221 Ω		
A17	00313-63403	1	Switch: attenuator assembly 1 dB step (Opt. 01 only)	-hp-	
C1, C2	0180-0047	2	C: fxd 500 μ F 75 vdcw	56289	D32443
C3, C4	0150-0023	2	C: fxd cer 2000 pF $\pm$ 20% 1000 vdcw	56289	19C203A
C5	0121-0194	1	C: var air 4.8 to 100 pF	74970	148-6-HB
C6 thru C9	0150-0093	4	C: fxd 0.01 μ F +80% -20% 100 vdcw	91418	TA obd
C10 thru C21	0150-0019	12	C: fxd 0.001 feedthru cer 1000 pF $\pm$ 20%	72982	327005X5U0 102M
F1	2110-0044	1	Fuse: 0.30 A slow-blow (115 V)	75915	313.300
	2110-0017		Fuse: 0.15 A slow-blow	75915	313.150
J1	1251-0148	1	Connector: AC power 3 pin recessed power cord receptacle	82389	AC3G
J2	1251-0095	1	Connector: power AC chassis mounting socket	75382	221 obd
J3, J4	1250-0118	2	Connector: RF series BNC bulkhead mount jack receptacle	74868	82-2908-2
J5, J6	1250-0083	2	Connector: RF bulkhead mount jack	95712	30624-1 obd
J7	00313-61603		Part of cable W3	-hp-	
J8 thru J10	1251-0135	3	Connector: printed circuit	74868	143-015-08 (1158)
L1	9100-1368	1	Coil: var (uses form 9150-0376)	-hp-	
L2, L3	9140-0018	2	Coil: RF choke 1 μ H	99849	205-11-10
M1	1120-0930	1	Meter	55026	1332 obd
MP1	5000-0737	2	Cover: side front	-hp-	
MP2	5000-0736	2	Cover: side rear	-hp-	
MP3	5060-0740	1	Cover: top	-hp-	
MP4	00313-00202	1	Panel: rear	-hp-	
MP5	5000-0051	2	Plate: fluted aluminum	-hp-	
MP6	00313-24401	2	Frame: assembly	-hp-	
MP7	5060-0766	2	Retainer: 4H handle	-hp-	
MP8	5060-0763	2	Handle: assembly	-hp-	
MP9	5060-0752	1	Cover: bottom	-hp-	
MP10	5060-0767	5	Foot: assembly	-hp-	
MP11	1490-0030	1	Stand: tilt	91260	obd
MP12	00313-00201	1	Panel: front	-hp-	
MP12	00313-00203	1	Panel: front	-hp-	
Opt. 01					
MP13	5000-5835	2	Strip: trim	-hp-	
MP14	00313-04301	1	Panel: plate	-hp-	
MP15	5000-5836	1	Strip: top front panel	-hp-	
MP16			Not assigned		
MP17	00313-24702	1	Support: tuner drive bearing	-hp-	
MP18	5060-0021	1	Gear Assembly	-hp-	
MP19	5060-0020	1	Gear Assembly	-hp-	

Table 6-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	-hp- PART NO.		T Q	DESCRIPTION	MFR	MFR. PART NO
MECHANICAL PARTS (Cont'd)						
MP20	00313-23601	1		Gear: drive assembly	-hp-	45"/DAF SPEC
MP21	00313-24701	1		Spacer: (Stand off)	-hp-	
MP22	1500-0783	1		Drive Mechanism	0001.C	
MP23				Not assigned		
MP24	00313-04001	1		Dial: frequency	-hp-	
MP25	1410-0103	1		Bushing: oscillator tuning	13603	FAD 250
MP26	00313-49901	1		Inductor: frequency dial (bezel)	-hp-	
MP27	0370-0146	1		Knob: oscillator tuning assembly	-hp-	
MP28	0370-0128	1		Knob: 3/4" scale offset round black	-hp-	
MP29	0370-0114	1		Knob: round 5/8" diam red (scale offset)	-hp-	
MP30	0370-0432	3		Knob: lever black	-hp-	obd
MP31	5040-0685	1		Meter: window bezel	-hp-	
MP32	1410-0112	1		Bushing: brass	14480	
MP33	0370-0330	3		Knob: 4 fluted 5/8" bar type (black)	-hp-	
MP34	5040-0687	1		Bezel: rear window	-hp-	
MP35	5040-0686	2		Bezel: front window	-hp-	obd
MP36	5020-0446	1		Standoff: hex	-hp-	
MP37	1460-0256	4		Spring: meter compression	91260	
MP38	1410-0872	1		Bushing: threaded	14480	
MP39	5040-0690	3		Dial: attenuator molded	-hp-	
	7120-0870	3		Decal	91345	1332 obd
MP40	00313-04901	1		Gusset: front	-hp-	FNC-46-S
MP41	5020-0350	2		Shaft: 5-1/8"	-hp-	
MP42	1500-0001	2		Coupler: flexible	80583	
MP43				Not assigned		
MP44	5000-1052	1		Casting: RF	-hp-	
MP45	00313-04902	1		Gusset: center	-hp-	
MP46	00313-04103	2		Cover: attenuator bottom	-hp-	342014 293011 974 Special CS 402ACG
MP47	1400-0084	1		Holder: fuse extractor post type	75915	
MP48	1200-0043	2		Insulator: transistor mtg anodized Al plate	0001.B	
MP49	1200-0081	4		Insulator: bushing	26365	
MP50	1251-0156	1		Connector: nylon receptacle	83982	
MP51	5040-1464	6		Extractor: board	-hp-	obd
MP52	00313-01201	2		Bracket: circuit guide	-hp-	
MP53	739A-41A	2		Cover: attenuator top	-hp-	
MP54	00313-04101	1		Cover: top casting	-hp-	
MP55	00313-04102	1		Cover: bottom casting	-hp-	
MP56	5040-0601	6		Guide: printed circuit	-hp-	CSM obd
MP57	00313-00101	1		Deck	-hp-	
MP58	1410-0052	1		Bushing: potentiometer	71785	
MP59	7120-1254	1		Nameplate	0001.H	
MP60	1500-0001	2		Coupler: flexible for 1/4" diameter shafts	80583	
MP61	00313-01202	1		Bracket: attenuator mounting	-hp-	
Q1, Q2	1854-0063	2		TSTR: Si NPN 2N3055	04713	2N3055
R1, R2	0692-1005	2		R: fxd comp $10\Omega \pm 5\%$ 2 W	01121	HB 1005
R3	0684-3331	1		R: fxd comp $33\text{ k}\Omega \pm 10\%$ 1/4 W	01121	CB 3331
R4	0698-4482	1		R: fxd met flm $17.4\text{ k}\Omega \pm 1\%$ 1/8 W	75042	CEA T-O obd
R5	0698-0083	1		R: fxd met flm $1960\Omega \pm 1\%$ 1/8 W	75042	CEA T-O obd
R6	2100-0078	1		R: var comp lin $500\Omega \pm 30\%$ 3/10 W	71450	Series 70 obd
R7	2100-2295	1		R: var comp panel $2.5\text{ k}\Omega \pm 10\%$ - rear $100\Omega \pm 20\%$	01121	Type JJC obd
S1	3101-0100	1		Switch: pushbutton lighted with transparent red lens	87034	54-61681-26 A1H

Table 6-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	-hp- PART NO.	T	Q	DESCRIPTION	MFR.	MFR. PART NO.
MECHANICAL PARTS (Cont'd)						
S2	3101-0033	1		Switch: 115/230 V	71590	1332 obd
S3	3101-0820	1		Switch: lever oscillator mode	71590	1332 obd
S4	3101-0819	1		Switch: meter mode	71590	1332 obd
S5	3101-0820	1		Switch: lever oscillator mode	71590	1332 obd
T1	9100-1345	1		Transformer: power	-hp-	
W1	8120-0078			Assembly: cable 7.5 ft power cord set	70903	KH-4147
W2	00313-61602	1		Cable: output casting assembly	-hp-	
W3	00313-61603	1		Cable: output connector assembly standard only	-hp-	
W3 (Opt. 01)	00313-61604			Cable assembly: output (Opt. 01 only)	-hp-	
W4	00313-61601	1		Cable: main	-hp-	
MISCELLANEOUS						
	11086A	3		Accessory: (cables) coaxial 24"	-hp-	
	1250-0701	2		Bushing: RF connector for series BNC TNC connectors	95712	9520-3 obd
	9211-0249	1		Carton: corrugated	09051	obd
	5060-4940	1		Extender assembly: 15 pin	-hp-	
	9223-0040	4		Foam: polyethylene post pak	04811	obd
	1250-0299	2		Insulator: RF connector back-insulator for series BNC/TNC connectors	95712	2624-1
	5060-0775	1		Kit: 5 H rack mount	-hp-	
	5020-0708	1		bracket	-hp-	
	5020-0709	1		bracket	-hp-	
	11086-61601	3		cable	-hp-	
	5060-4940	1		extender board	-hp-	
	5040-0164	1		filler strip	-hp-	
	5950-4401	1		label	-hp-	
	2550-0018	4		machine screw	-hp-	
	9220-0195	1		polyboard	-hp-	
	8120-0078	1		power cord	-hp-	
	00313-90001	1		Manual	-hp-	
	2950-0054	1		Nut: hex brass nickel plated	95712	obd
		2		Nut: RF connector clamp for series BNC/TNC connectors	95712	834-33 obd
	7122-0082	1		Plate: serial	04716	obd
	00313-23701	1		Shaft: 1-5/8" (5020-0341)	-hp-	
	0362-0027	2		Sleeve: cable terminal bronze	59730	GSC-2195
		2		Washer: flat for series BNC RF connectors	95712	2053-8
	2370-0013	8		Screws, top and bottom attaching	73076	obd
	2370-0020	8		Screws, side cover attaching	83385	obd

SECTION VII
CIRCUIT DIAGRAMS

7-1. INTRODUCTION.

7-2. This section of the manual contains circuit diagrams for the Model 313A. Included is a block diagram, a functional diagram, an interconnecting block diagram between the Model 313A and the Model 312A and schematic diagrams.

7-3. BLOCK DIAGRAM.

7-4. The block diagram (Figure 7-1) shows how the circuits in the Model 313A are functionally arranged to form a Tracking Oscillator.

7-5. FUNCTIONAL DIAGRAM.

7-6. The functional diagram (Figure 7-3) is similar to the block diagram except more detailed information is included. Included in the functional diagram are adjustments, waveforms, frequencies, switches and relays as related to the functional operation of the Model 313A.

7-7. Circuits located within the RF casting are shown enclosed by dashed lines. Individual compartments within the casting are also shown enclosed with dashed lines. Feedthru capacitors which supply operating potentials to circuits within the casting are shown. Connections between circuit boards within the casting are made by pin type connectors.

7-8. Numbers enclosed in circles relate to the troubleshooting tree (Figure 5-10) and indicate the sequence in which troubleshooting steps should be performed.


7-9. SCHEMATIC DIAGRAMS.

7-10. The schematic diagrams (Figures 7-4 through 7-9) contained in this section show the detailed circuits in the Model 313A. Individual circuit boards are shown enclosed in dashed lines. Some components which are part of a particular circuit but physically located off the board are shown on the board and are enclosed by a series of short diagonal lines.


7-11. Components marked with an asterisk are those that are critical in value. The value of these components may vary from one instrument to another due to variations in transistor Beta etc. and the values shown on the schematic are average. Numbers in parenthesis indicate the paragraph number in the manual where the method of selecting the optimum value can be found.


7-12. Voltage levels and some waveforms have been included on the schematics. When measuring these voltages a high input impedance voltmeter (10 meg-ohms or greater) and oscilloscope should be used to prevent circuit loading.

REFERENCE DESIGNATIONS

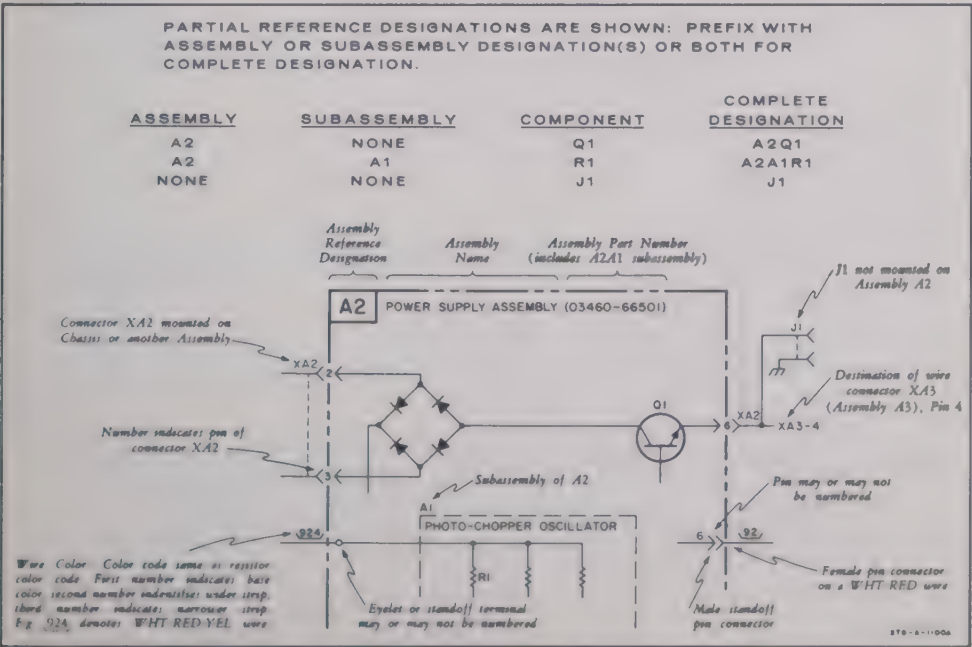


GENERAL SCHEMATIC NOTES

1. PARTIAL REFERENCE DESIGNATIONS ARE SHOWN. PREFIX WITH ASSEMBLY OR SUBASSEMBLY DESIGNATION(S) OR BOTH FOR COMPLETE DESIGNATION.
2. COMPONENT VALUES ARE SHOWN AS FOLLOWS UNLESS OTHERWISE NOTED.
 RESISTANCE IN OHMS
 CAPACITANCE IN MICROFARADS
 INDUCTANCE IN MICROHENRIES
3.  DENOTES ASSEMBLY GROUND.
 DENOTES CHASSIS GROUND WITHIN RF CASTING.
4.  DENOTES CHASSIS GROUND.
5.  DENOTES ASSEMBLY.
6.  DENOTES RF CASTING.
7.  DENOTES MAIN SIGNAL PATH.
8.  DENOTES FEEDBACK PATH.
9.  DENOTES FRONT PANEL MARKING.
10.  DENOTES REAR PANEL MARKING.
11.  DENOTES SCREWDRIVER ADJUST.
12.  DENOTES FRONT PANEL CONTROL.
13. 924 DENOTES WIRE COLOR: COLOR CODE SAME AS RESISTOR COLOR CODE. FIRST NUMBER IDENTIFIES BASE COLOR, SECOND NUMBER IDENTIFIES WIDER STRIP, THIRD NUMBER IDENTIFIES NARROWER STRIP.
 (e. g. 924 = WHITE, RED, YELLOW.)
14. * AVERAGE VALUE SHOWN, OPTIMUM VALUE SELECTED AT FACTORY.
15. (0-00) NUMBERS IN PARENTHESIS INDICATE THE PARAGRAPH NUMBER IN MANUAL WHERE METHOD OF SELECTING STARRED VALUES IS FOUND.
16. TRANSISTORS ARE ALL CONNECTED TO CIRCUIT BOARD IN TO-5 CONFIGURATION, ie,  AS VIEWED FROM THE COMPONENT SIDE OF BOARD.
17. WAVEFORM AND VOLTAGE MEASUREMENTS WERE MADE WITH RESPECT TO CHASSIS GROUND USING A HIGH INPUT IMPEDANCE OSCILLOSCOPE AND TRANSISTOR VOLTMETER. VOLTAGE LEVELS SHOWN ARE NOMINAL AND MAY VARY SOMEWHAT FROM ONE INSTRUMENT TO ANOTHER.

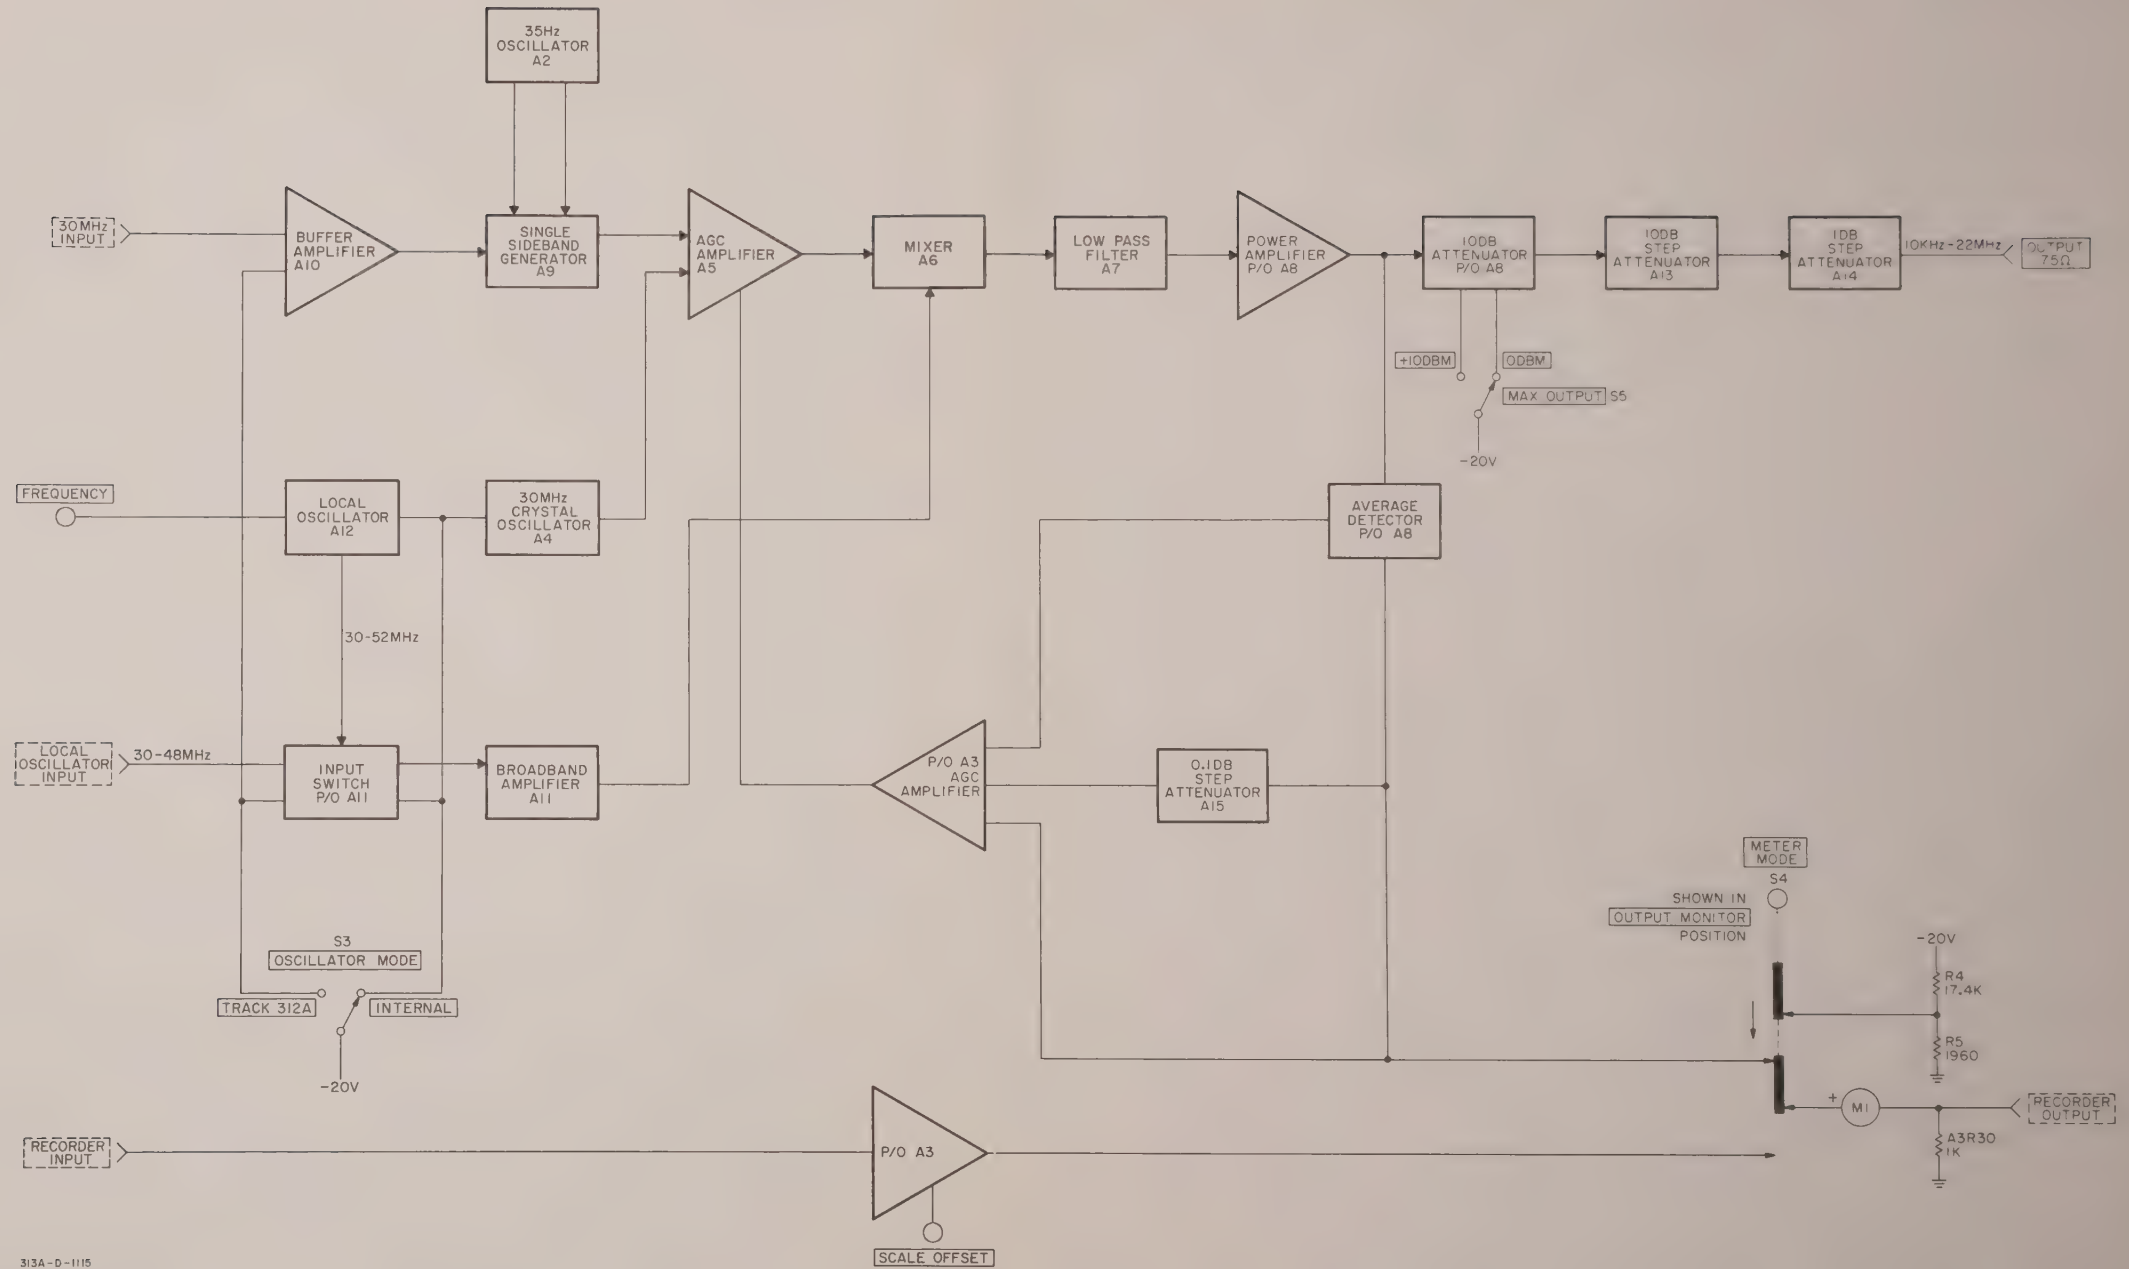


313A-D-1115

Figure 7-1. 313A Block Diagram

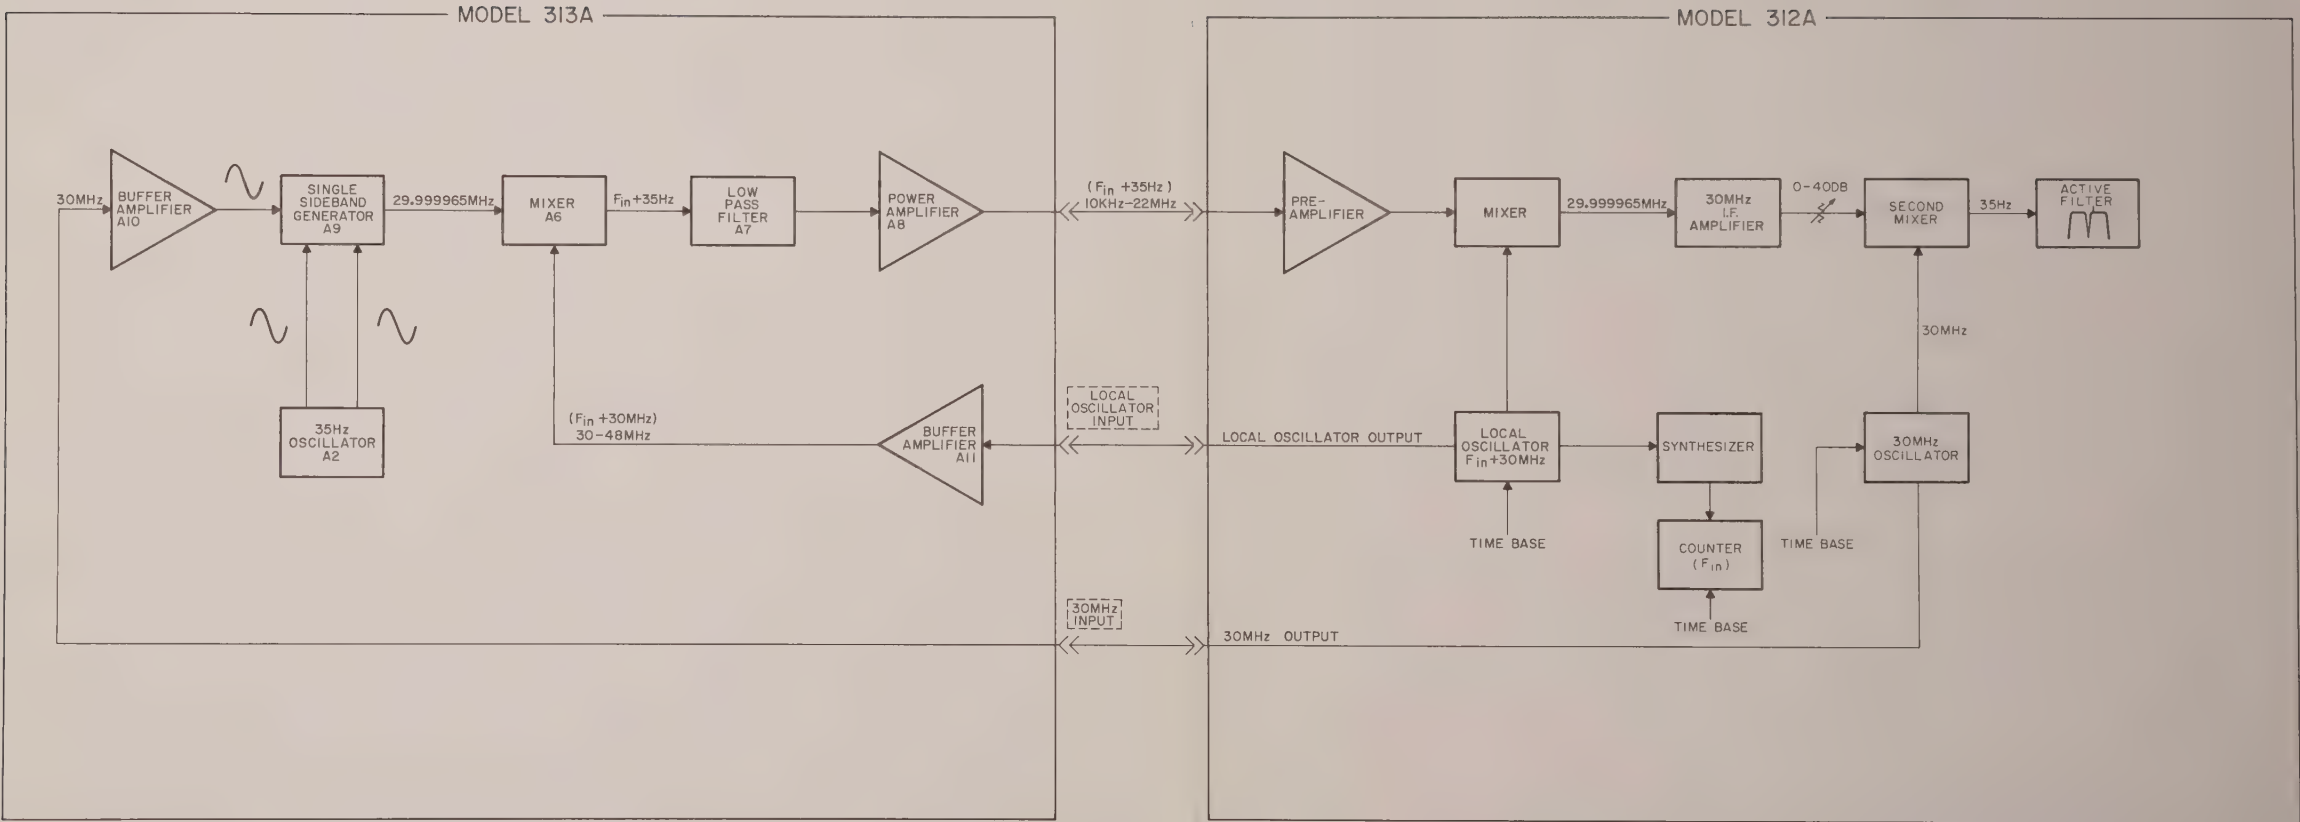

313A-D-1113

Figure 7-2. 313A-312A Interconnecting Block Diagram



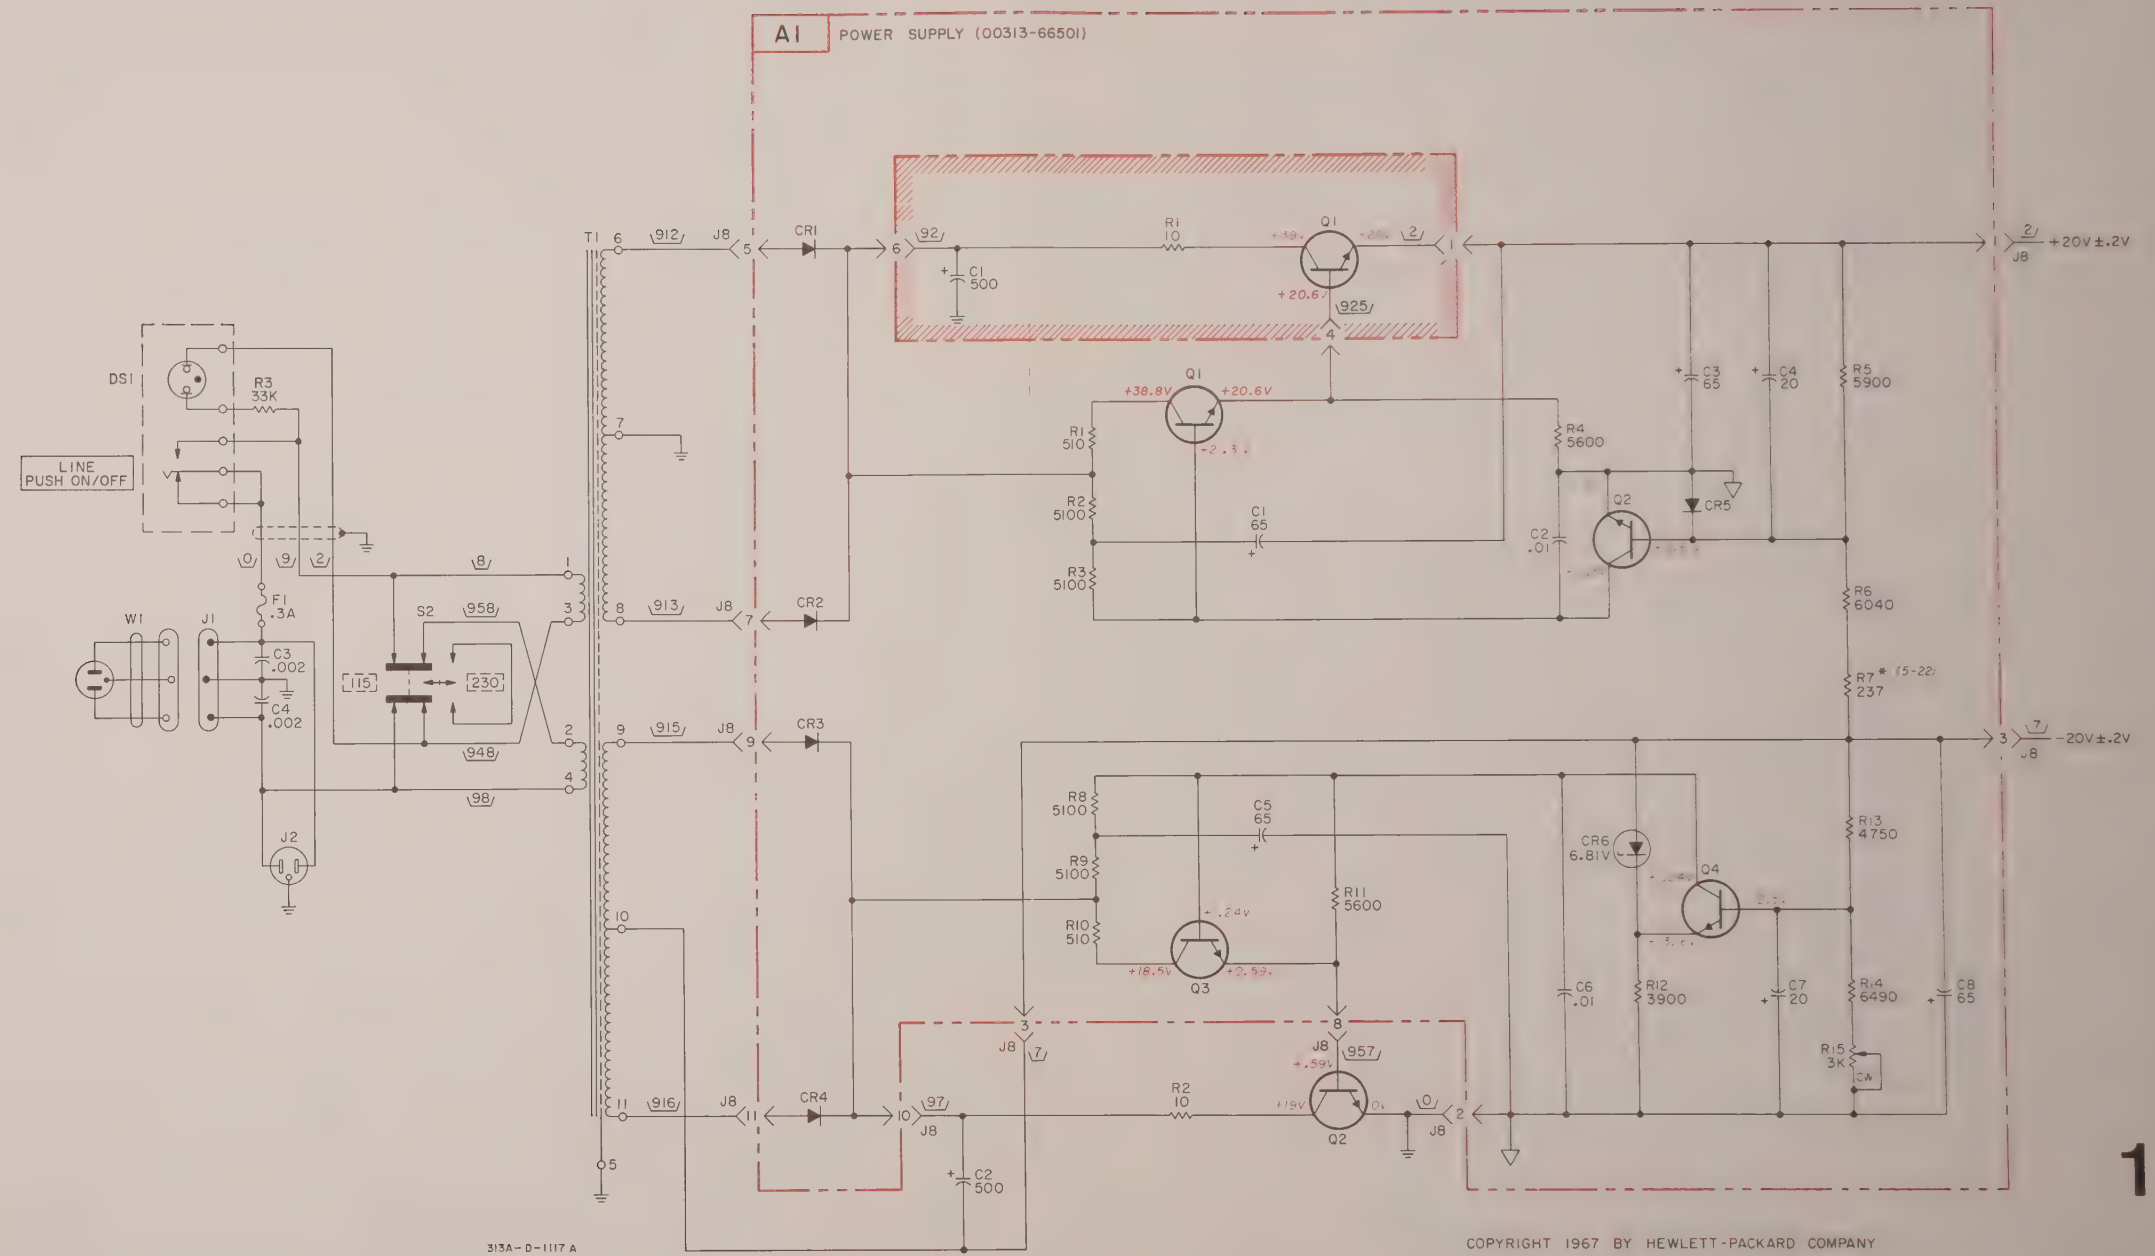
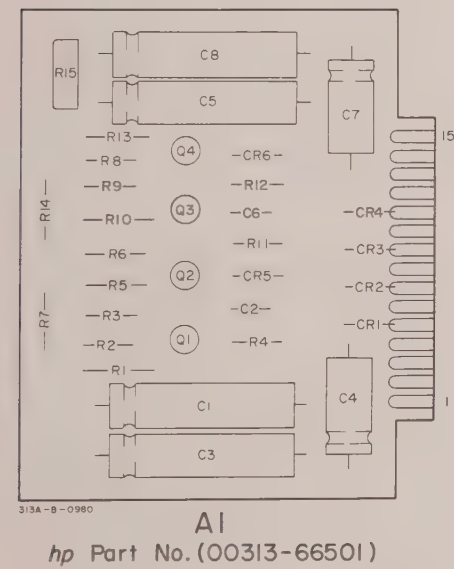


Figure 7-4. Power Supply (A1) Schematic and Component Location Diagram




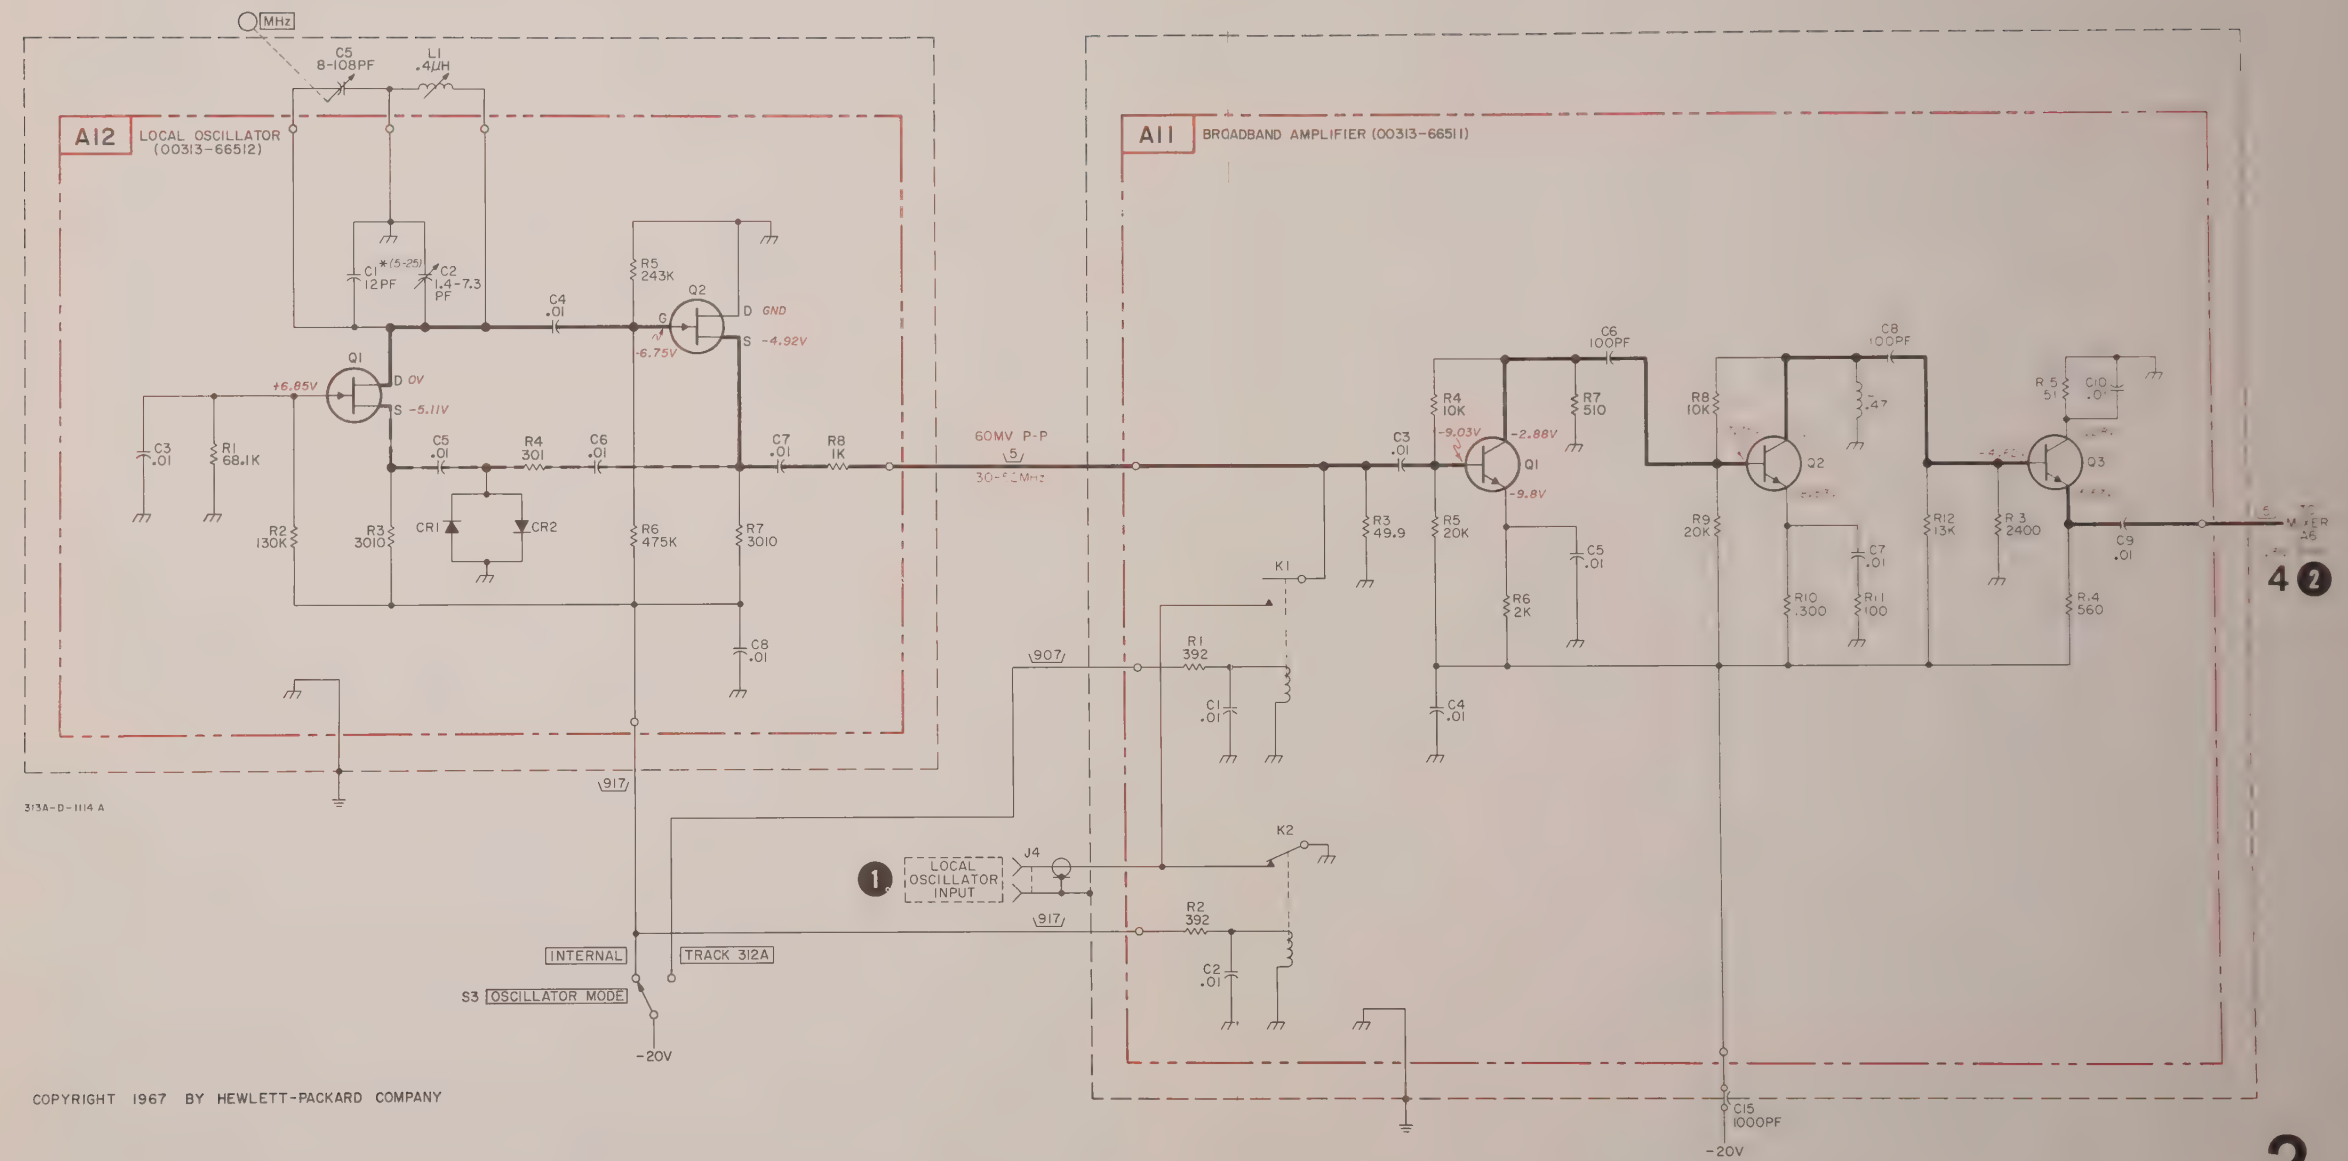



Figure 7-5. Local Oscillator (A12) Buffer Amplifier (A11) Schematic and Component Location Diagrams

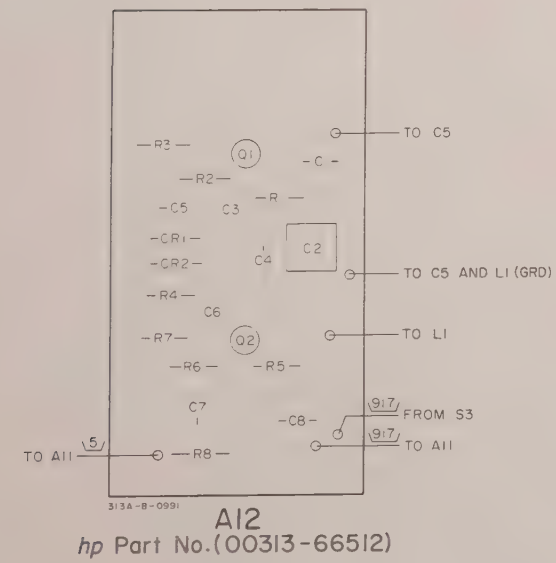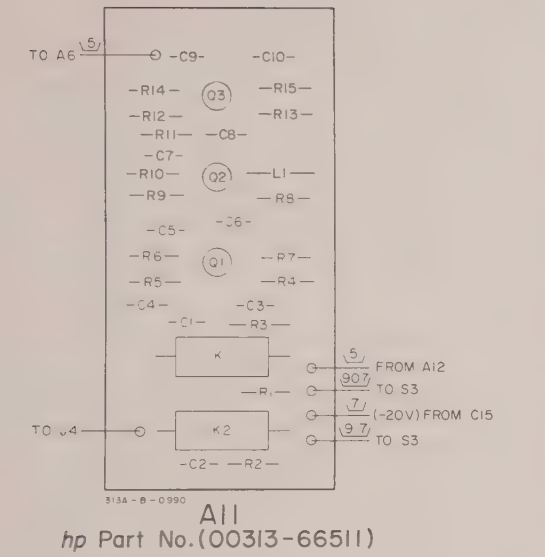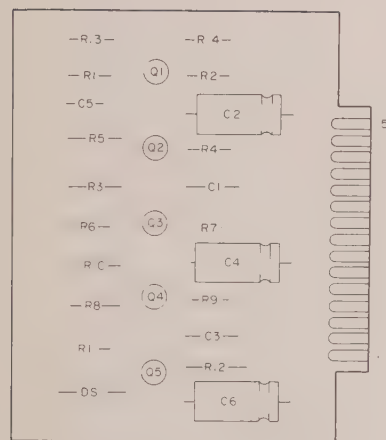


3A - 8 - 0981

A2


hp Part No. (00313-66502)

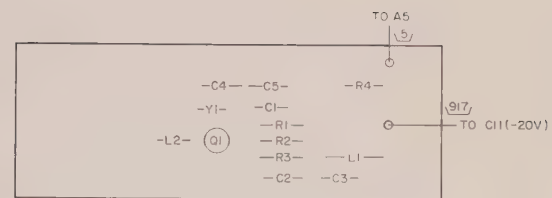


A4
hp Part No. (00313-66504)

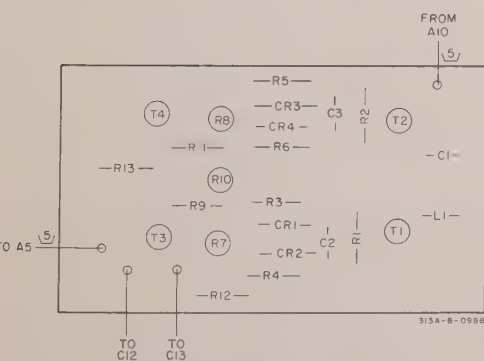

A9
hp Part No. (00313-66509)

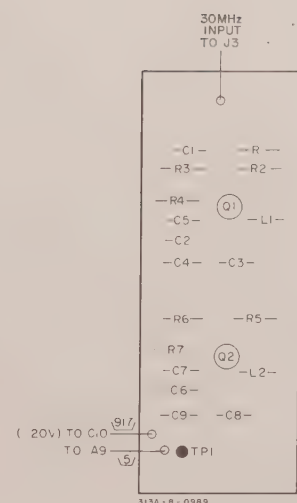

313A-B-0989
A10
hp Part No. (00313-66510)

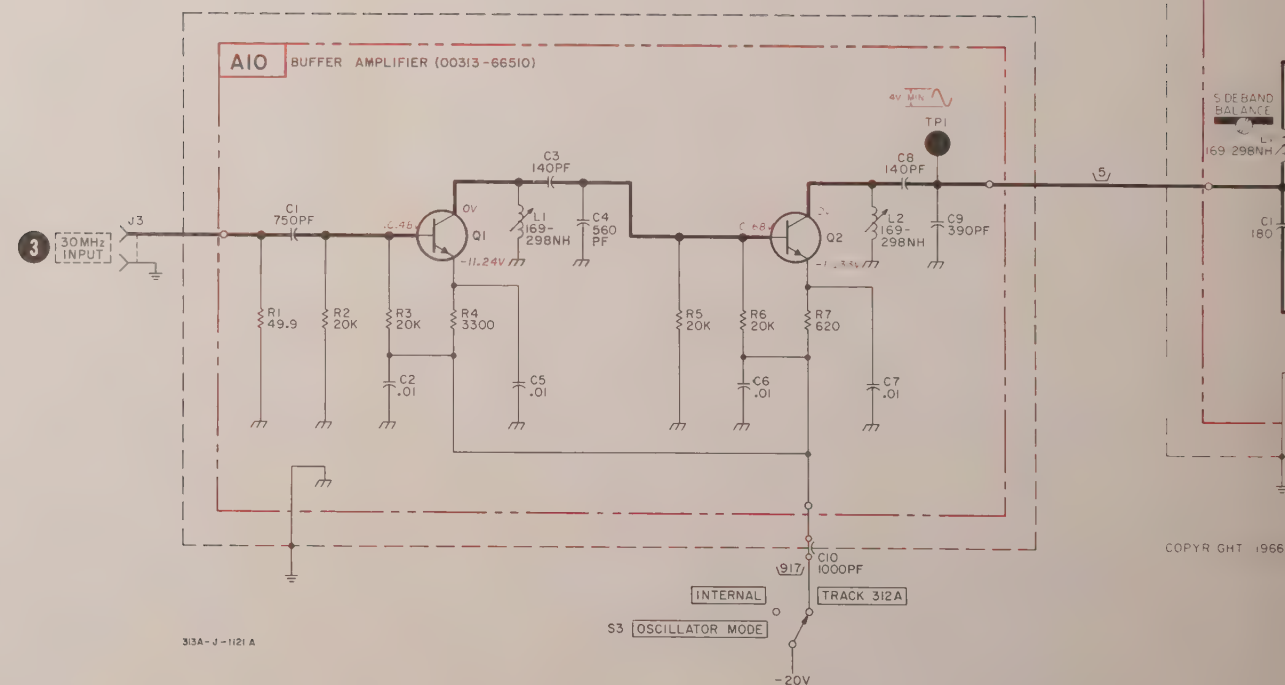

COPYRIGHT 1966




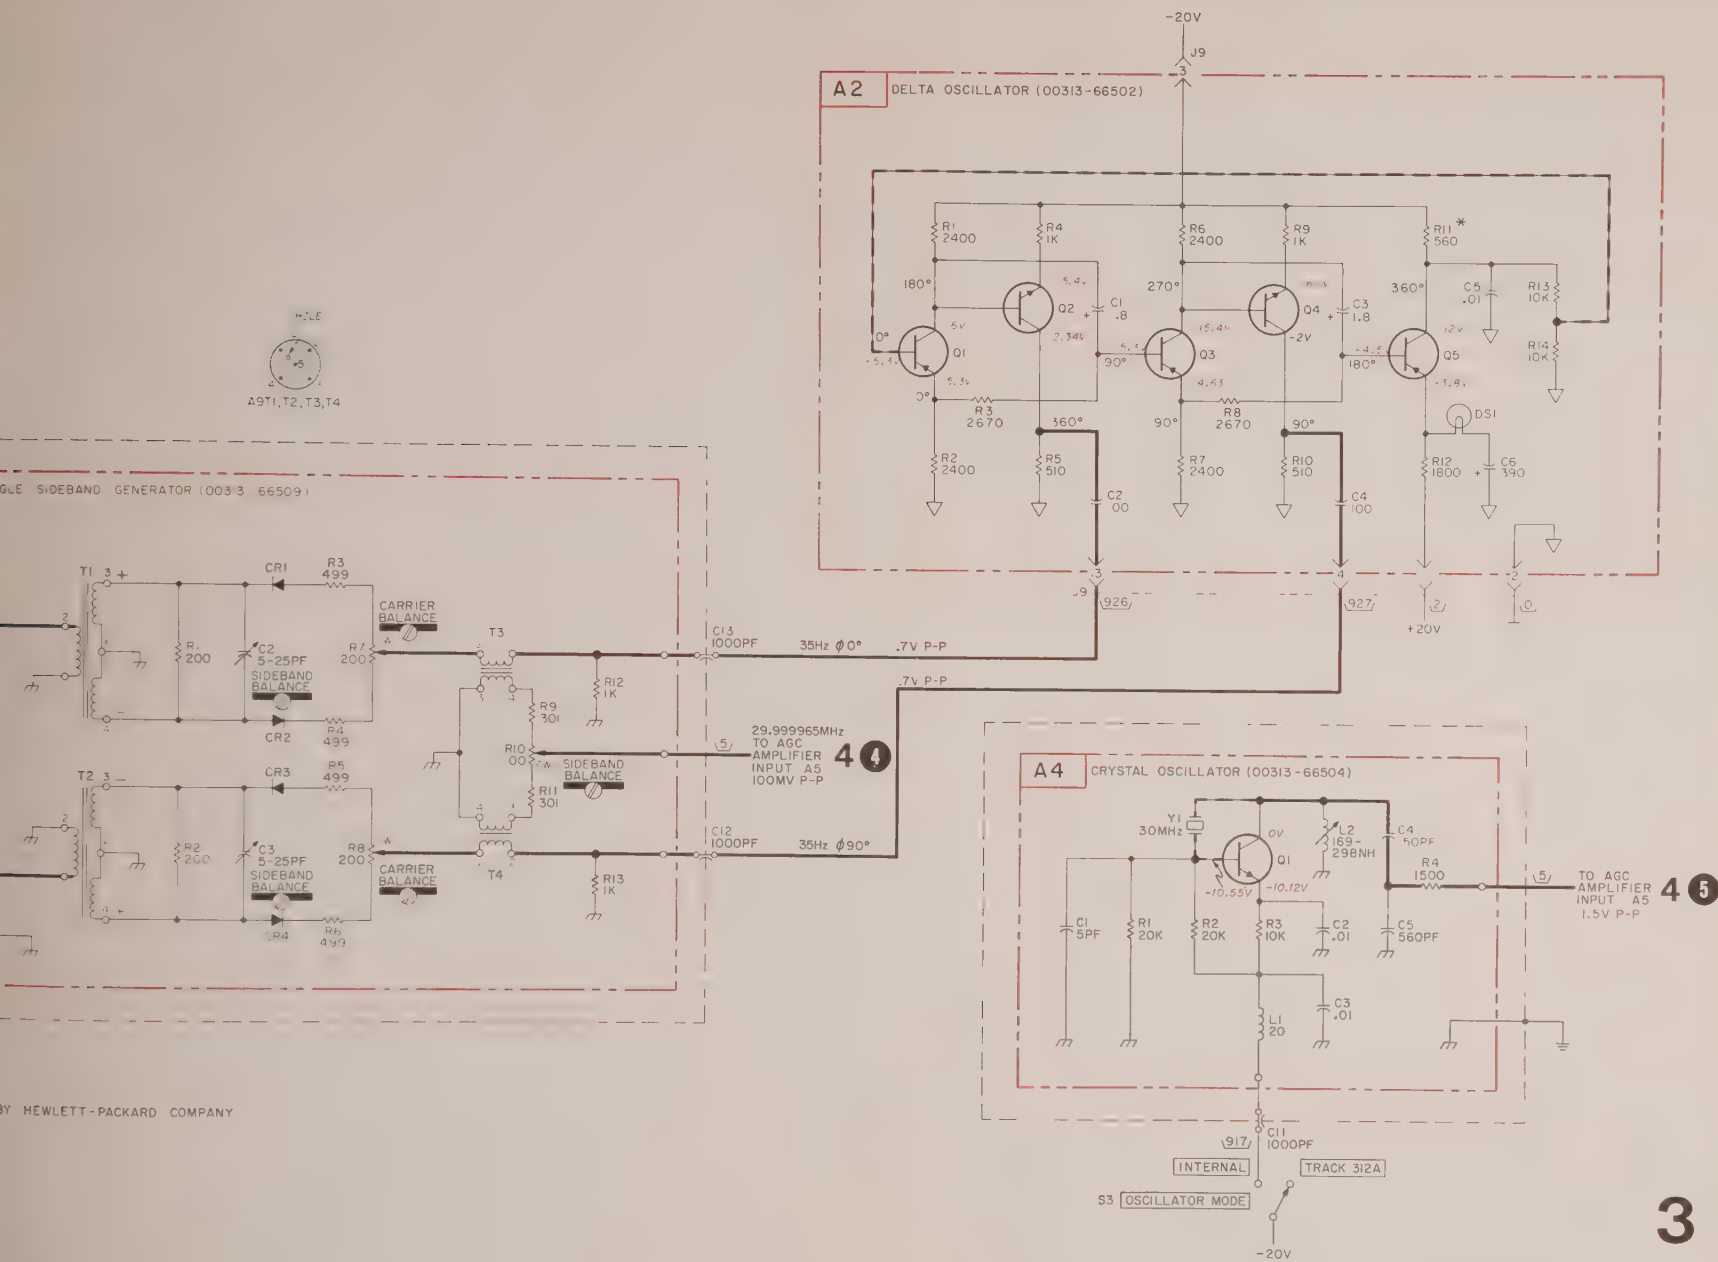


Figure 7-6. Buffer Amplifier (A10), Single Sideband Generator (A9), Delta Oscillator (A2) Crystal Oscillator (A4) Schematic and Component Location Diagram

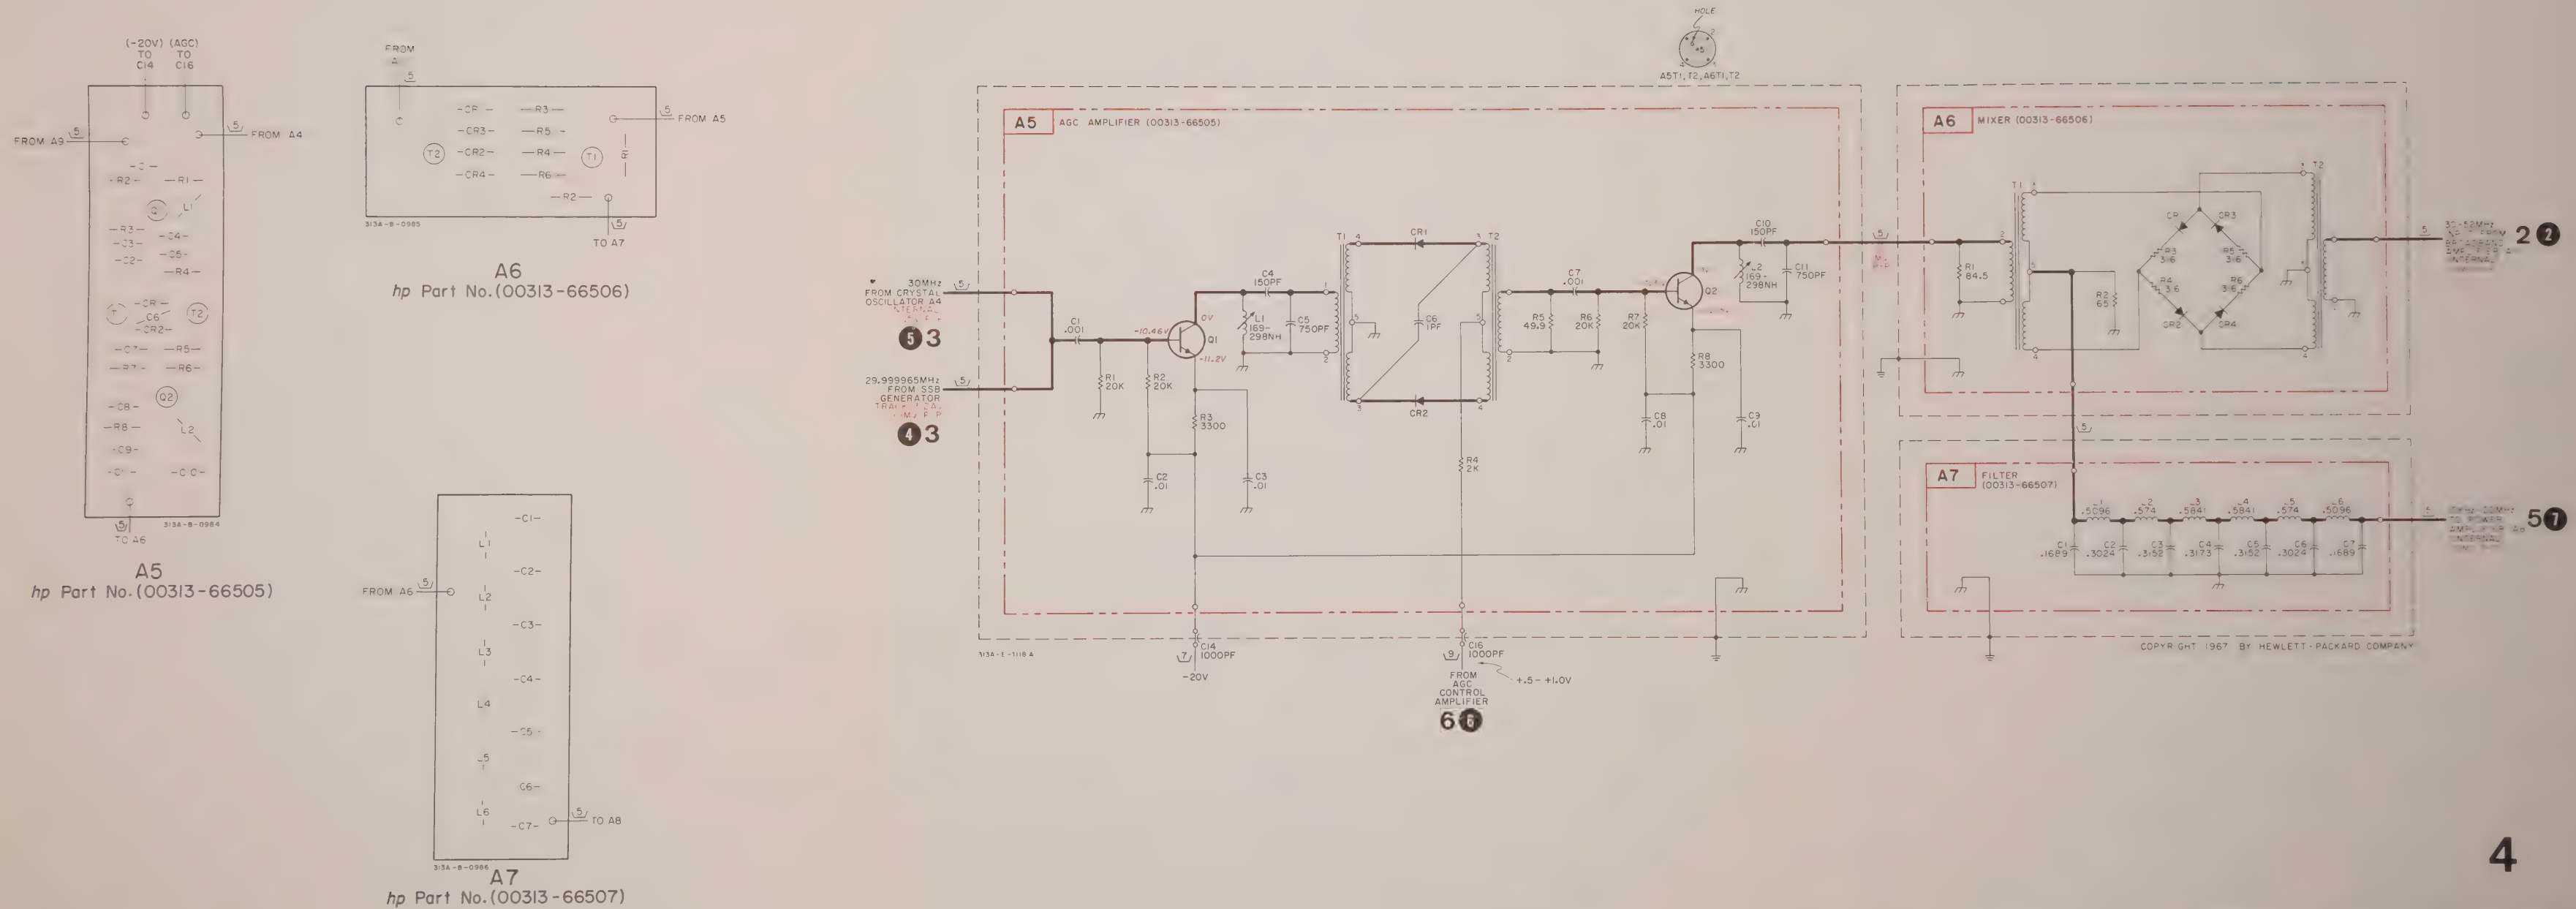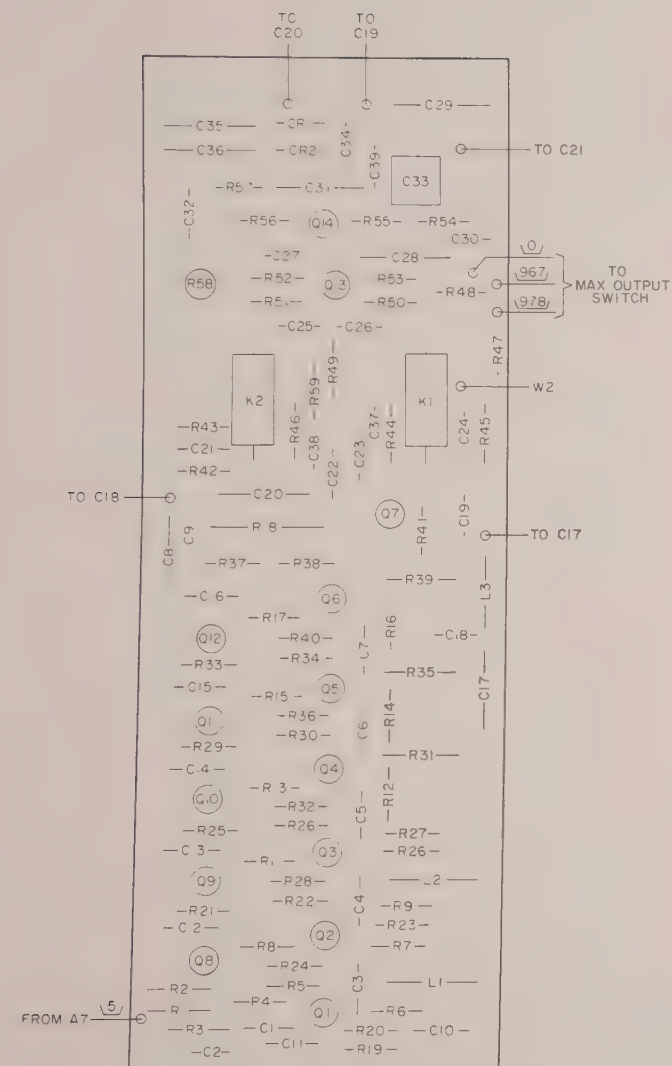

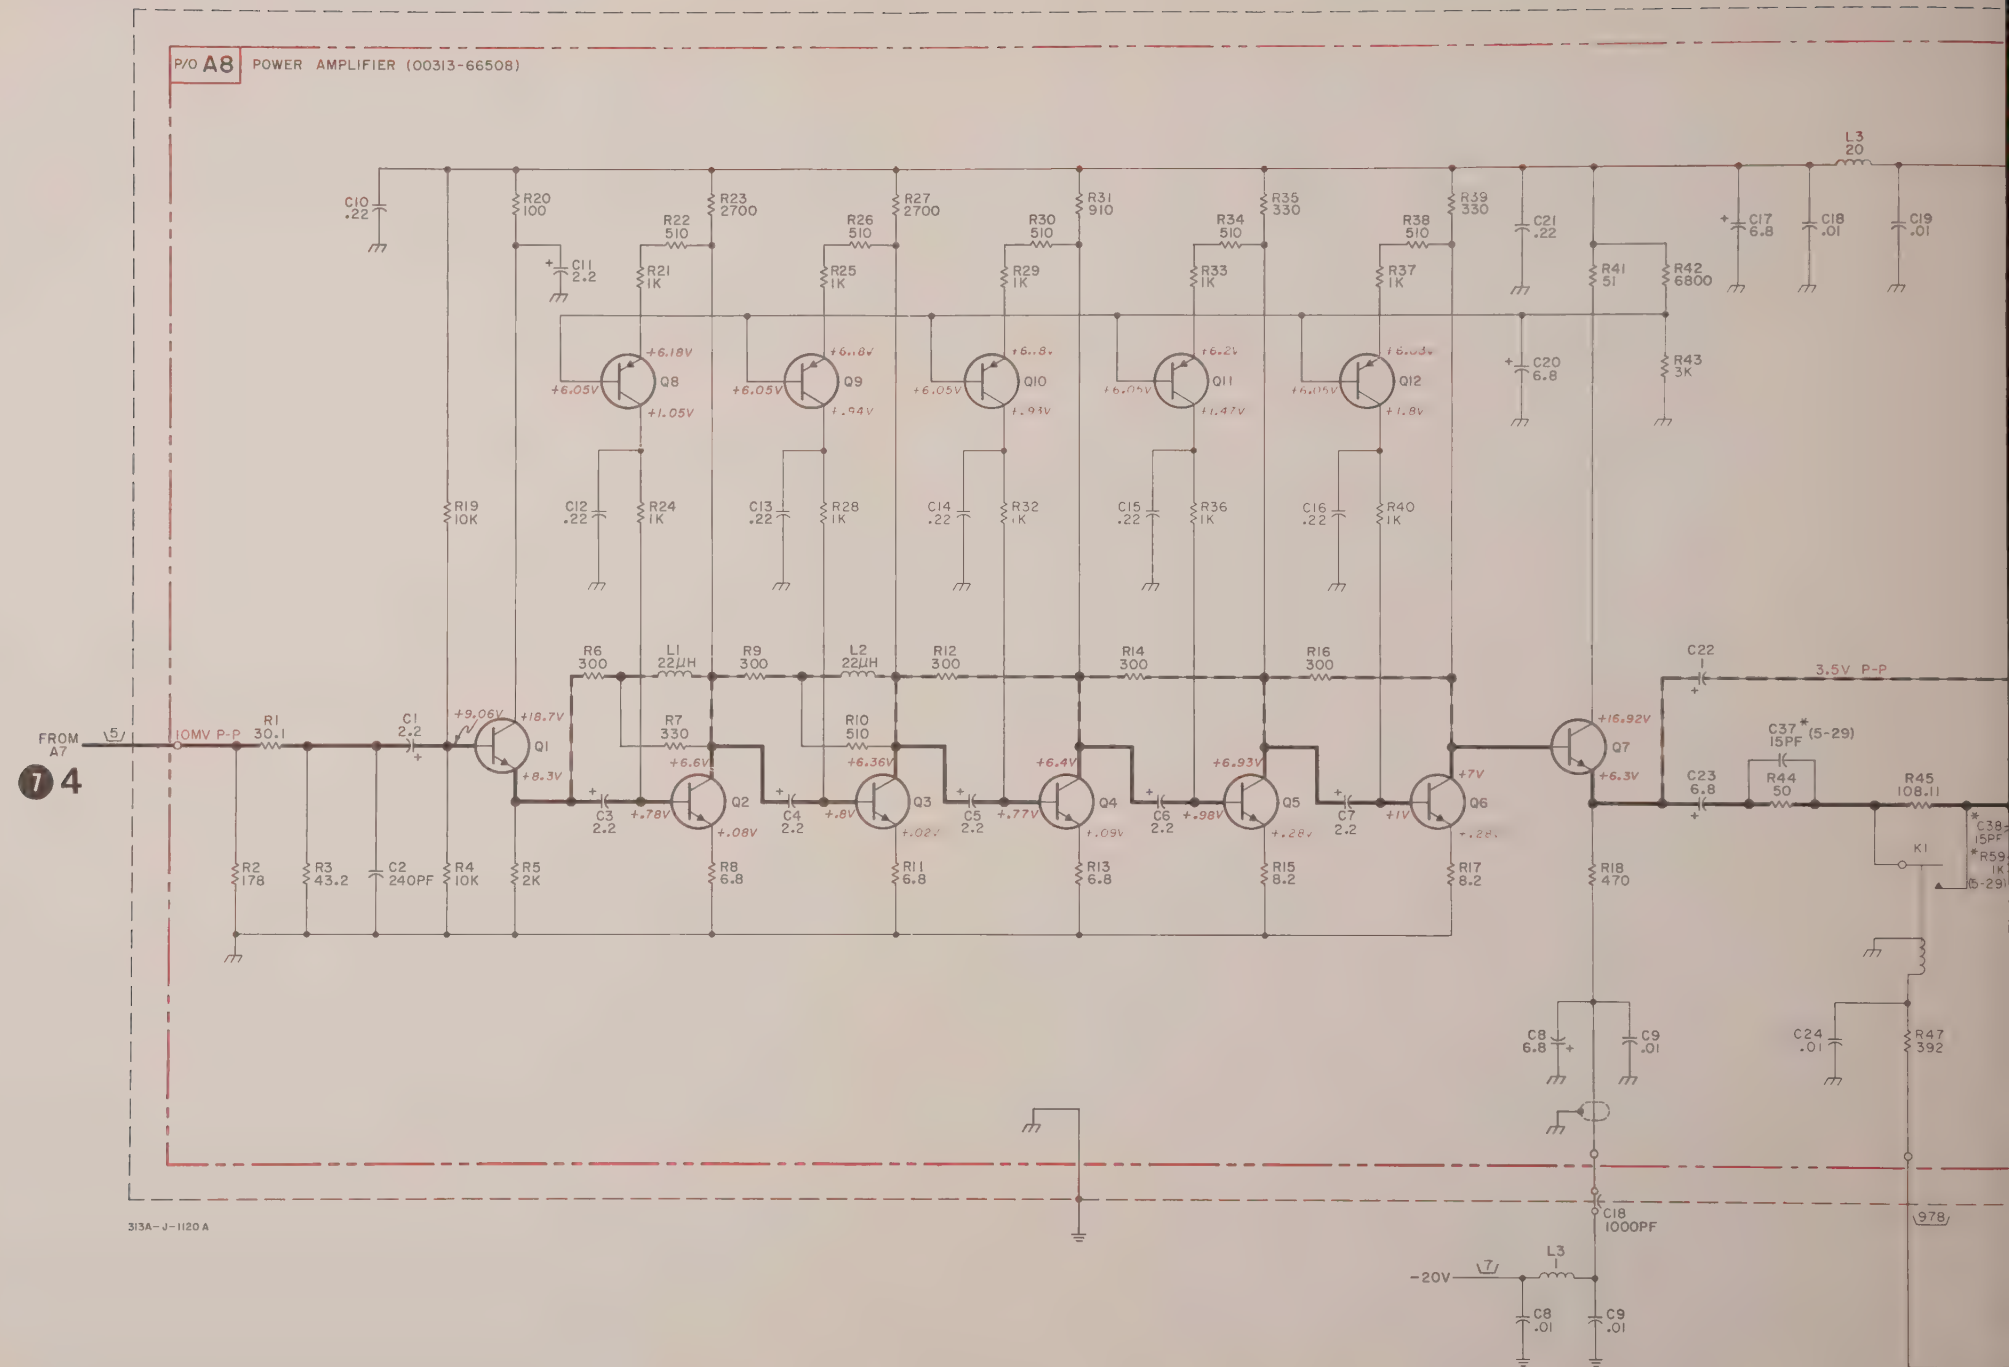

313A-B-0987
A8
hp Part No. (00313-66508)





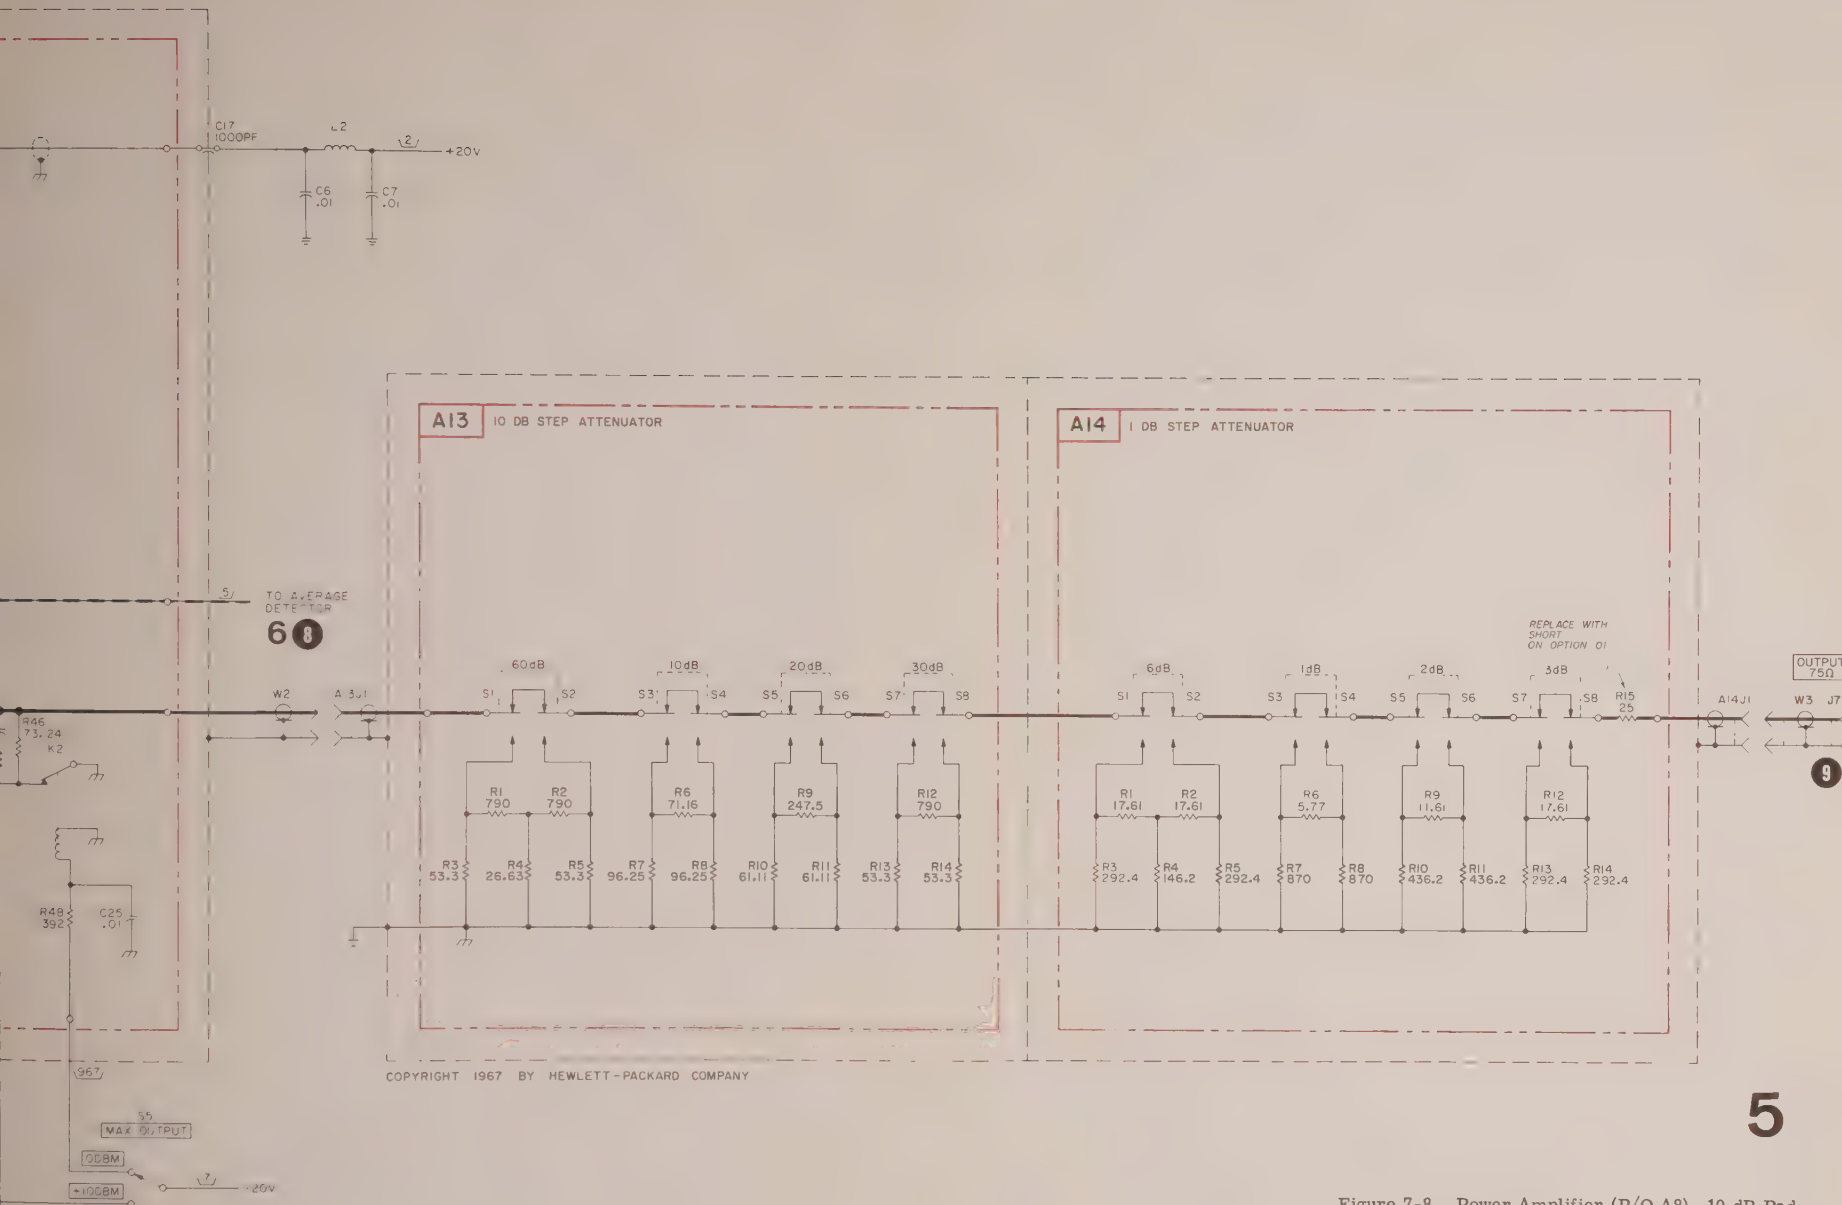


Figure 7-8. Power Amplifier (P/O A8), 10 dB Pad (P/O A8), 10 dB Step Attenuator (A13), 1 dB Step Attenuator (A14) Schematic and Component Location Diagrams.

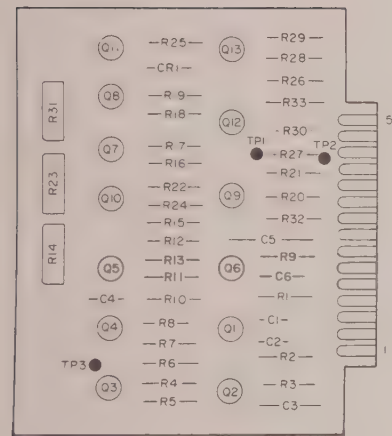

A3
hp Part No. (00313-66503)

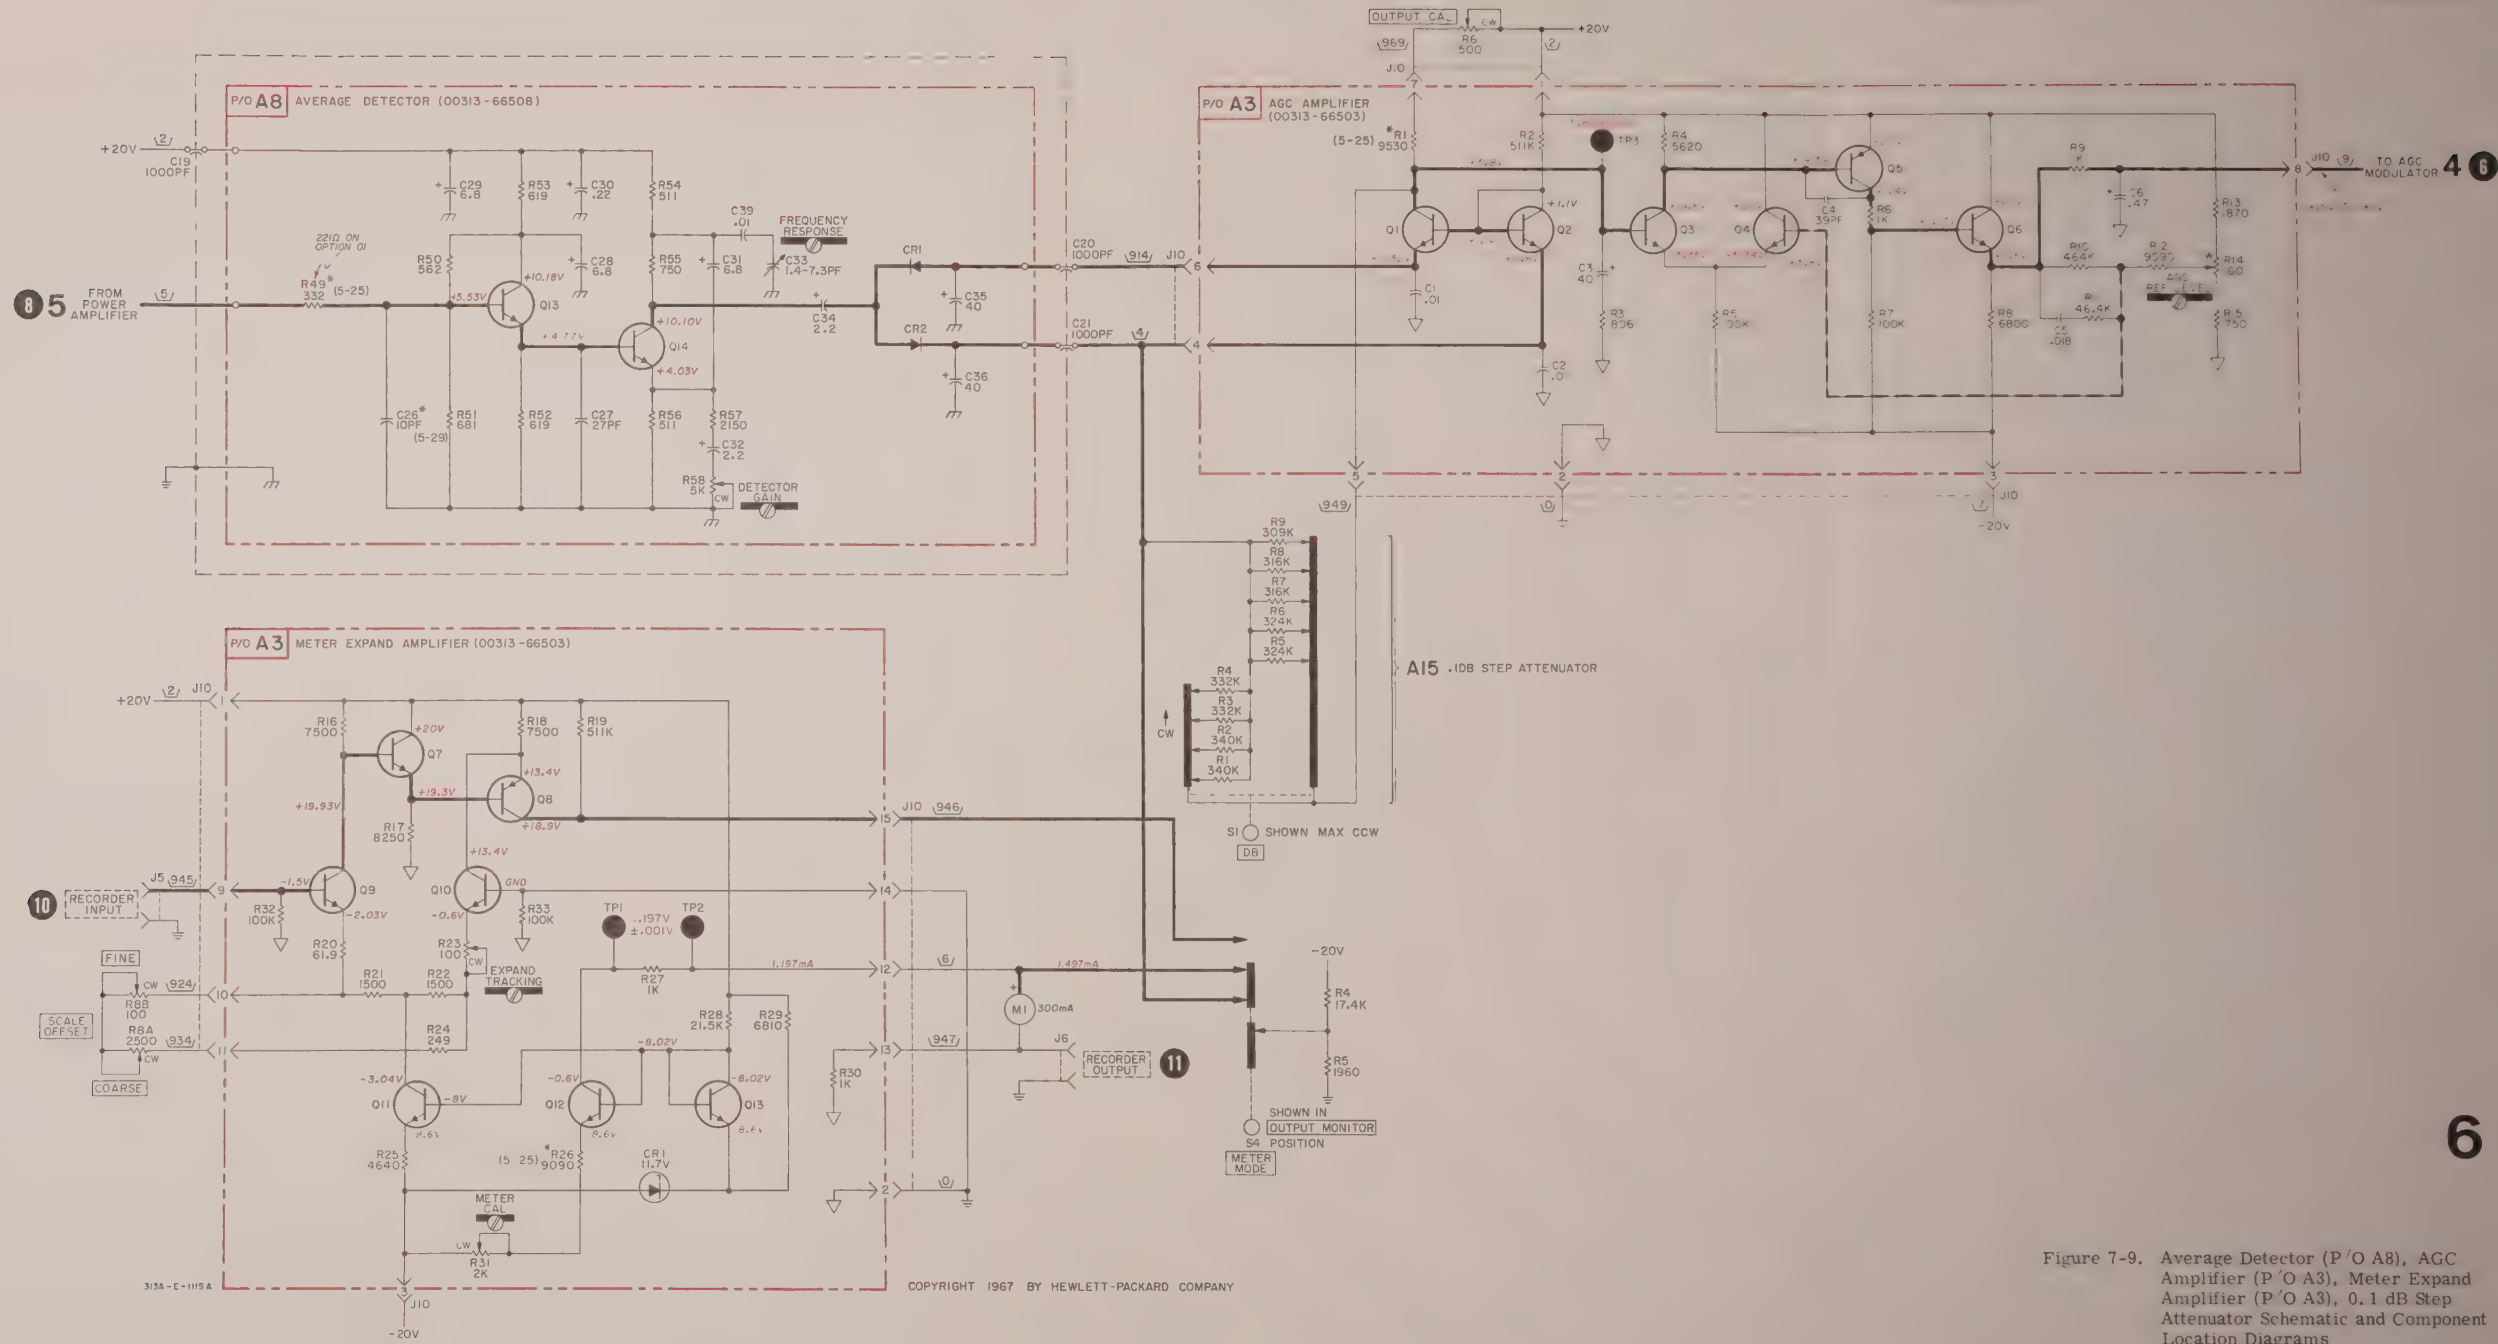

CODE LIST OF MANUFACTURERS

The following code numbers are from the Federal Supply Code for Manufacturers Cataloging Handbooks H4-1 (Name to Code) and H4-2 (Code to Name) and their latest supplements. The date of revision and the date of the supplements used appear at the bottom of each page. Alphabetical codes have been arbitrarily assigned to suppliers not appearing in the H4 Handbooks.

Code No	Manufacturer	Address	Code No	Manufacturer	Address	Code No	Manufacturer	Address	
U.S.A. Comm.	Any supplier of U.S.		35397	Union Carbide Corp.	Linde Div., Kemet Dept.	11242	Bay State Electronics Corp.	Waltham, Mass.	
Mr.Clay Electronics	Mount Holly Springs, Pa.				Cleveland, Ohio	11312	Teledyne Inc., Microwave Div.	Palo Alto, Calif.	
Sage Electronics Corp.	Rochester, N.Y.		35593	Irvington Engineering Co.	Sunnyvale, Calif.	11314	National Seal	Downey, Calif.	
Center Inc.	Danielson, Conn.		05616	Cosmo Plastic		11534	Duncan Electronics Inc.	Costa Mesa, Calif.	
Humidial	Colton, Calif.			Radio Electrica Spec. Co.	Cleveland, Ohio	11711	General Instrument Corp., Semiconductor Div., Products Group	Newark, N.J.	
Microtron Co., Inc.	Valley Stream, N.Y.		05624	Barber-Gorman Co.	Rockford, Ill.	11717	Imperial Electronic, Inc.	Buena Park, Calif.	
Garlock Inc.	Cherry Hill, N.J.		05728	Tihen Optical Co.		11870	Melabs, Inc.	Palo Alto, Calif.	
Aerovox Corp.	New Bedford, Mass.				Roslyn Heights, Long Island, N.Y.	12136	Philadelphia Handle Co.	Camden, N.J.	
Amp. Inc.	Harrisburg, Pa.		05729	Metro-Ter Corp.	Westbury, N.Y.	12361	Grove Mfg. Co., Inc.	Shady Grove, Pa.	
Aircraft Radio Corp.	Boonton, N.J.		05763	Stewart Engineering Co.	Santa Cruz, Calif.	12574	Gulton Ind. Inc. Data System Div.		
Northern Engineering Laboratories, Inc.	Burlington, Wis.		05870	Wakefield Engineering Inc.	Wakefield, Mass.				
			06004	Bessick Co., Div. of Stewart Warner Corp.					
Sangamo Electric Co., Pickens Div.	Pickens, S.C.		06090	Raychem Corp.	Redwood City, Calif.	12697	Clarostat Mfg. Co.	Dover, N.H.	
One Engineering Co.	City of Industry, Cal.		06175	Bausch and Lomb Optical Co.	Rochester, N.Y.	12728	Elmar Filter Corp.	W. Haven, Conn.	
Carl E. Holmes Corp.	Los Angeles, Calif.		06402	E.T.A. Products Co. of America	Chicago, Ill.	12859	Nippon Electric Co., Ltd.	Tokyo, Japan	
Microtab Inc.	Livingston, N.J.		06540	Amatom Electronic Hardware Co., Inc.	New Rochelle, N.Y.	12881	Metex Electronics Corp.	Clark, N.J.	
General Electric Co., Capacitor Dept.	Hudson Falls, N.Y.		06555	Beede Electrical Instrument Co., Inc.		12930	Delta Semiconductor Inc.	Newport Beach, Calif.	
					Penacook, N.H.	12954	Dickson Electronics Corp.	Scottsdale, Arizona	
Alden Products Co.	Brockton, Mass.				Indianapolis, Ind.	13103	Thermolloy	Dallas, Texas	
Allan Bradley Co.	Milwaukee, Wis.		06666	General Devices Co., Inc.	Phoenix, Ariz.	13396	Telefunken (GmbH)	Hanover, Germany	
Lifton Industries, Inc.	Beverly Hills, Calif.		06751	Semcor Div. Components Inc.		13835	Midland-Wright Div. of Pacific Industries, Inc.	Kansas City, Kansas	
TRW Semiconductors, Inc.	Lawndale, Calif.		06812	Torrington Mfg. Co., West Div.		14099	Sem-Tech	Newbury Park, Calif.	
Texas Instruments, Inc.					Van Nuys, Calif.	14193	Calif. Resistor Corp.	Santa Monica, Calif.	
Transistor Products Div.	Dallas, Texas		06980	Varian Assoc. Eimac Div.	San Carlos, Calif.	14298	American Components, Inc.	Conshohocken, Pa.	
The Alliance Mfg. Co.	Alliance, Ohio		07088	Kelvin Electric Co.	Van Nuys, Calif.	14433	ITT Semiconductor, A Div. of Int. Telephone & Telegraph Corp.	West Palm Beach, Fla.	
Pacific Relays, Inc.	Van Nuys, Calif.		07126	Digitran Co.	Pasadena, Calif.	14493	Hewlett-Packard Company	Loveland, Colo.	
Amerock Corp.	Rockford, Ill.		07137	Transistor Electronics Corp.	Minneapolis, Minn.	14655	Cornell Dublier Electric Corp.	Newark, N.J.	
Pulse Engineering Co.	Santa Clara, Calif.		07138	Westinghouse Electric Corp. Electronic Tube Div.	Elmira, N.Y.	14674	Corning Glass Works	Corning, N.Y.	
Ferrocube Corp. of America	Saugerties, N.Y.		07149	Filmom Corp.	New York, N.Y.	14752	Electro Cube Inc.	San Gabriel, Calif.	
Wheelock Signals, Inc.	Long Branch, N.J.		07233	Cinch-Graphix Co.	City of Industry, Calif.	14960	Williams Mfg. Co.	San Jose, Calif.	
Cole Rubber and Plastics Inc.	Sunnyvale, Calif.		07261	Avnet Corp.	Culver City, Calif.	15203	Webster Electronics Co.	New York, N.Y.	
Amphenol-Borg Electronics Corp.	Chicago, Ill.		07263	Fairchild Camera & Inst. Corp. Semiconductor Div.	Mountain View, Calif.	15287	Scionics Corp.	Northridge, Calif.	
Radio Corp. of America, Semiconductor and Materials Div.	Somerville, N.J.		07322	Minnesota Rubber Co.	Minneapolis, Minn.	15291	Adjustable Bushing Co.	N. Hollywood, Calif.	
Vocaline Co. of America, Inc.			07387	Birtcher Corp., The	Monterey Park, Calif.	15558	Micron Electronics	Garden City, Long Island, N.Y.	
	Old Saybrook, Conn.		07397	Sylvania Electr. Prod. Inc., Mt. View Operations	Mountain View, Calif.	15566	Amprobe Inst. Corp.	Lynbrook, N.Y.	
Hopkins Engineering Co.	San Fernando, Calif.		07700	Technical Wire Products Inc.	Cranford, N.J.	15631	Cabletronics	Costa Mesa, Calif.	
G.E. Semiconductor Prod. Dept.	Syracuse, N.Y.		07910	Continental Device Corp.	Hawthorne, Calif.	15772	Twentieth Century Coil Spring Co.	Santa Clara, Calif.	
Apex Machine & Tool Co.	Dayton, Ohio		07933	Raytheon Mfg. Co. Semiconductor Div.	Mountain View, Calif.	15801	Fenwal Elect. Inc.	Frammingham, Mass.	
Eldema Corp.	Compton, Calif.		07980	Hewlett-Packard Co., Boonton Radio Div.	Rockaway, N.J.	15818	Amelco Inc.	Mt. View, Calif.	
Transitron Electric Corp.	Wakefield, Mass.		08145	U.S. Engineering Co.	Los Angeles, Calif.	16037	Spruce Pine Mica Co.	Spruce Pine, N.C.	
Pyrofilm Resistor Co., Inc.	Cedar Knolls, N.J.		08289	Blinn, Delbert Co.	Pomona, Calif.	16179	Omni-Spectra Inc.	Detroit, Ill.	
Singer Co., Diehl Div.	Sumerville, N.J.		08358	Burgess Battery Co.	Niagara Falls, Ontario, Canada	16352	Computer Diode Corp.	Lodi, N.J.	
Findene Plant			08524	Deutsch Fastener Corp.	Los Angeles, Calif.	16688	Ideal Prec. Meter Co., Inc.	De Jur Meter Div.	Brooklyn, N.Y.
Arrow, Hart and Hegeman Elect. Co.	Hartford, Conn.		08664	Bristol Co., The	Waterbury, Conn.	16758	Delco Radio Div. of G.M. Corp.	Kokoma, Ind.	
Taurus Corp.	Lambertville, N.J.		08717	Sloan Company	Sun Valley, Calif.	17109	Thermometics Inc.	Canoga Park, Calif.	
Alco Electronic Inc.	Great Neck, N.Y.		08738	ITT Cannon Electric Inc.	Phoenix, Arizona	17474	Tranex Company	Mountain View, Calif.	
H-Q Division of Aerovox	Myrtle Beach, S.C.		08792	CBS Electronics Semiconductor Operations, Div. of C.B.S. Inc.	Lowell, Mass.	17675	Hamlin Metal Products Corp.	Akron, Ohio	
Precision Paper Tube Co.	Wheeling, Ill.		08864	Val-Rain	Indianapolis, Ind.	17745	Angstrom-Prec. Inc.	No. Hollywood, Calif.	
Dymec Division of Hewlett-Packard Co.	Palo Alto, Calif.		08924	Babcock Relays Div.	Costa Mesa, Calif.	17870	McGraw-Edison Co.	Manchester, N.H.	
Sylvania Electric Products, Microwave Device Div.	Mountain View, Calif.		09034	Texas Capacitor Co.	Houston, Texas	18042	Power Design Pacific Inc.	Palo Alto, Calif.	
Motorola Inc. Semiconductor Prod. Div.	Phoenix, Arizona		09045	Tech. Ind. Inc. Atom Elect.	Burbank, Calif.	18083	Clevite Corp., Semiconductor Div.	Palo Alto, Calif.	
Filton Co., Inc. Western Div.	Culver City, Calif.		09250	Electric Assemblies, Inc.	Chicago, Ill.	18324	Signetics Corp.	Sunnyvale, Calif.	
Automatic Electric Co.	Northlake, Ill.		09665	Mallory Battery Co. of Canada, Ltd.	Toronto, Ontario, Canada	18476	Ty-Cor Mfg. Co., Inc.	Holliston, Mass.	
Sequoyia Wire Co.	Redwood City, Calif.		10214	General Transistor Western Corp.	Los Angeles, Calif.	18486	TRW Elect. Comp. Div.	Des Plaines, Ill.	
Precision Coil Spring Co.	El Monte, Calif.		10441	Tri-Tal, Inc.	Berkeley, Calif.	18553	Curtis Instrument Inc.	Mt. Kisco, N.Y.	
P.M. Motor Company	Bethlehem, Ill.		10445	Carborundum Co.	Niagara Falls, N.Y.	18873	E.I. DuPont and Co., Inc.	Wilmington, Del.	
Component Mfg. Service Co.	W. Bridgewater, Mass.		10495	CTS Int'l. Berne, Inc.	Berne, Ind.	18911	Durant Mfg. Co.	Milwaukee, Wis.	
Twentieth Century Plastics Inc.	Los Angeles, Calif.		11297	Chicago Telephone of California Inc.	So. Pasadena, Calif.	19315	The Bendix Corp., Navigation & Control Div.	Teledyne, N.J.	
Westinghouse Electric Corp. Sem. Conductor Dept.	Youngwood, Pa.					19500	Thomas A. Edison Industries Div. of McGraw-Edison Co.	West Orange, N.J.	
Electronics Inc.	San Mateo, Calif.					19424	Conduca	Baldwin Park, Calif.	
						19424	LRC Electronics	Horseshoe, N.Y.	
						19500	Electra-Mfg. Co.	Independence, Kansas	

From FSC Handbook Supplements
H4-1 Dated AUGUST 1966
H4-2 Dated NOV. 1967

CODE LIST OF MANUFACTURERS (Cont'd)

Code No	Manufacturer	Address	Code No	Manufacturer	Address	Code No	Manufacturer	Address
71436	General Atomics Corp.	Philadelphia, Pa.	71436	Chicago Condenser Corp.	Chicago, Ill.	77252	Philadelphia Steel and Wire Corp.	Philadelphia, Pa.
71447	Executone, Inc.	Long Island City, N.Y.	71447	Calif. Spring Co., Inc.	Pico-Rivera, Calif.	77342	American Machine & Foundry Co.	Potter
71450	Fahrer Bearing Co., The	New Britain, Conn.	71450	CTS Corp.	Elkhart, Ind.		& Brumfield Div.	Prieston, Ind.
	Fansteel Metallurgical Corp.	N. Chicago, Ill.	71468	ITT Cannon Electric Inc.	Los Angeles, Calif.	77630	TRW Electronic Components Div.	Camden, N.J.
	British Radio Electronics Ltd.	Washington, D.C.	71471	Cinema, Div. Aerovox Corp.	Burbank, Calif.	77638	General Instrument Corp., Rectifier Div.	Brooklyn, N.Y.
	G E Lamp Division	Nela Park, Cleveland, Ohio	71482	C. P. Clare & Co.	Chicago, Ill.	77969	Rubbercraft Corp. of Calif.	Torrance, Calif.
	General Radio Co.	West Concord, Mass.	71590	Centralab Div. of Globe Union Inc.	Milwaukee, Wis.	78169	Shakeproof Division of Illinois Tool Works	Elgin, Ill.
71616	Mewco Inc. Comp. Div.	Huntington, Ind.	71616	Commercial Plastics Co.	Chicago, Ill.	78283	Signal Indicator Corp.	New York, N.Y.
71700	Gries Reproducer Corp.	New Rochelle, N.Y.	71700	Cornish Wire Co., The	New York, N.Y.	78290	Struthers-Dunn Inc.	Pitman, N.J.
	Grobel File Co. of America, Inc.	Carlstadt, N.J.	71707	Colo-Coil Co., Inc.	Providence, R.I.	78452	Thompson-Bremer & Co.	Chicago, Ill.
	Hamilton Watch Co.	Lancaster, Pa.	71744	Chicago Miniature Lamp Works	Chicago, Ill.	78471	Tilley Mfg. Co.	San Francisco, Calif.
71744	Hewlett-Packard Co.	Palo Alto, Calif.	71785	Cinch Mfg. Co., Howard B. Jones Div.	Chicago, Ill.	78486	Stackpole Carbon Co.	St. Marys, Pa.
71785	Meyman Mfg. Co.	Kenilworth, N.J.	71984	Dow Corning Corp.	Midland, Mich.	78493	Standard Thomson Corp.	Waltham, Mass.
	G. E. Receiving Tube Dept.	Owensboro, Ky.	72136	Electro Motive Mfg. Co., Inc.	Willimantic, Conn.	78553	Tinnerman Products, Inc.	Cleveland, Ohio
72136	Lectron Inc.	Chicago, Ill.	72619	Dialight Corp.	Brooklyn, N.Y.	78790	Transformer Engineers	San Gabriel, Calif.
	Stanley Coil Products Ltd.	Hawkesbury, Ontario, Canada	72656	Indiana General Corp., Electronics Div.	Kearby, N.J.	78947	Jacinto Co.	Newtonville, Mass.
	Cunningham, W. H. & Hill, Ltd.	Toronto, Ontario, Canada	72699	General Instrument Corp., Cap. Div.	Newark, N.J.	79136	Wades Kohinor Inc.	Long Island City, N.Y.
	P. R. Mallory & Co. Inc.	Indianapolis, Ind.	72765	Drake Mfg. Co.	Harwood Heights, Ill.	79142	Veeder Root, Inc.	Hartford, Conn.
	Mechanical Industries Prod. Co.	Akron, Ohio	72825	Hugh H. Eby Inc.	Philadelphia, Pa.	79251	Wenco Mfg. Co.	Chicago, Ill.
	Miniature Precision Bearings, Inc.	Keene, N.H.	72928	Gudeman Co.	Chicago, Ill.	79727	Continental-Wire Electronics Corp.	Philadelphia, Pa.
72928	Muter Co.	Chicago, Ill.	72964	Robert M. Hadley Co.	Los Angeles, Calif.	79963	Zierick Mfg. Corp.	New Rochelle, N.Y.
72964	C. A. Noisren Co.	Englewood, Colo.	72982	Erie Technological Products, Inc.	Erie, Pa.	80031	Mepco Division of Sessions Clock Co.	Morristown, N.J.
73061	Omrite Mfg. Co.	Shoke, Ill.	73061	Hansen Mfg. Co., Inc.	Princeton, Ind.	80120	Schnitzer Alloy Products Co.	Any brand
73076	Penn Eng. & Mfg. Corp.	Doylestown, Pa.	73076	H. M. Haiper Co.	Chicago, Ill.	80131	Electronic Industries Association	Tube-meeting EIA Standards-Washington, DC
73138	Polaroid Corp.	Cambridge, Mass.	73138	Helipot Div. of Beckman Inst., Inc.	Fullerton, Calif.	80707	Unimax Switch, Div. Maxon Electronics Corp.	Wallingford, Conn.
	Precision Thermometer & Inst. Co.	Southampton, Pa.	73293	Hughes Products Division of Hughes Aircraft Co.	Newport Beach, Calif.	80723	United Transformer Corp.	New York, N.Y.
73445	Microwave & Power Tube Div.	Waltham, Mass.	73445	Amperex Elect. Co.	Hicksville, L.I., N.Y.	80748	Oxford Electric Corp.	Chicago, Ill.
73506	Rolan Controller Co.	Westminster, Md.	73506	Bradley Semiconductor Corp.	New Haven, Conn.	80794	Bouns Inc.	Riverside, Calif.
73559	Sanborn Company	Waltham, Mass.	73559	Carling Electric, Inc.	Hartford, Conn.	80841	Acro Div. of Robertshaw Controls Co.	Columbus, Ohio
73586	Shaftercross Mfg. Co.	Selma, N.C.	73586	Circle F Mfg. Co.	Trenton, N.J.	80859	All Star Products Inc.	Elizabeth, N.J.
73682	Simpson Electric Co.	Chicago, Ill.	73682	George K. Garrett Co., Div. MSL Industries Inc.	Philadelphia, Pa.	80860	Avery Label Co.	Monrovia, Calif.
	Sonotone Corp.	Elmsford, N.Y.	73734	Federal Screw Products Inc.	Chicago, Ill.	80863	Hammillund Co., Inc.	New York, N.Y.
	Raytheon Co. Commercial Apparatus & Systems Div.	So. Norwalk, Conn.	73743	Fischer Special Mfg. Co.	Cincinnati, Ohio	80864	Stevens, Arnold, Co., Inc.	Boston, Mass.
	Spraying Fibre Co., Inc.	Tonawanda, N.Y.	73793	General Industries Co., The	Elyria, Ohio	81030	International Instruments Inc.	Orange, Conn.
	Sprague Electric Co.	North Adams, Mass.	73846	Goshen Stamping & Tool Co.	Goshen, Ind.	81073	Grayhill Co.	LaGrange, Ill.
73846	Telex Corp.	Tulsa, Okla.	73849	JFD Electronics Corp.	Brooklyn, N.Y.	81095	Trid Transformer Corp.	Venice, Calif.
	Thomas & Betts Co.	Elizabeth, N.J.	73905	Jennings Radio Mfg. Corp.	San Jose, Calif.	81312	Winchester Elec. Div. Lilton Ind., Inc.	Oakville, Conn.
	Triplet Electrical Inst. Co.	Bluffton, Ohio	73957	Groov-Pin Corp.	Ridgefield, N.J.	81349	Military Specification	
	Union Switch and Signal, Div. of Westinghouse Air Brake Co.	Pittsburgh, Pa.	74276	Signalite Inc.	Neptune, N.J.	81483	International Rectifier Corp.	El Segundo, Calif.
	Universal Electric Co.	Owosso, Mich.	74455	J. H. Winns, and Sons	Winchester, Mass.	81541	Airpax Electronics, Inc.	Cambridge, Maryland
	Ward Leonard Electric Co.	Mt. Vernon, N.Y.	74861	Industrial Condenser Corp.	Chicago, Ill.	81860	Barry Controls, Div. Barry Wright Corp.	Watertown, Mass.
	Western Electric Co., Inc.	New York, N.Y.	74868	R. F. Products Division of Amphenol-Borg Electronics Corp.	Danbury, Conn.	82042	Carter Precision Electric Co.	Shokio, Ill.
	Weston Inst. Inc. Weston Newark	Newark, N.J.	74970	E. F. Johnson Co.	Waseca, Minn.	82047	Sperit Faraday Inc., Copper Hewitt Electric Div.	Hoboken, N.J.
	Wiltek Mfg. Co.	Chicago, Ill.	75042	International Resistance Co.	Philadelphia, Pa.	82142	Jeffers Electronics Division of Speed Carbon Co.	Du Bois, Pa.
	Minnesota Mining & Mfg. Co. Revere-Mincom Div.	St. Paul, Minn.	75376	CTS Knights Inc.	Sandwich, Ill.	82170	Fairchild Camera & Inst. Corp. Space & Defense System Div.	Paramus, N.J.
	Allen Mfg. Co.	Hartford, Conn.	75382	Kulka Electric Corporation	Mt. Vernon, N.Y.	82209	Maguire Industries, Inc.	Greenwich, Conn.
	Audio Control	New York, N.Y.	75818	Lenz Electric Mfg. Co.	Chicago, Ill.	82219	Sylvania Electric Prod. Inc. Electronic Tube Division	Emporium, Pa.
	Atometal Screw Product Co., Inc.	Garden City, N.Y.	75915	Littelfuse, Inc.	Des Plaines, Ill.	82376	Astron Corp.	East Newark, Harrison, N.J.
	Atlantic India Rubber Works, Inc.	Chicago, Ill.	76005	Lord Mfg. Co.	Erie, Pa.	82389	Switchcraft, Inc.	Chicago, Ill.
	Amperite Co. Inc.	Union City, N.J.	76210	C. W. Marwedel	San Francisco, Calif.	82647	Metals & Controls Inc. Spencer Products	Amherst, Mass.
	ADC Products Inc.	Minneapolis, Minn.	76433	General Instrument Corp., Micamold Division	Newark, N.J.	82768	Phillips-Advance Control Co.	Joliet, Ill.
	Beiden Mfg. Co.	Chicago, Ill.	76487	James Miller Mfg. Co., Inc.	Malden, Mass.	82866	Research Products Corp.	Madison, Wis.
	Bird Electronic Corp.	Cleveland, Ohio	76493	J. W. Miller Co.	Los Angeles, Calif.	82877	Roton Mfg. Co., Inc.	Waukegan, N.Y.
	Bunnbach Radio Co.	New York, N.Y.	76530	Cinch-Monadnock, Div. of United Carr Fastener Corp.	San Leandro, Calif.	82893	Vector Electronic Co.	Greensboro, Calif.
	Boston Gear Works Div. of Murray Co. of Texas	Quincy, Mass.	76545	Mueller Electric Co.	Cleveland, Ohio			
	Buc Radio, Inc.	Willoughby, Ohio	76703	National Union	Newark, N.J.			
	Camtec Fastener Corp.	Paramus, N.J.	76894	Oak Manufacturing Co.	Crystal Lake, Ill.			
	Cardwell Condenser Corp.	Lindenhurst, L. J., N.Y.	77068	The Bendix Corp., Electrodynamics Div.	N. Hollywood, Calif.			
	Russmann Mfg. Div. of McGraw-Edison Co.	St. Louis, Mo.	77075	Pacific Metals Co.	San Francisco, Calif.			
			77221	Phonostan Instrument and Electronic Co.	South Pasadena, Calif.			

CODE LIST OF MANUFACTURERS (Cont'd)

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
83058	Carr Fastener Co.	Cambridge, Mass.	91418	Dural Materials Co.	Chicago, Ill.	97464	Industrial Retaining Ring Co.	Irrington, N. J.
83066	New Hampshire Ball Bearing, Inc.	Peterborough, N. H.	91506	Augat Inc.	Attleboro, Mass.	97539	Automatic & Precision Mfg.	Englewood, N. J.
83175	General Instrument Corp., Capacitor Div.	Darlington, S. C.	91637	Dale Electronics, Inc.	Columbus, Nebr.	97979	Reon Resistor Corp.	Yonkers, N. Y.
83148	ITT Wire and Cable Div.	Los Angeles, Calif.	91662	Elco Corp.	Willow Grove, Pa.	97983	Litton System Inc., Adler-Westrex Comm. Div.	New Rochelle, N. Y.
83186	Victory Eng. Corp.	Springfield, N. J.	91827	K F Development Co.	Redwood City, Calif.	98141	R-Tronics, Inc.	Jamaica, N. Y.
83298	Bendix Corp., Red Bank Div.	Red Bank, N. J.	91886	Malco Mfg. Co., Inc.	Chicago, Ill.	98159	Rubber Teck, Inc.	Gardena, Calif.
83315	Hubbell Corp.	Brooklyn, N. Y.	91929	Honeywell Inc., Micro Switch Div.	Freeport, Ill.	98220	Hewlett-Packard Co., Moseley Div.	Pasadena, Calif.
83330	Smith, Herman H., Inc.	Mundelein, Ill.	91961	Nahm-Bros. Spring Co.	Oakland, Calif.	98278	Microdot, Inc.	So. Pasadena, Calif.
83332	Tech Labs	Palisades Park, N. J.	92180	Tru-Connector Corp.	Peabody, Mass.	98291	Selectra Corp.	Manaroneck, N. Y.
83365	Central Screw Co.	Chicago, Ill.	92367	Elgeet Optical Co., Inc.	Rochester, N. Y.	98376	Zero Mfg. Co.	Burbank, Calif.
83501	Cavitt Wire and Cable Co. Div. of Amerace Corp.	Brookfield, Mass.	92607	Tensolite Insulated Wire Co., Inc.	Tarrytown, N. Y.	98731	General Mills Inc., Electronics Div.	Minneapolis, Minn.
83594	Burroughs Corp. Electronic Tube Div.	Plainfield, N. J.	92702	IMC Magnetics Corp.	Wesbury Long Island, N. Y.	98734	Paeco Div. of Hewlett-Packard Co.	Palo Alto, Calif.
83740	Union Carbide Corp. Consumer Prod. Div.	New York, N. Y.	92966	Hudson Lamp Co.	Kearney, N. J.	98821	North Hills Electronics, Inc.	Glen Cove, N. Y.
83777	Model Eng. and Mfg., Inc.	Huntington, Ind.	93332	Sylvania Electric Prod. Inc. Semiconductor Div.	Woburn, Mass.	98978	International Electronic Research Corp.	Burbank, Calif.
83821	Lloyd Schlags Co.	Festus, Mo.	93369	Robbins & Myers Inc.	Palisades Park, N. J.	99109	Columbia Technical Corp.	New York, N. Y.
83942	Aeromedical Inst. & Radio Co.	Lodi, N. J.	93410	Stevens Mfg. Co., Inc.	Mansfield, Ohio	99313	Varian Associates	Palo Alto, Calif.
84171	Arco Electronics Inc.	Great Neck, N. Y.	93829	G. V. Controls	Livingston, N. J.	99378	Allie Corp.	Winchester, Mass.
84396	A. J. Glessner Co., Inc.	San Francisco, Calif.	94131	General Cable Corp.	Bayonne, N. J.	99515	Marshall Ind., Capacitor Div.	Monrovia, Calif.
84411	TRW Capacitor Div.	Ogallala, Neb.	94144	Raytheon Co., Comp. Div., Ind. Comp. Operations	Quincy, Mass.	99707	Control Switch Division, Controls Co. of America	El Segundo, Calif.
84970	Saikis Tairizan, Inc.	Bloomington, Ind.	94148	Scientific Electronics Products, Inc.	Loveland, Colo.	99800	Delevan Electronics Corp.	East Aurora, N. Y.
84954	Bounton Molding Company	Bounton, N. J.	94154	Wagner Elect. Corp., Tung-Sol Div.	Newark, N. J.	99848	Wilco Corporation	Indianapolis, Ind.
85471	A. B. Boyd Co.	San Francisco, Calif.	94197	Curtiss-Wright Corp. Electronics Div.	East Paterson, N. J.	99934	Renbrandt, Inc.	Boston, Mass.
85474	R. M. Bracamonte & Co.	San Francisco, Calif.	94722	South Chester Corp.	Chester, Pa.	99942	Hoffman Electronics Corp. Semiconductor Div.	El Monte, Calif.
85660	Koiled Rods, Inc.	Hamden, Conn.	94830	Wire Cloth Products, Inc.	Bellwood, Ill.	99957	Technology Instrument Corp. of Calif.	Newbury Park, Calif.
85911	Seamless Rubber Co.	Chicago, Ill.	94682	Worcester Pressed Aluminum Corp.	Worcester, Mass.			
86197	Clifton Precision Products Co., Inc.	Clifton Heights, Pa.	94696	Magnecraft Electric Co.	Chicago, Ill.			
86579	Precision Rubber Products Corp.	Dayton, Ohio	95023	George A. Philbrick Researchers, Inc.	Boston, Mass.			
86684	Radio Corp. of America, Electronic Comp. & Devices Div.	Harrison, N. J.	95736	Allies Products Corp.	Dania, Fla.			
87034	Marco Industries	Anaheim, Calif.	95738	Continental Connector Corp.	Woodside, N. Y.			
87216	Phisco Corporation (Lansdale Division)	Lansdale, Pa.	95761	Leecraft Mfg. Co., Inc.	Long Island, N. Y.			
87473	Western Fibrous Glass Products Co.	San Francisco, Calif.	95785	National Coil Co.	Sheridan, Wyo.			
87564	Van Waters & Rogers Inc.	San Francisco, Calif.	95809	Vitramon, Inc.	Bridgeport, Conn.			
87930	Tower Mfg. Corp.	Providence, R.I.	95848	Gordos Corp.	Bloomfield, N. J.	0000F	Malco Tool and Die	Los Angeles, Calif.
88140	Culler-Hammer, Inc.	Lincoln, Ill.	95854	Methode Mfg. Co.	Rolling Meadows, Ill.	0000Z	Willow Leather Products Corp.	Newark, N. J.
88220	Gould-National Batteries, Inc.	St. Paul, Minn.	95866	Arnold Engineering Co.	Marengo, Ill.			
88698	General Mills, Inc.	Buffalo, N. Y.	95712	Dage Electric Co., Inc.	Franklin, Ind.	000AB	ETA	England
89231	Graybar Electric Co.	Oakland, Calif.	95984	Siemon Mfg. Co.	Wayne, Ill.	000BB	Precision Instrument Components Co.	Van Nuys, Calif.
89473	G. E. Distributing Corp.	Schenectady, N. Y.	95987	Wessker Co.	Chicago, Ill.			
89665	United Transformer Co.	Chicago, Ill.	96067	Huggins Laboratories	Sunnyvale, Calif.	000CS	Hewlett-Packard Co., Colorado Springs	Colorado Springs, Colorado
90179	US Rubber Co., Consumer Ind. & Plastics Prod. Div.	Passaic, N. J.	96095	Hi-Q Div. of Aeroxop Corp.	Olean, N. Y.	000MM	Rubber Eng. & Development	Hayward, Calif.
90970	Bearing Engineering Co.	San Francisco, Calif.	96096	Thoradson-Meissner Inc.	Mt. Carmel, Ill.	000NN	A "N" D Mfg. Co.	San Jose, Calif.
91146	ITT Cannon Elect. Inc., Salem Div.	Salem, Mass.	96330	Solar Manufacturing Co.	Los Angeles, Calif.	000OQ	Cooltron	Oakland, Calif.
91260	Connor Spring Mfg. Co.	San Francisco, Calif.	96341	Carlton Screw Co.	Chicago, Ill.	000WW	California Eastern Lab.	Burlington, Calif.
91345	Miller Dial & Nameplate Co.	El Monte, Calif.	96501	Excel Transformer Co.	Oakland, Calif.	000YY	S. K. Smith Co.	Los Angeles, Calif.

THE FOLLOWING HP VENDORS HAVE NO NUMBER
ASSIGNED IN THE LATEST SUPPLEMENT TO THE
FEDERAL SUPPLY CODE FOR MANUFACTURERS
HANDBOOK

0000F	Malco Tool and Die	Los Angeles, Calif.
0000Z	Willow Leather Products Corp.	Newark, N. J.
000AB	ETA	England
000BB	Precision Instrument Components Co.	Van Nuys, Calif.
000CS	Hewlett-Packard Co.,	Colorado Springs
		Colorado Springs, Colorado
000MM	Rubber Eng. & Development	Hayward, Calif.
000NN	A "N" D Mfg. Co.	San Jose, Calif.
000QQ	Cooltron	Oakland, Calif.
000WW	California Eastern Lab.	Burlington, Calif.
000YY	S. K. Smith Co.	Los Angeles, Calif.



ELECTRONIC INSTRUMENTATION SALES AND SERVICE UNITED STATES, CANADA, CENTRAL AND SOUTH AMERICA

UNITED STATES

ALABAMA

P.O. Box 4207
2003 Byrd Spring Road S.W.
Huntsville 35802
TWX 510 579-2204
Tel: (205) 881-4591

ARIZONA

4009 North Scottsdale Road
Scottsdale 85251
Tel: (602) 945-7601
TWX 910 950-1282
232 South Tucson Boulevard
Tucson 85716
Tel: (602) 623-2564
TWX 910 952-1162

CALIFORNIA

3939 Lankershim Boulevard
North Hollywood 91604
Tel: (213) 877-1282
TWX 910 499-2170
1101 Embarcadero Road
Palo Alto 94303
Tel: (415) 327-6500
TWX 910 373-1280

2591 Carlsbad Avenue
Sacramento 95821
Tel: (916) 482-1463
TWX 910 367-2092

1055 Shafter Street
San Diego 92106
Tel: (714) 223-8103
TWX 910 335-2000

COLORADO

7965 East Prentice
Englewood 80110
Tel: (303) 771-3455
TWX 910 935-0705

CONNECTICUT

508 Tolland Street
East Hartford 06108
Tel: (203) 289-9394
TWX 710 425-3416
111 East Avenue
Norwalk 06851
Tel: (203) 853-1251
TWX 710 468-3750

DELAWARE

3941 Kennett Pike
Wilmington 19807
Tel: (302) 655-6161
TWX 510 666-2214

FLORIDA

Suite 106
9999 N.E. 2nd Avenue
Miami Shores 33138
Tel: (305) 758-3626
TWX 810 848-7262
P.O. Box 20007
Herndon Station 32814
621 Commonwealth Avenue
Orlando
Tel: (305) 841-3970
TWX 810-850-0113
P.O. Box 8128
Madera Beach 33708
410 150th Avenue
St. Petersburg
Tel: (813) 391-0211
TWX 810-863-0366

GEORGIA

3110 Maple Drive N.E.
Atlanta 30305
Tel: (404) 233-1141
TWX 810-751-3283

ILLINOIS

5500 Howard Street
Skokie 60076
Tel: (312) 677-0400
TWX 910-223-3613

INDIANA

4002 Meadows Drive
Indianapolis 46205
Tel: (317) 546-4891
TWX 810-341-3263

LOUISIANA

P.O. Box 856
1942 Williams Boulevard
Kenner 70062
Tel: (504) 721-6201
TWX 810-955-5524

MARYLAND

6707 Whitestone Road
Baltimore 21207
Tel: (301) 944-5400
TWX 710-862-0850
P.O. Box 727
Twinbrook Station 20851
12303 Twinbrook Parkway
Rockville
Tel: (301) 427-7560
TWX 710 828-9684

MASSACHUSETTS

Middlesex Turnpike
Burlington 01803
Tel: (617) 272-9000
TWX 710-332-0382

MICHIGAN

24315 Northwestern Highway
Southfield 48076
Tel: (313) 353-9100
TWX 810-232-1532

MINNESOTA

2459 University Avenue
St. Paul 55114
Tel: (612) 646-7881
TWX 910-563-3734

MISSOURI

9208 Wyoming Place
Kansas City 64114
Tel: (816) 333-2445
TWX 910-771-2087
2812 South Brentwood Blvd.
St. Louis 63144
Tel: (314) 644-0220
TWX 910-760-1670

NEW JERSEY

Crystal Brook Prof. Bldg.
Route 35
Eatontown
Tel: (201) 747-1060
391 Grand Avenue
Englewood 07631
Tel: (201) 567-3933
TWX 710-991-9707

NEW MEXICO

P.O. Box 8366
Station C 87108
6501 Lomas Boulevard N.E.
Albuquerque
Tel: (505) 255-5586
TWX 910-989-1665
156 Wyatt Drive
Las Cruces 88001
Tel: (505) 526-2486
TWX 910-983-0550

NEW YORK

1219 Campville Road
Endicott 13760
Tel: (607) 754-0050
TWX 510-252-0890

NEW YORK

236 East 75th Street
New York 10021
Tel: (212) 879-2023
TWX 710-581-4376

NEW YORK

82 Washington Street
Poughkeepsie 12601
Tel: (914) 454-7330
TWX 510-248-0012

NEW YORK

39 Saginaw Drive
Rochester 14623
Tel: (716) 473-9500
TWX 510-253-5981

NEW YORK

1025 Northern Boulevard
Roslyn, Long Island 11576
Tel: (516) 869-8400
TWX 510-223-0811

NEW YORK

5858 East Molloy Road
Syracuse 13211
Tel: (315) 454-2486
TWX 710-541-0482

NORTH CAROLINA

P.O. Box 5187
1923 North Main Street
High Point 27262
Tel: (919) 882-6873
TWX 510-926-1516

OHIO

5579 Pearl Road
Cleveland 44129
Tel: (216) 884-9209
TWX 810-421-8500

OHIO

1250 West Dorothy Lane
Dayton 45409
Tel: (513) 298-0351
TWX 810-459-1925

OREGON

2737 S.W. Corbett Avenue
Portland 97201
Tel: (503) 228-5107

PENNSYLVANIA

Park Place Office Building
Camp Hill
Tel: (717) 737-6791

PENNSYLVANIA

Monroe Complex
Moss Side Boulevard
Monroeville 15146
Tel: (412) 271-0724
TWX 710-797-3650
144 Elizabeth Street
West Conshohocken 19428
Tel: (215) 248-1600, 828-6200
TWX 510-660-8715

TEXAS

P.O. Box 7166
3605 Inwood Road
Dallas 75209
Tel: (214) 357-1881
TWX 910-861-4081
P.O. Box 22813
4242 Richmond Avenue
Houston 77027
Tel: (713) 667-2407
TWX 910-881-2645
GOVERNMENT CONTRACT OFFICE
225 Billy Mitchell Road
San Antonio 78226
Tel: (512) 434-4171
TWX 910-871-1170

UTAH

2890 South Main Street
Salt Lake City 84115
Tel: (801) 486-8166
TWX 910-925-5681

VIRGINIA

P.O. Box 6514
2111 Spencer Road
Richmond 23230
Tel: (703) 282-5451
TWX 710-956-0157

WASHINGTON

11656 N.E. Eighth Street
Bellevue 98004
Tel: (206) 454-3971
TWX 910-443-2303

FOR AREAS NOT LISTED, CONTACT:

Hewlett-Packard
1501 Page Mill Road
Palo Alto, California 94304
Tel: (415) 326-7000
TWX 910-373-1267
Telex: 34-8461

CANADA

BRITISH COLUMBIA

Hewlett-Packard (Canada) Ltd.
2184 West Broadway
Vancouver
Tel: (604) 738-7520
TWX 610-922-5050

ONTARIO

Hewlett-Packard (Canada) Ltd.
880 Lady Ellen Place
Ottawa 3
Tel: (613) 722-4223
TWX 610-562-1952

QUEBEC

Hewlett-Packard (Canada) Ltd.
1415 Lawrence Avenue West
Toronto
Tel: (416) 249-9196
TWX 610-492-2382

QUEBEC

Hewlett-Packard (Canada) Ltd.
275 Hymus Boulevard
Pointe Claire
Tel: (514) 697-4232
TWX 610-422-3022
Telex: 01-2819

FOR AREAS NOT LISTED, CONTACT:

Hewlett-Packard Inter-Americas
1501 Page Mill Road
Palo Alto, California 94304
Tel: (415) 326-7000
TWX 910-373-1267
Telex: 034-8461
Cable: HEWPACK Palo Alto

CENTRAL AND SOUTH AMERICA

ARGENTINA

Mauricio A. Suárez
Telecomunicaciones
Carlos Calvo 224
Buenos Aires
Tel: 30-6312 34-9087

BRAZIL

Ciental, Importação e
Comércio Ltda.
Rua Cleto Campelo, 44 - 5º andar
Recife
Ciental Importação e
Comércio Ltda.
Avenida 13 de Maio 13-22º andar
Rio de Janeiro, G.B.
Ciental Importação e
Comércio Ltda.
Rua Des. Eliseu Guilherme, 62
São Paulo 8
Tel: 70 2118

CHILE

Héctor Calcagni
Casilla 13942
Santiago
Tel: 490-505, 393-119

COSTA RICA

Lic. Alfredo Gallagos Gudián
Apartado 3243
San José
Tel: 21-86-13

EL SALVADOR

Electrónica
Apartado Postal 1589
San Salvador
Tel: 4681

GUATEMALA

Olander Associates Latin America
Apartado 1226
7a. Calle, 0-22, Zona 1
Guatemala City
Tel: 22812

MEXICO

Hewlett-Packard Mexicana,
S.A. de C.V.
Eugenia 408, Dept. 1
Mexico 12, D.F.
NICARAGUA
Roberto Terán G.
Edificio Terán
Apartado Postal 689
Managua
Tel: 3451, 3452

PANAMA

Electronico Balboa, S.A.
P.O. Box 4929
Panama City
Tel: 3-0833
PERU
Fernando Ezeta B
Av. Petit Thouars 4719
Casilla 3061
Lima
Tel: 50346

PUERTO RICO

San Juan Electronics, Inc.
Ponce de León No. 150, Stop 3
Pta. de Tierra Sta.
San Juan
Tel: (809) 725-3342

VENEZUELA

Citec, C.A.
Edif. Arisan-Of. #4
Avda. Francisco de Miranda
Apartado del Este 10934 Chacabito
Caracas
Tel: 71-88 05

FOR AREAS NOT LISTED, CONTACT:

Hewlett-Packard Inter-Americas
1501 Page Mill Road
Palo Alto, California 94304
Tel: (415) 326-7000
TWX 910-373-1267
Telex: 034-8461
Cable: HEWPACK Palo Alto



ELECTRONIC INSTRUMENTATION SALES AND SERVICE
EUROPE, AFRICA, ASIA, AUSTRALIA

EUROPE

AUSTRIA
Unilabor HmbH
Wissenschaftliche Instrumente
Rummelhardgasse 6/3
P.O. Box 33
Vienna IX/71
Tel: 426 181

BELGIUM
Hewlett-Packard Benelux S.A.
20-24 rue de l'Hôpital
Brussels
Tel: 11 22 20

DENMARK
Tage Olsen A/S
Rennegade 1
Copenhagen Ø
Tel: 29 48 00

FINLAND
INTO O/Y
Merittullinkatu 11.
P.O. Box 10153
Helsinki 10
Tel: 61 133

FRANCE
Hewlett-Packard France
2 rue Tête d'Or
Lyon, 6 - Rhône
Tel: 52 35 66
Hewlett-Packard France
150 Boulevard Massena
Paris 13e
Tel: 707 97 19

GERMANY
Hewlett-Packard Vertriebs-GmbH
Lietzenburger Strasse 30
1 Berlin W 30
Tel: 24 86 36

Hewlett-Packard Vertriebs-GmbH
Herrenberger Strasse 110
703 Böblingen, Württemberg
Tel: 6971

Hewlett-Packard Vertriebs-GmbH
Achenbachstrasse 15
4 Düsseldorf 1
Tel: 68 52 58

Hewlett-Packard Vertriebs-GmbH
Kurhessenstrasse 95
6 Frankfurt 50
Tel: 52 00 36

Hewlett-Packard Vertriebs-GmbH
Beim Strohhaue 26
2 Hamburg 1
Tel: 24 05 52

Hewlett-Packard Vertriebs-GmbH
Reginfriedstrasse 13
8 Munich 9
Tel: 49 51 21

GREECE
Kostos Karayannis
18, Ermou Street
Athens 126
Tel: 230 301

IRELAND
Hewlett-Packard Ltd.
224 Bath Road
Slough, Bucks, England
Tel: Slough 28406-9, 29486-9

ITALY
Hewlett-Packard Italiana S.p.A.
Viale Lunigiana 46
Milan
Tel: 69 15 84

Hewlett-Packard Italiana S.p.A.
Palazzo Italia
Piazza Marconi 25
Rome - Eur
Tel: 591 2544

NETHERLANDS
Hewlett-Packard Benelux, N.V.
de Boelelaan 1043
Amsterdam, Z.2
Tel: 42 77 77

NORWAY
Morgenstjerne & Co. A/S
Ingeniørfirma
6 Wessels Gate
Oslo
Tel: 20 16 35

PORTUGAL
Telectra
Rua Rodrigo da Fonseca 103
P.O. Box 2531
Lisbon 1
Tel: 68 60 72

SPAIN
Ataio Ingenieros
Urgel, 259
Barcelona, 11
Tel: 230-69-88

Ataio Ingenieros
Enrique Larreta 12
Madrid, 16
Tel: 235 43 44

SWEDEN
HP Instrument AB
Hagakersgatan 7
Mölnådal
Tel: 031 - 27 68 00
HP Instrument AB
Centralvägen 28
Selma
Tel: 08 - 83 08 30

SWITZERLAND
HEWPAK AG
Zürcherstrasse 20
8952 Schlären
Zürich
Tel: (051) 98 18 21

TURKEY
Telekom Engineering Bureau
P.O. Box 375 - Galata
Istanbul
Tel: 49 40 40

UNITED KINGDOM
Hewlett-Packard Ltd.
224 Bath Road
Slough, Bucks
Tel: Slough 28406-9, 29486-9

YUGOSLAVIA
Belram S.A.
83 avenue des Mimosas
Brussels 15, Belgium
Tel: 35 29 58

FOR AREAS NOT LISTED, CONTACT:
Hewlett-Packard S.A.
54 Route des Acacias
Geneva, Switzerland
Tel: (022) 42 81 50
Telex: 2.24.86
Cable: HEWPAKSA Geneva

AFRICA, ASIA, AUSTRALIA

AUSTRALIA
Sample Electronics (Vic) Pty., Ltd.
22-26 Weir Street
Glen Iris S.E. 6
Melbourne, Victoria
Tel: 20-1371 (4 lines)
Sample Electronics
(N.S.W.) Pty. Ltd.
4 Grose Street
Glebe, New South Wales
Tel: 69-6338

ETHIOPIA
African Salespower & Agency
Private Ltd., Co.
P. O. Box 718
Addis Ababa
Tel: 44090

INDIA
The Scientific Instrument Co., Ltd
6, Tej Bahadur Sapru Road
Allahabad 1
Tel: 2451
The Scientific Instrument Co., Ltd
240, Dr. Dadabhai Naoroji Road
Bombay 1
Tel: 26-2642

The Scientific Instr. Co., Ltd.
11, Esplanade East
Calcutta 1
Tel: 23-4129
The Scientific Instrument Co., Ltd.
30, Mount Road
Madras 2
Tel: 86339
The Scientific Instrument Co., Ltd.
B-7, Ajmeri Gate Extn.
New Delhi 1
Tel: 27-1053

IRAN
Telecom, Ltd.
P. O. Box 1812
Teheran
Tel: 43850, 48111

ISRAEL
Electronics & Engineering
Division of Motorola Israel Ltd.
16, Kremenetski Street
Tel-Aviv
Tel: 35021/2/3

JAPAN
Yokogawa-Hewlett-Packard Ltd.
Shinhankyu Building
No. 8, Umeda
Kita-ku, Osaka City
Tel: 313-0091

Yokogawa-Hewlett-Packard Ltd.
Ito Building
No. 59, Kotori-cho
Nakamura-ku, Nagoya City
Tel: 551-0215

Yokogawa-Hewlett-Packard Ltd.
Ohashi Building
No. 59, I-chome, Yoyogi
Shibuya-ku, Tokyo
Tel: 370-2281

KENYA
R. J. Tilbury Ltd.
P. O. Box 2754
Suite 517/518
Hotel Ambassadeur
Nairobi
Tel: 25670, 26803, 68206

KOREA
American Trading Co., Korea, Ltd.
Seoul P. O. Box 1103
112-35 Sokong-Dong
Jung-ku, Seoul
Tel: 3.7049, 3.7613

LEBANON
Constantin E. Macridis
Clemenceau Street
Clemenceau Center
Beirut
Tel: 220846

NEW ZEALAND
Sample Electronics (N.Z.) Ltd.
8 Matipo Street
Onehunga S.E. 5
Auckland
Tel: 667-356

PAKISTAN (EAST)
Mushko & Company, Ltd.
Ziraf Chambers
31, Jinnah Avenue
Dacca
Tel: 80058

PAKISTAN (WEST)
Mushko & Company, Ltd.
Oosman Chambers
Victoria Road
Karachi 3
Tel: 51027, 52927

SOUTH AFRICA
F. H. Flanter & Co. (Pty.), Ltd.
Rosella House
Buitencingle Street
Cape Town
Tel: 3-3817

F. H. Flanter & Co. (Pty.), Ltd.
104 Pharmacy House
80 Jorissen Street
Braamfontein, Johannesburg
Tel: 724-4172

TAIWAN
Hwa Sheng Electronic Co., Ltd.
P. O. Box 1558
21 Nanking West Road
Taipei
Tel: 46076, 45936

THAILAND
The International
Engineering Co., Ltd.
P. O. Box 39
614 Sukhumvit Road
Bangkok
Tel: 913460-1-2

FOR AREAS NOT LISTED, CONTACT:
Hewlett-Packard Export Marketing
1501 Page Mill Road
Palo Alto, California 94304
Tel: (415) 326-7000
Telex: 034-8461
Cable: HEWPAK Palo Alto



MANUAL BACKDATING CHANGES

MODEL 313A

TRACKING OSCILLATOR

-hp- Part No. 00313-90001

Serials Prefixed: 709-

This manual backdating sheet makes this manual applicable to earlier instruments. Instrument-component values that differ from those in the manual, yet are not listed in the backdating sheet, should be replaced using the part number given in the manual.


Instrument Serial Prefix	Make Manual Changes	Instrument Serial Prefix	Make Manual Changes
709-00151 and below	1		

CHANGE #1

Change the part numbers of the mechanical parts as shown below. All other parts are the same as those listed in Table 6-1.

MP-16 00313-23701
 MP-20 00313-23601
 MP-22 1500-0751

MP-23 5020-0237
 MP-30 5040-0452
 MP-41 5020-0354

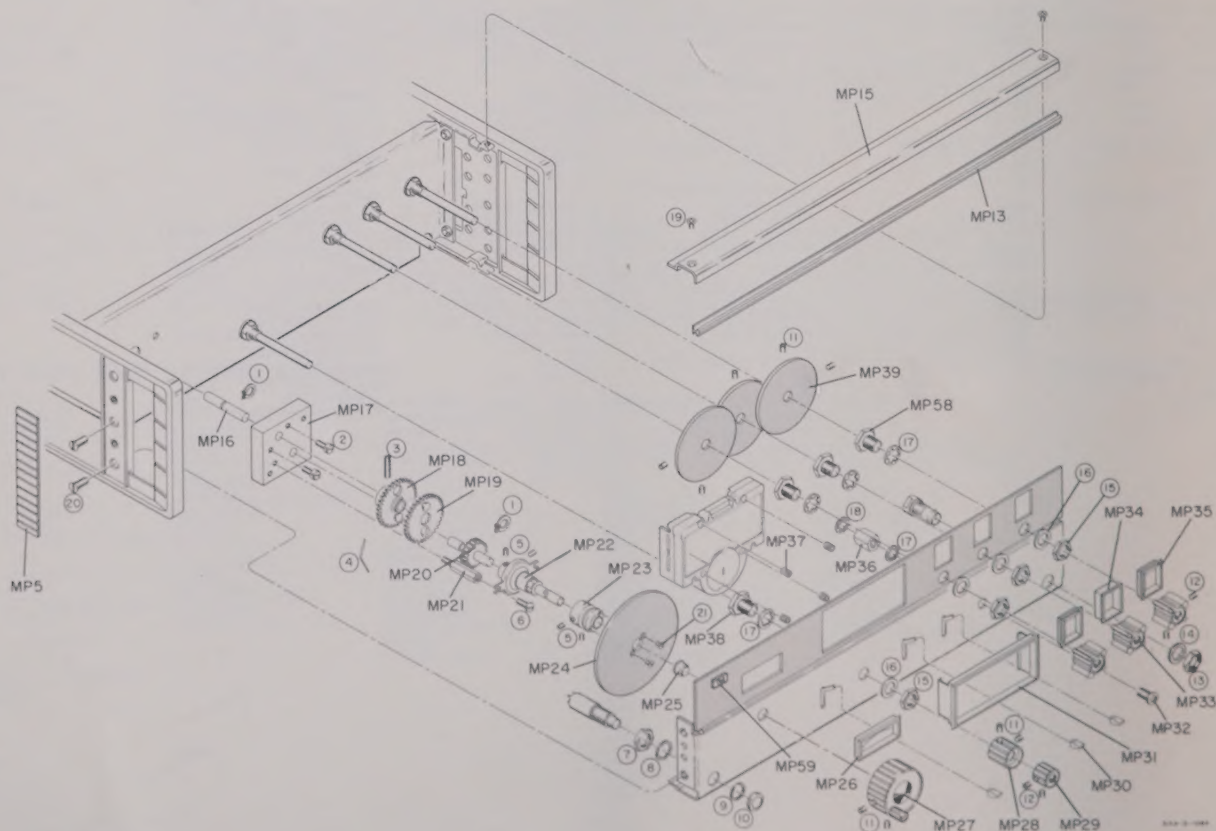



MANUAL CHANGES

MODEL 313A

TRACKING OSCILLATOR

Manual Serial Prefixed: 709-
-hp- Part No. 00313-90000

Instrument Serial Number

Make Manual Changes

Instrument Serial Number

Make Manual Changes

ALL

ERRATA

709-

1

709-00151 and above

2

709-00125 and above

3

ERRATA:

Page 3-5, Paragraph 3-13,

Delete entire last sentence.

Substitute: To perform this modification, disconnect the wires connected to J10, pin 14 and J10 pin 9. Connect the wire removed from pin 14 to pin 9 and connect the wire removed from pin 9 to pin 14.

Page 7-19/7-20, Figure 7-8,

Delete connection between junction of R44-R45 and ground.

CHANGE #1:

Page 6-14, Table 6-1,

Add: A12R8, 0757-0280, R: fxd, 1000 ohms, 1%, 1/8 W.

Page 6-18, Table 6-1,

Add: 00313-04104, Insulator, Attenuator

Add: 8120-0229, Cable, Coax 1-1/4"

Change MP-30 from: Part No. 5040-0452

to: Part No. 0370-0432

Change MP-22 from: Part No. 1500-0751

to: Part No. 1500-0783

Change MP-46 00313-04103 TQ from 1 to 2

CHANGE #2

Page 6-5 and Page 6-17, Table 6-1,

Delete: MP-23, 5020-0237, Coupler, Straight

Delete: MP-60, 5020-0237, Coupler, Straight

Change MP-41 from: 5020-0354, Shaft, 4-1/2"

to: 5020-0355, Shaft, 5-1/8"

Change MP-20 from: 00313-23601, Shaft, 1-5/8"

to: 00313-23602, Shaft and Gear, 2-7/8"

Delete: MP-16, 00313-23701, Shaft, 1-5/8"

Page 6-12, Table 6-1, and Page 7-19/7-20, Figure 7-8,

Change A8R47 and A8R48 from: Part No. 0683-1025, 1000 ohms

to: Part No. 0757-0413, 392 ohms

